

SAFETY WARNINGS & EQUIPMENT INSPECTION

Owners and installers please note these safety warnings and make use of this checklist on a regular schedule.

Follow installation instructions when erecting equipment.

Equipment should be installed on a soft, resilient, energy absorbing ground surface in accordance with ASTM and CPSC specifications. NEVER install play equipment on concrete or asphalt. A fall on a hard surface can result in serious injury to the user.

Never place equipment in conflicting traffic patterns.

Ground surfaces around equipment should be restored as needed. Concrete footings should never be exposed. Surface depth should comply with ASTM and CPSC specifications.

Check for and repair damage caused by wear or vandalism, a major factor in injury causing situations.

Test overall stability and rigidity of all play equipment. Check for proper assembly, installation, and ground anchoring.

All protruding bolts should be covered or cut off and finished smooth. Sharp edges on pipes should be capped or removed. Check for bent, broken, or severely worn pipe, and replace.

All equipment should be free of rust and repainted whenever necessary to deter rusting.

We provide our customers with layout sheets and installation instructions. Please keep on file the specifications sheet that contains the listing of every part used.

Never add components not intended for use with this product.

Regular maintenance is necessary in this and all park and recreational equipment to insure the safety of the user.

Note: Proper maintenance of equipment requires regular tightening of all bolts, nuts, and setscrews.

Note: Regular checking of all parts, castings, etc. should be made. If a part is broken or worn, it should be replaced immediately.

Check to be sure all fittings are tight and that bars and pipes do not move.

Replace all worn S-hooks. S-hooks must be completely closed. Failure to close S-hooks can result in serious injury to the user. NEVER reuse S-hooks.

Test for free movement of swing hanger and other moving attached parts.

Check for worn chains and replace them. Replace worn or damaged belt seats.

A soft resilient surface should be placed under all swings extending at least twice the height of the top rail both front and back. NEVER install play equipment on asphalt or concrete.