

CAUTION: Turn off electricity at circuit breaker before working on evaporative cooler.

Para instrucciones en español visite: www.dialmfg.com/docs/6693.pdf

Replacement of Bearing and Cushion on Spider Arm Bearing Assemblies:

1. Remove old bearing ball and cushion from spider arm support brackets:
 - a. Rotate bearing ball sideways 90° (Fig. 1).
 - b. Roll bearing ball out from bottom of support (Fig. 2).
 - c. Remove old cushion.

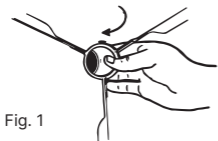


Fig. 1

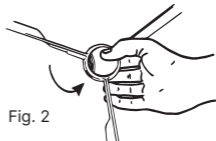


Fig. 2

2. Install new cushion into spider arm support.
3. Install new bearing ball by reversing procedure of step 1 above.
Use liquid dishwashing soap as a lubricant
4. Fill bearing oil reservoir with SAE #20 non-detergent oil if needed.

IMPORTANT: For normal daytime cooler operation, refill bearing oil reservoir every 60 days with Dial Zoom Spout Cooler Oil, or SAE #20 non-detergent oil. For constant daytime and nighttime operation, oil every 30 days.

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

⚠ ADVERTENCIA: Cáncer y Daño Reproductivo - www.P65Warnings.ca.gov.