



Ice Cub™ Ice Shaving Machine OPERATING MANUAL



SAFETY PRECAUTIONS

GENERAL SAFETY PRECAUTIONS

 **WARNING!! KEEP OUT OF REACH OF CHILDREN!
MACHINE CONTAINS SHARP BLADES AND POINTS!
DANGER! RISK OF SERIOUS INJURY!**

CAUTION! SHAVING BLADE IS EXTREMELY SHARP!

Close shaving blade when not in use. Lower blade plate against blade when not in use. Keep hands, fingers and all body parts away from the blade at all times. Contact with the blade can result in risk of serious injury!

DO NOT TOUCH SHAVING BLADE.

CAUTION! BLADE PLATE IS EXTREMELY SHARP!

Lower blade plate against blade when not in use. Keep hands, fingers and all body parts away from the blade plate at all times.

DO NOT PLACE OR CATCH HANDS OR FINGERS BETWEEN BLADE PLATE AND BLADE. Risk of crushing or serious injury!
DO NOT TOUCH SHAVING BLADE PLATE.

NEVER ATTEMPT ANY MAINTENANCE OR CLEANING WHILE MACHINE IS ON!

Always turn the **Power Switch** to **OFF**, then unplug machine from outlet before cleaning, moving or maintaining.

USE EXTREME CAUTION WHEN CLEANING SHAVING BLADE OR BLADE PLATE.

BE SURE MACHINE IS PLUGGED INTO A PROPERLY GROUNDED OUTLET WHOSE ELECTRICAL OUTPUT MATCHES THE REQUIREMENTS OF THIS MACHINE.

NEVER remove or modify grounding pin; do not use 3-prong adapters. **DO NOT** use with power strips. If using an extension cord, use the shortest cord possible. Great Northern Popcorn Company is not liable for damages or injuries resulting from the use of extension cords or power strips.

DO NOT FORCE OR USE EXCESSIVE PRESSURE ON THE HANDLES. Doing so will shorten the life of your machine and may damage the blade or blade plate.



ICE CUB ICE SHAVING MACHINE

- ⚡ Heavy Duty Stainless Steel Blade
- ⚡ Blade Adjustment Knob for Shaving Thickness Control
- ⚡ Convenient Ice Receptacle
- ⚡ Shaves Over 300lbs. Ice per Hour
- ⚡ 1/3HP/1720RPM
- ⚡ 6Amps
- ⚡ Easy to Setup and Operate
- ⚡ 110V/60Hz

SPECIFICATIONS

Weight: 48.5lbs.

Dimensions: 29”H x 21-1/4”L x 13.3”W

Voltage: 110V/60Hz/6Amps/200KW

CUSTOMER SERVICE

Customer service and product support are available on line at www.greatnorthernpopcorn.com.

WARRANTY AND RETURN POLICY

All Great Northern Popcorn Company ice shavers are warrantied against defects in material and workmanship for a period of one year for residential and personal use under normal conditions. Warranty is limited to replacement parts.

Our return policy allows 30 days from the date of delivery to return products, provided it is new, unused and in the original packaging as received. We highly recommend that the buyer thoroughly inspect the purchased product before using it. We charge a 20% restocking charge on all returned items. Return shipping is the responsibility of the buyer. We cannot accept returns for any reason after 30 days from the date of delivery. A credit will be issued after the item is inspected and accepted.

All shipping damages must be claimed with the designated shipper. Check the shipping carton for damage before signing the bill of lading.

If an item is opened and deemed to be defective within 30 days from the date of delivery, please contact us at www.greatnorthernpopcorn.com for return instructions. A Great Northern Popcorn Company RMA is required when returning defective merchandise. When returning your order please include a copy of your order number with date purchased, your Great Northern Popcorn Company RMA and the reason for the return.

Warranty shall not apply to: products which are used for a purpose other than which they were designed for or which have been altered in any way that would be detrimental to the performance or life of the product. Misapplication, misuse or negligence will revoke the warranty.

OPERATION MANUAL

HOW TO USE YOUR ICE CUB™

IMPORTANT!

Always use caution when operating ice shaving machines! Blade and blade plate are sharp and can cause serious injury if used improperly.

KEEP HANDS, FINGERS AND BODY PARTS WELL AWAY FROM MACHINE WHEN POWER IS ON!

DO NOT OPERATE OR LEAVE ON AROUND CHILDREN.

To use your Ice Cub™:

1. First, screw in the three rotary handle arms onto the blade plate control dial (shown in #3 of the picture below). Confirm that the **Power Switch** is **OFF** before plugging machine into outlet (Fig. 1, #2).
2. With Power **OFF** and shaver plugged in to an appropriate grounded outlet with matching power supply, turn handles (Fig. 1, #3) counter-clockwise to raise the blade plate up (Fig. 1, #7). **CAUTION! Blade Plate and Blade are extremely sharp! Keep hands well away!**
3. Once blade plate is in its highest position, place ice block in the receptacle space (Fig. 1, #4). Make sure the blade plate will contact the center of the ice block when lowered. Next, lower the blade plate gently by turning the handle clockwise until the blade plate contacts the ice and holds it in place. **DO NOT USE EXCESSIVE FORCE AS YOU MAY DAMAGE THE BLADE, BLADE PLATE OR YOUR MACHINE.**

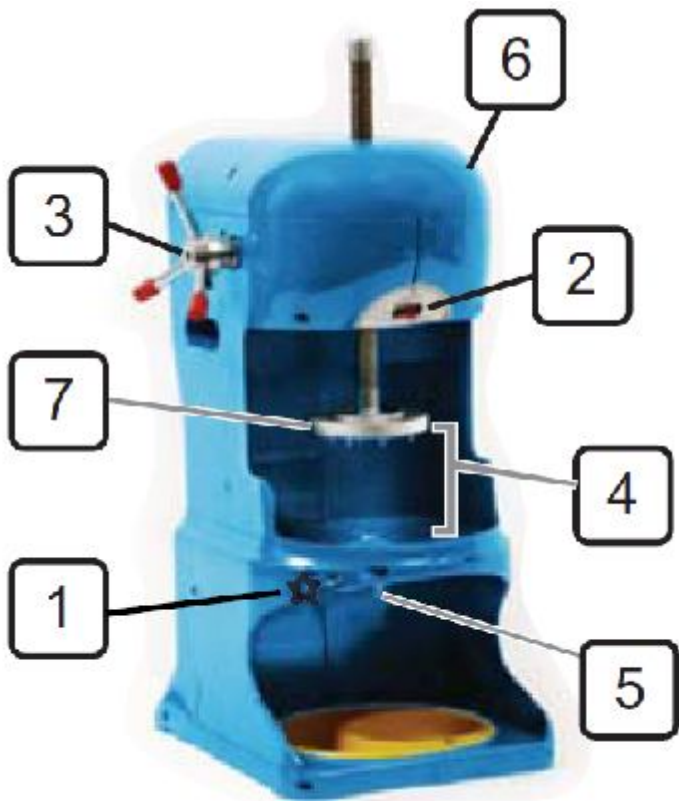


Figure 1

blade plate gently by turning the handle clockwise until the blade plate contacts the ice and holds it in place. **DO NOT USE EXCESSIVE FORCE AS YOU MAY DAMAGE THE BLADE, BLADE PLATE OR YOUR MACHINE.**

4. Once block is centered and held by the blade plate, clear hands, fingers, etc. away from the blade plate, ice block and blade and switch the Power to **ON**. Ice block will rotate as it is shaved.

5. To adjust the thickness of the ice being shaved, turn the adjustment knob (Fig. 1, #1). Turn clockwise to tighten and produce thinner ice, turn counter-clockwise to loosen and produce thicker ice.



Customer Service at:
www.greatnorthernpopcorn.com