


USE AND CARE GUIDE

PULL-DOWN KITCHEN FAUCET

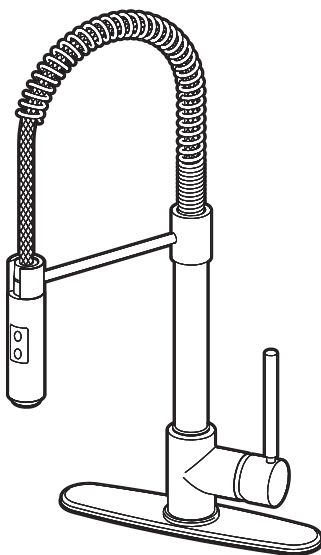

Questions, problems, missing parts? Before returning to the store,
call Glacier Bay Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday

1-855-HD-GLACIER

HOMEDEPOT.COM/GLACIERBAY

THANK YOU

We appreciate the trust and confidence you have placed in Glacier Bay through the purchase of this faucet. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Glacier Bay!

Table of Contents

Table of Contents	2	Package Contents	4
Safety Information	2	Installation	5
Warranty	2	Replacing the Cartridge	6
Limited Lifetime Warranty	2	Replacing the Spout O-Rings	6
Pre-Installation	3	Replacing the No-Return Valve	6
Planning Installation	3	Cleaning the Aerator	6
Temperature and Pressure Specifications	3	Maintenance	6
Tools Required	3	Care and Cleaning	6

Safety Information

1. Always turn off the water supply before removing the existing faucet or replacing any part of the faucet. Open the faucet handle to relieve water pressure and ensure that water is completely shut off.
2. Cover the drain in your sink to avoid losing parts.



WARNING: Avoid contact of plastic parts with plumber's putty, pipe dope, or any other oil-based compound.

Warranty

LIMITED LIFETIME WARRANTY

Glacier Bay products are manufactured with superior quality standards and workmanship and are backed by our limited lifetime warranty. Glacier Bay products are warranted to the original consumer purchaser to be free of defects in materials or workmanship. We will replace **FREE OF CHARGE** any product or parts that proves defective. Simply, return the product / part to any of The Home Depot retail locations or call 1-855-HD-Glacier (1-855-434-5224) to receive the replacement item. Proof of purchase (original sales receipt) from the original consumer purchaser must be made available for all Glacier Bay warranty claims.

This warranty excludes incidental/inconsequential damages and failures due to misuse, abuse or normal wear and tear. This warranty excludes all industrial, commercial & business usage, whose purchasers are hereby, extended a five year limited warranty from the date of purchase, with all other terms of this warranty applying except the duration of warranty.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state and province to province.

Contact the Customer Service Team at 1-855-HD-GLACIER or visit HOMEDEPOT.COM/GLACIERBAY.

PLANNING INSTALLATION


Before you begin to install this product, ensure that all parts are present. Compare parts with the package contents list. If any part is missing or damaged, do not attempt to install the product. Contact customer service for replacement parts.

Always turn off the water supply before you remove or replace the existing faucet. Turn off the cold and hot water lines and turn on the old faucet to release built-up pressure.

TEMPERATURE AND PRESSURE SPECIFICATIONS


Water Supply	Recommended	Max.	Min.
Hot Water Temperature	65°C (150°F)	80°C (175°F)	15°C (60°F)
Working Pressure	3 BAR (45 PSI)	5 BAR (75PSI)	0.5 BAR (7PSI)

TOOLS REQUIRED

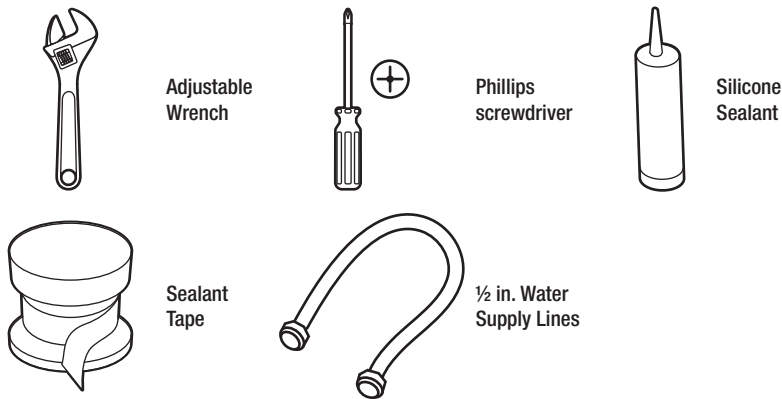

Pre-Installation (continued)

PACKAGE CONTENTS

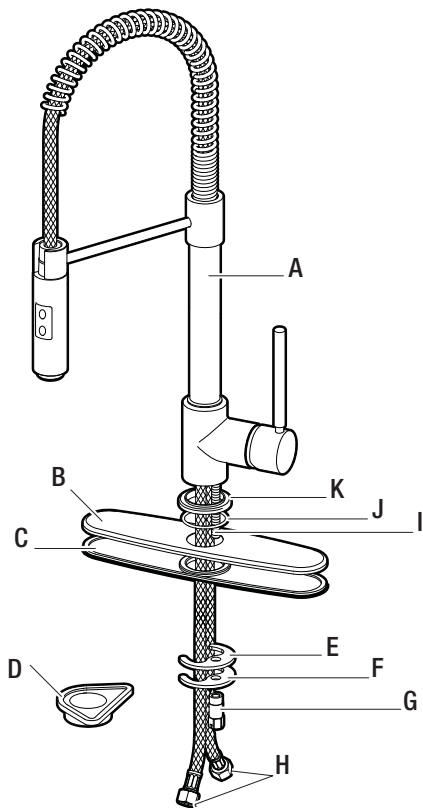


Part	Description	Quantity
A	Faucet body	1
B	Deckplate	1
C	Baseplate	1
D	Triangular flange	1
E	Shaped seal	1
F	Flange	1
G	Stay	1
H	Supply tubes (preassembled to faucet body (A))	1
I	Threaded pin	1
J	O-ring (preassembled to faucet body (A))	1
K	Base ring (preassembled to faucet body (A))	1

Installation


1 Turning off the water supply and preparing the faucet body

- Shut off the water supply.
- If necessary, remove the old faucet and clean off the installation surface.
- Screw the threaded pin (I) into the faucet body (A).

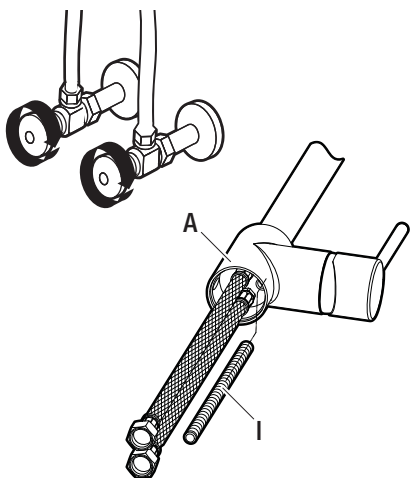


2 Installing the faucet

- **If installing the deckplate:** Place a bead of silicone sealant (not included) around the base of the baseplate (C). Place the deckplate (B) and baseplate (C) over the installation holes in the sink.
- Position the base ring (K) and ensure the O-ring (J) is also in the correct position, centered over the sink hole.
- Place the faucet body (A) over the installation hole in the sink and insert the faucet body (A) into the hole and through the sink.

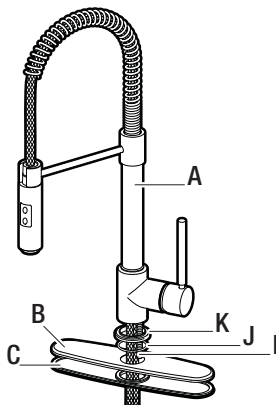


3 Securing the faucet

- Slip the triangular flange (D), shaped seal (E) and the flange (F) onto the threaded pin (I) and secure the faucet in position using the stay (G).
- Connect the left supply tube (H) to the hot water supply and the right supply tube (H) to the cold water supply.

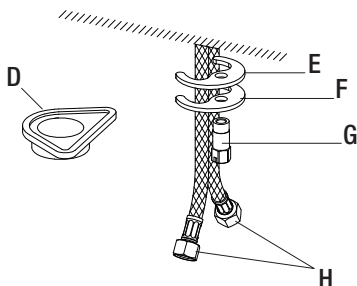

4 Checking for leaks

- Turn on the water supply and check all of the water connections for leaks.
- If you discover any leaks, check the connections to ensure they are installed properly.
- Run the hot and cold water for approximately 1 minute each to flush the lines.

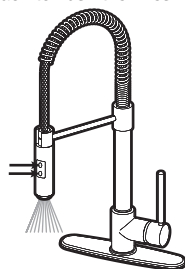

Maintenance

REPLACING THE CARTRIDGE


- Shut off the main water supply.
- Unscrew the lever (1) and the grub screw (2) to remove the handle.
- Unscrew the cap (4) and the locking nut (5) to remove the cartridge (7).
- Unscrew the lever holder (6) and mount it on the new cartridge.
- To re-assemble proceed in the reverse order, ensuring the surfaces in contact with the sealing washers are well cleaned. Close the nut (5) securely to allow for proper sealing and allow the handle to turn smoothly.

REPLACING THE SPOUT O-RINGS

- Unscrew the body screw (9) and remove the spout from the faucet body (8).
- Replace the O-rings (10) and the ring (11) if necessary.
- To re-assemble, proceed in reverse order, ensuring the surfaces in contact with the sealing washers are clean. Before screwing the body screw (9), check that the ring (11) is in the proper position to receive the screw.

REPLACING THE NO-RETURN VALVE

- Unscrew the spray (14) from the spray hose, remove the washer (12) and with a screwdriver, remove the no-return valve (13).
- To re-assemble, proceed in the reverse order, placing the no-return valve (13) as indicated, place the washer (12) correctly in the flexible hose and screw the spray (14).

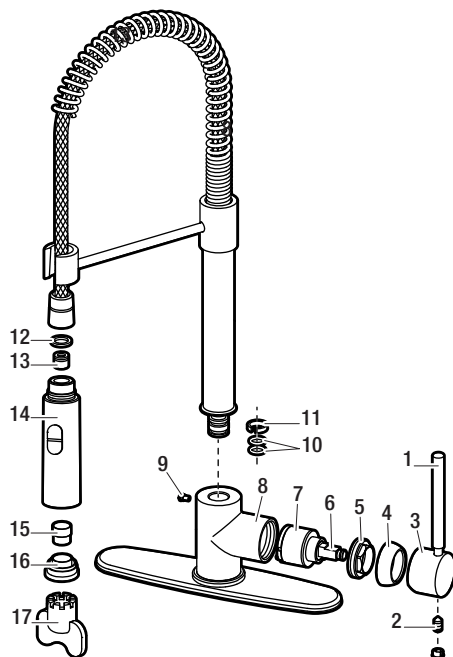

CLEANING THE AERATOR

Periodically clean the aerator in order to avoid build-up of dirt and limestone which can gradually limit the water flow. To disassemble the aerator (17), unscrew it and clean the filter (16) from all impurities, reassemble proceeding in the reverse order, making sure the gasket (15) is correctly placed.

Care and Cleaning

- Before cleaning, make sure the tap is cold (heat wears the surface of the tap down).
- Do not use products containing acids or corrosive substances.
- Wipe the tap daily with a soft cloth. Do not use steel wool or metal pads, abrasive sponges or similar products.
- Immediately rinse off any detergent residues with cold water. Damages to the taps caused by incorrect treatment are not covered by the warranty.



Questions, problems, missing parts? Before returning to the store,
call Glacier Bay Customer Service
8 a.m.-6 p.m., EST, Monday-Friday

1-855-HD-GLACIER

HOMEDEPOT.COM/GLACIERBAY

Retain this manual for future use.