

INSTRUCTION
MANUAL


WATER
DISTILLER



YMK40105A



YMK40205A

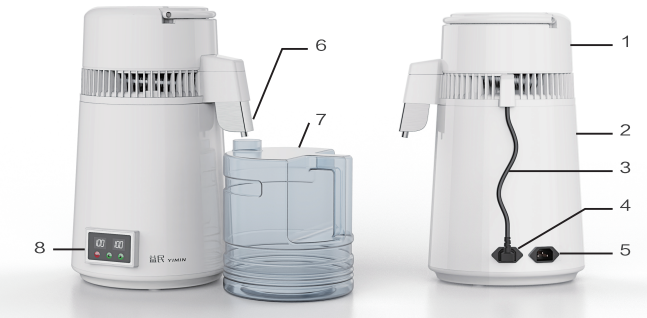

- 1.Top body
- 2.Main body
- 3.Top body power cord
- 4.Top body socket
- 5.Power cord Socket
- 6.Water outlets
- 7.Bottle
- 8.Display screen

Model no.:
YMK40105A / YMK40205A
Product Name: Water distiller
Rated voltage: 220–240V
Rated frequency: 50–60Hz
Rated power: 750W
Max capacity: 4.0L
Amount of distillation: 1L/h

Product Features

- ◆Advanced silent fan + two disc super cooling technology: steam super cooling.
- ◆ON/OFF switch: start or stop condensate production at any time.
- ◆Anti-dry burning function: After the water inside the main engine is dried, the temperature control will auto-matically protect and turn off the power.
- ◆Rapid water production: 4L condensed water can be produced in 3.5 hours.

1

- ◆Steam wine function:This product can produce wine according to consumer demand.

Notes(Danger and warnning)

Before using this product, please read this instruction carefully and keep it for future reference.

★Do not immerse the head and base in water or other liquid, nor flush with faucet.

★After the water in the distillation barrel is dried and automatically protected by tem-
perature control, the machine head assembly shall be opened after an interval of about 10
minutes to avoid possible burns caused by the steam in the barrel.

★Before the product is connected to the power supply, confirm whether the marked voltage is consistent with
the local used voltage.

★If the plug, socket or product is damaged, do not remove the machine for repair without permission, to avoid
the wrong connection of the internal circuit, resulting in power short circuit and other dangers.

★ This product is not suitable for children, people with physical or mental disorders, to avoid harm caused by
wrong use.

★When taking the head components or cleaning products, turn OFF the ON/OFF switch first, and unplug the
power plug of the head components and the host power plug.

★For the first time, add 1.0L of water and 2 tablespoons of citric acid into the tank of the
main engine, cover the head assembly, boil water with electricity for about 20 minutes,
after pouring out the water, rinse the tank and the distillation cover with clean water (the
distilled water made for the first time cannot be drunk).

★When cleaning the interior, it is forbidden to use steel wire brush (velvet) and other hard articles to scrub the
inner tank of the main engine and the inner tank of the machine head, so as to avoid scratches formed on the

2


Packing instructions

When opening the package, please confirm whether the following items
are complete item by item so that you can use this product effectively.

NO.	Description	Unit	K40105	K40205
1	Water distiller	pc	1	1
2	Power cord	pc	1	1
3	Water outlet	pc	1	1
4	Citric acid cleaner	pc	1	1
5	Active carbon	pc	1	1
6	Plastic bottle	pc	1	×
7	Plastic bottle cover	pc	1	×
8	Glass bottle	pc	×	1
9	Glass bottle handle	pc	×	1
10	Glass bottle fixed ring	pc	×	2
11	Screw	pc	×	1

surface of the inner tank, which will cause dirt accumulation in the gap with fine scratches.

- ★ When it is necessary to stop the production, you can press the red ON/OFF switch below the display screen of the host machine. There is no need to wait for the water in the tank of the host machine to dry up completely.
- ★ This product can continuously produce condensed water, that is, after the water in the tank is distilled, Turn OFF the display ON/OFF switch and turn ON the nose component after an interval of about 10 minutes. Add the water with the largest scale into the inner tank of the main machine, and use it again according to the ON/OFF operation of the display screen.
- ★ Installation and disassembly of outlet nozzle are shown in the diagram on the right:

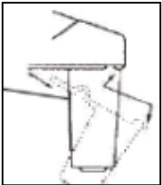

Use Instructions

Open the package, take out the machine (the whole machine extension head and host machine), extract the head, and take out the inner parts of the tank. If it is a glass bottle, assemble the handle of the cup and make sure the handle is firmly assembled.

I. Make distilled water

1. Add the water with the maximum scale water level into the tank of the main engine (do not exceed the water level).

3

2. Place the machine head on the main machine (check whether the sealing ring of the machine head is properly installed or leaking), insert the connecting power plug (product plug) of the machine head into the socket of the machine head, and insert the power cord plug (product plug) into the power socket of the machine head.

3. After making sure that the plug is properly connected and fastened, insert the power plug into the wall socket and display "---" on both screens.

4. Press the red ON/OFF switch at the bottom left of the display screen, the default temperature is 105 ON the left display screen, and the current temperature is displayed ON the right display screen. Stop for 1 second, the head fan starts to work, and the host enters the heating state.

5. Put the bottle inlet mouth match with the outlet mouth of the host, when the host heating about 30 minutes, distilled water start drops from the host mouth slowly ,it will automatic boil dry protected after the water dry up ,the display shows "E1", and display "---" when the temperature go down, then to be able to add water again to start next cycle.

II. Make distilled wine

1. Put the steaming rack into the liner of the main engine and place the materials used for steaming wine on it.

2. Place the machine head on the main machine (check whether the sealing ring of the machine head is properly installed or leaking), insert the connecting power plug (product plug) of the machine head into the socket of the machine head, and insert the power cord plug (product plug) into the power socket of the machine head.

3. After making sure that the plug is properly connected and fastened, insert the power plug into the wall socket and display "---" on both screens.

4. Click "ON " on the red ON/OFF switch at the bottom of the screen, the left display shows the default tem- perature 105, right display shows the current temperature, can according to the requirements of wine, at

4

this time by pressing the left button at the bottom of the screen to adjust the left display wine temperature (the lowest temperature can be set at 45 degrees, the highest can be set up to 108 degrees), stop after 1 second, the nose fans began to work, the host into heating state, the right display will change with temperature change, after heated to set temperature, around the display screen numerical agreement entered into a state of constant temperature, until the wine is completed, press the ON/OFF switch (turn OFF) red,Unplug the plug.

Cleaning

- ◆ If the shell is soiled, wipe it with a flexible cloth.
- ◆ After each use of the main engine tank, clean the residual fouling with clean water, and at least burn the cleaning reagent (citric acid) recommended by our company every month.
- ◆ Add 1.0L water and 2 tablespoons citric acid into the tank of the main engine, without covering the head component, boil water for about 30 minutes after electrifying, then pour out the water and use it to clear Rinse with water. If scale cannot be removed at one time, the above method can be repeated for clean- ing.
- ◆ If it is a plastic outlet, it is recommended to replace it every 2 to 3 months.

Common exceptions and handing

◆ Undistilled water drops out

a. The power supply of the host and the power socket of the machine head are not plugged into the socket. Please check and plug it again.

5

- b. Did not press the start button (the red indicator light did not go on).
- c. No water is added to the main engine tank.
- ◆ The amount of water distilled each time is not enough
- a. The water in the main engine tank does not reach the maximum water level scale.
- b. Leakage or poor sealing of the sealing ring of the nose assembly shall be checked, and the sealing ring shall be reinstalled or replaced with a new one.
- c. No water is added to the tank of the main engine.
- d. The outlet nozzle of the machine head is not properly installed, which needs to be removed and reinstalled.
- ◆ The head assembly water boiling process shaking or water overflow
- a. The water in the main engine tank exceeds the scale line of the maximum water level.
- b. If the head component is not installed in place in conjunction with the host machine, it shall be taken out and replaced on the host machine, and the effect of placement shall be properly felt by hand.
- c. The sealing ring of the machine head component is not installed well, it needs to be taken out and reinstalled.
- d. The outlet nozzle is clogged with dirt precipitation, and the outlet nozzle needs to be replaced or cleaned.
- ◆ When the power supply or working process displays "F"
- a.Abnormal temperature sensor needs repair and replacement
- ◆ When starting power supply or working process displays "E1"
- a: Temperature protected, it will reset naturally.
- b: If the machine shows "E1" all the time, it needs to be repaired and replaced.

6