

# LED Picture Light with Remote Control




Also see [www.amertac.com/picturelight](http://www.amertac.com/picturelight) for detailed instructions.

## Installation Instructions

1. With light bar facing “down,” slide open the back of the picture light base by pushing the base to the right with your thumbs (this is the opposite direction of the arrow embossed on the picture light, which is your guide for when it is mounted). In the compartment are mounting screws to mount the base to your wall.



2. Drill two pilot holes in the location you want to mount the picture light. Tighten the back base to your wall with the mounting screws. Take care not to over-tighten. For your convenience, there is a bubble level installed into the back base to help with leveling.

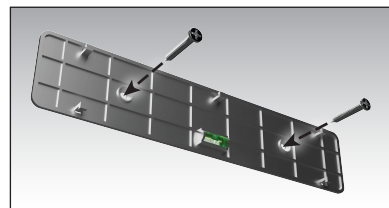


3. Install 3 C batteries into your picture light following the illustration inside the battery compartment. (It is popular to use rechargeable batteries depending on how much you plan to use the picture light.)
4. Align and fit the fins of the back of the picture light into the base now on your wall, and softly slide the picture light to align with the base.
5. To remove from wall, slide the picture light base in the direction of the arrow, and carefully pull apart the two pieces.

## Operation Instructions – Indoor Use Only


### 1. Manual

Lightly touch (tap) the “button” on the base of the picture light to turn on, and off. Touch and hold to dim. The light will remember your last selected dim level when you turn off the light.

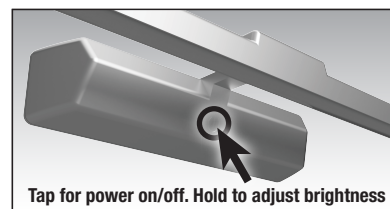

### 2. Remote

- a. Remove plastic tab from remote to engage the battery.
- b. **Power** - Tap the green “ON” button to turn on light, and red “OFF” button to turn off light.
- c. **Brightness** - Tap and hold the “+” or “-” button to dim/change the light level up and down. (The lower the light level, the longer batteries last.)
- d. **Preset** - With light “on,” tap the 10%, 40%, 80% or 100% buttons for a pre-selected dim level. The light will flash to confirm the setting.
- e. **Timer** - With the light “on,” tap the 15, 30, 60 or 120 buttons as a pre-selected minute countdown timer to turn off the light. The light will flash to confirm the setting. (There is an auto-off after 4 hours to save battery.)

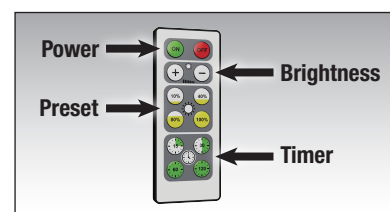

### Warning

To reduce the risk of electrical shock, do not put the unit in water or other liquid. To clean, use a soft dry cloth. Do not place or store picture light where it can fall or be pulled into a tub or sink.

### Battery Precautions

1. Use only the size and type of batteries specified.
2. Always purchase the correct size and grade of battery most suitable for the intended use.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment.
4. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) batteries.
5. Replace all batteries of a set at the same time. Do not mix old and new batteries.
6. Clean the battery contacts and also those of the device prior to battery installation.
7. Do not dispose of batteries in fire.
8. Remove batteries if consumed or if product is to be left unused for an extended period of time.
9. Follow instructions for recycling for the batteries you use. (Lithium-ion batteries must be disposed of at a household hazardous waste collection point (check with your local landfill) or battery recycling drop off location, NOT placed in the trash.)

### Limited Warranty

Under normal use and conditions, AmerTac provides to the original purchaser of this product a one year express warranty that is set forth in the Limited Warranty stated in full at [www.amertac.com/warranties](http://www.amertac.com/warranties).



**amertac**

AmerTac  
250 Boulder Dr.  
Breinigsville, PA 18031  
610-336-1330  
BO\_TL\_043\_0120

[www.amertac.com](http://www.amertac.com)  
Made in China  
© 2020 AmerTac™