


EVERBILT

TM

Item # 1002 782 607
Model # 9235927

Installation Instructions

WIDE-ANGLE FULL OVERLAY 165° HINGE

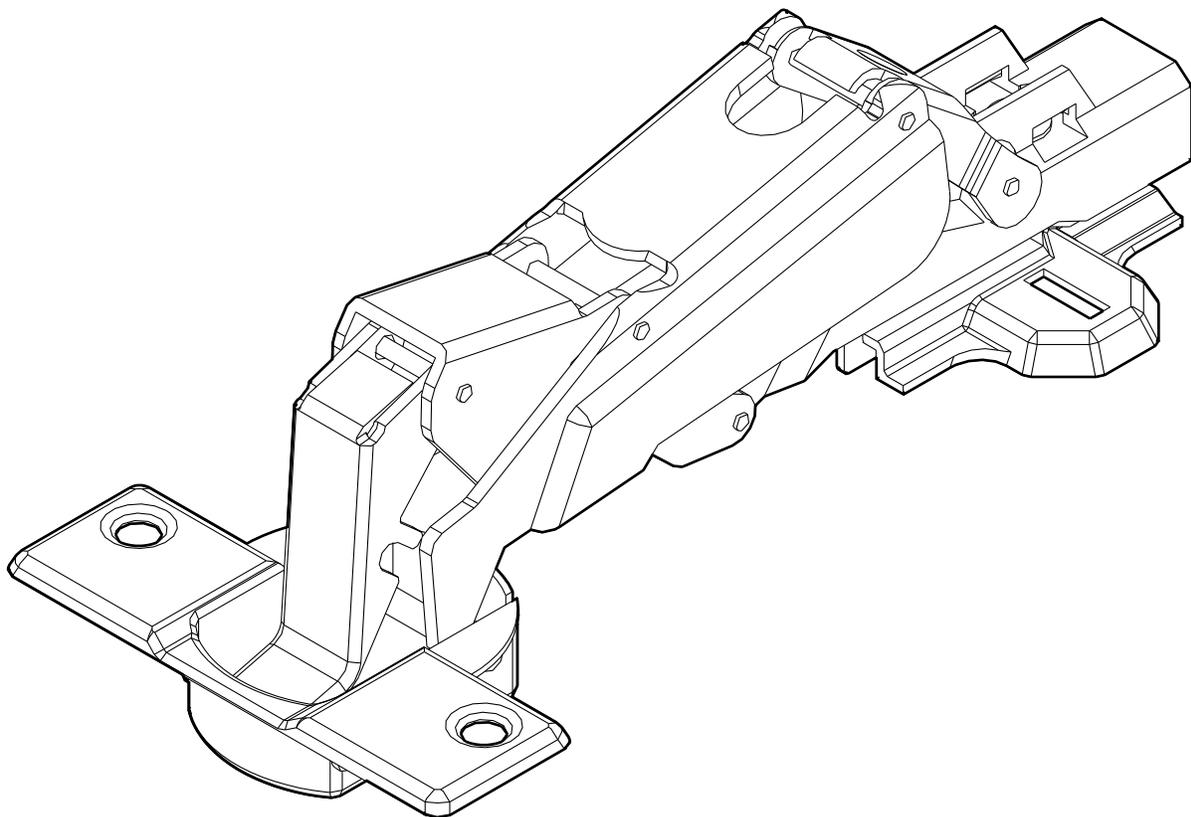

Questions, problems, missing parts? Before returning to the store,
call Everbilt Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-305-1726

or refer to **HOMEDEPOT.COM**
for the most current information

THANK YOU

We appreciate the trust and confidence you have placed in Everbilt through the purchase of this hinge. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Everbilt!

924393800

Table of Contents

Table of Contents	2	Pre-Installation	3
Safety Information	2	Planning Installation	3
Warranty	2	Tools Required	3
		Package Contents	4
		Recommended Number of Hinges Per Door Size	4
		Installation	5

Safety Information

Please read and understand this manual before installing this product.

 **CAUTION:** Always be cautious when using power tools.

Warranty

Subject to the terms of this warranty, the Manufacturer warrants to the original consumer purchaser that the product will be free from defects in material and workmanship. If the product does not comply with this warranty, the Manufacturer will repair or replace the product or, at the Manufacturer's option, refund the purchase price. Repair, replacement, or refund of the original purchase price is your sole remedy under this or any other warranty on the product, whether expressed or implied.



For additional details and questions, please contact Everbilt Customer Service at 1-800-305-1726.

Pre-Installation


PLANNING INSTALLATION

Ensure all parts listed in the Package Contents section are included and that you have the listed Tools Required on hand. If any part is missing or damaged, contact customer service.

When planning your installation, ensure the hinge is oriented in its final position as shown. This hinge is intended for overlay applications on furniture with the doors positioned outside the front of the cabinet.

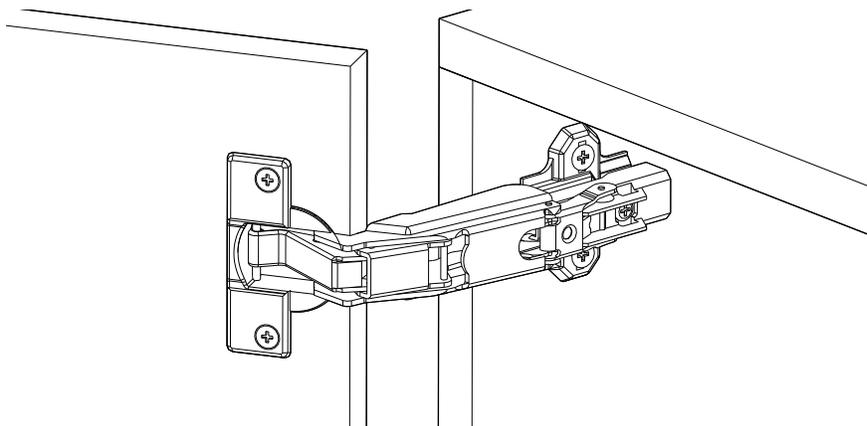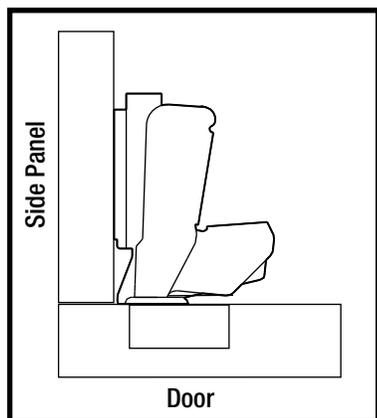


When installed successfully, these hinges can open to a maximum of 165°.

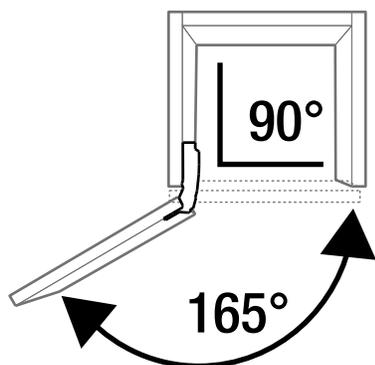

TOOLS REQUIRED




#2 Screwdriver

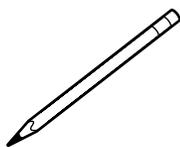


Pencil or Scribe



 Ruler (in. and mm)




Drill

 

35 mm boring bit (Forstner bit)

Pre-Installation (continued)


PACKAGE CONTENTS

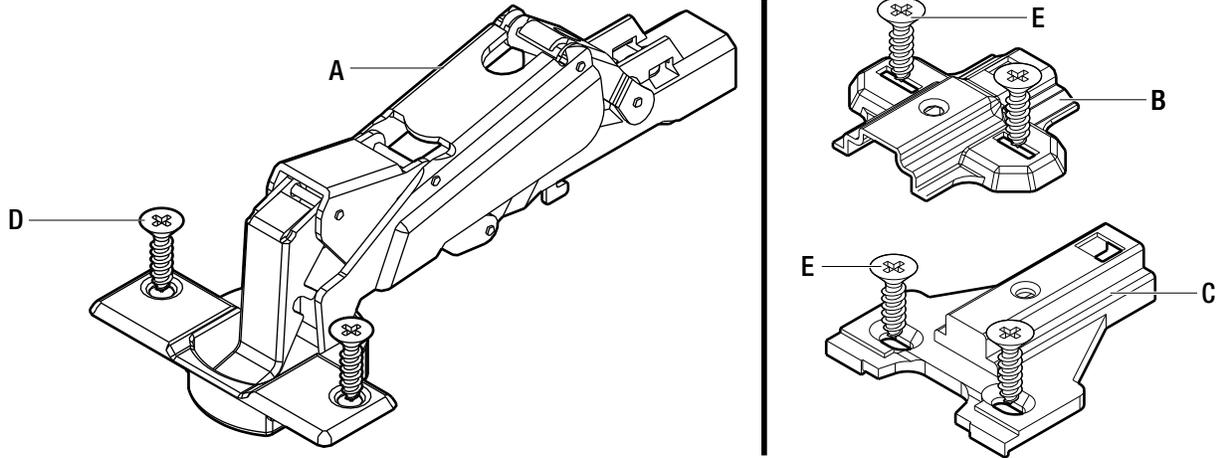

Part	Description	Quantity
A	Hinge	2
B	Mounting Plate (Frameless)	2
C	Mounting Plate (Face Frame)	2
D	#5 x 5/8 in. Wood Screw	4
E	#9 x 5/8 in. Wood Screw	4


RECOMMENDED NUMBER OF HINGES

Use this diagram to determine how many hinges you will need for your door. If you are hanging a door with a mirror or a door that is wider, you will need additional hinges.

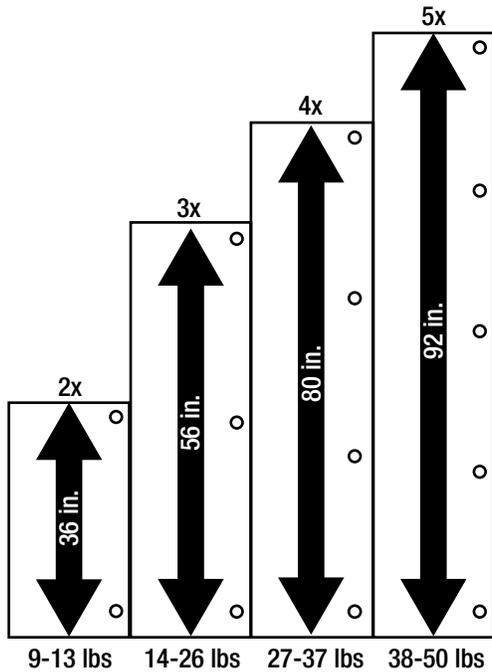

FRAMELESS VS FACE FRAME CABINETS

Face Frame cabinets have vertical stiles and horizontal rails that reinforce the cabinet structure and provide mounting and support for doors and drawers. Frameless cabinets don't have any face framing.

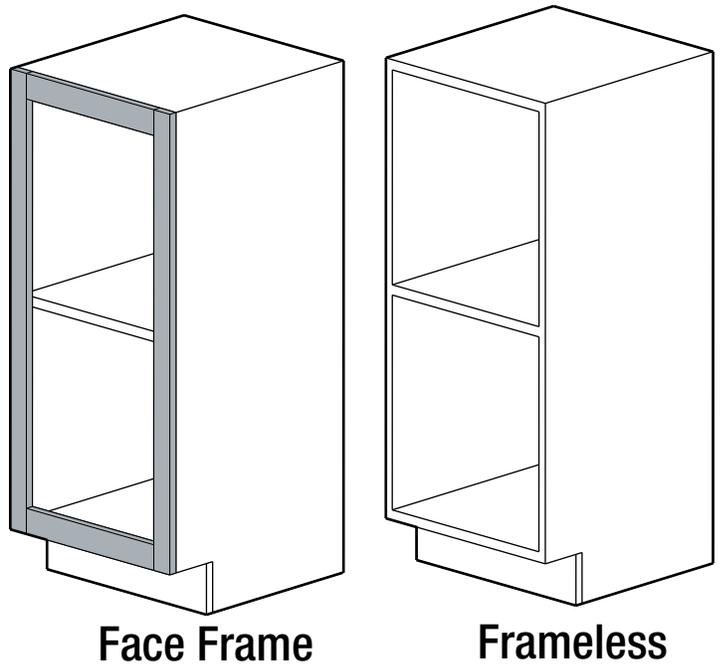

Installation

1 Pre-drilling the installation holes

- Use a pencil and ruler to measure and mark the installation locations as this diagram shows.
- Then use a 1-3/8 in. (35 mm) boring bit to drill the door hole 7/8 in. from the edge. Ensure the door hole is a minimum of 1/2 in. (12.8 mm) deep. Do not drill through the door face.



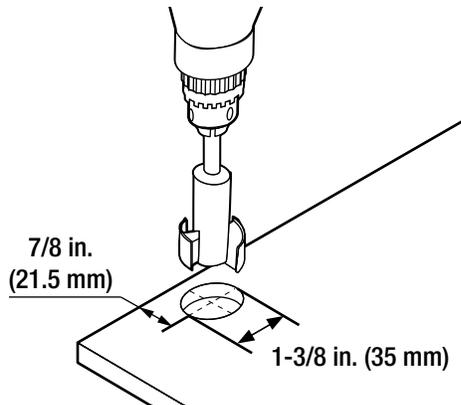


Diagram for Drilling Hinge Cup

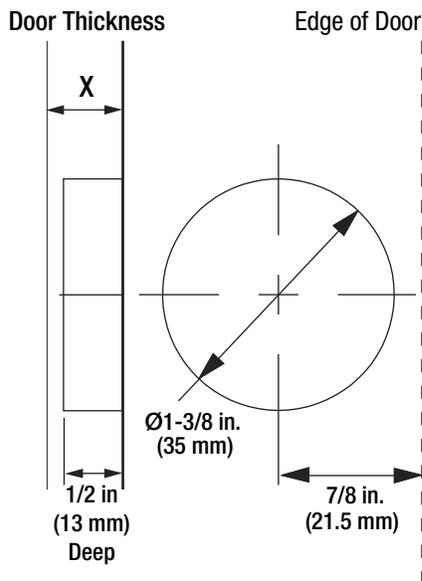


2 Installing the hinges to the door

- Insert each hinge (A) into the pre-drilled hole in the door and secure using two screws (D) for each hinge (A).

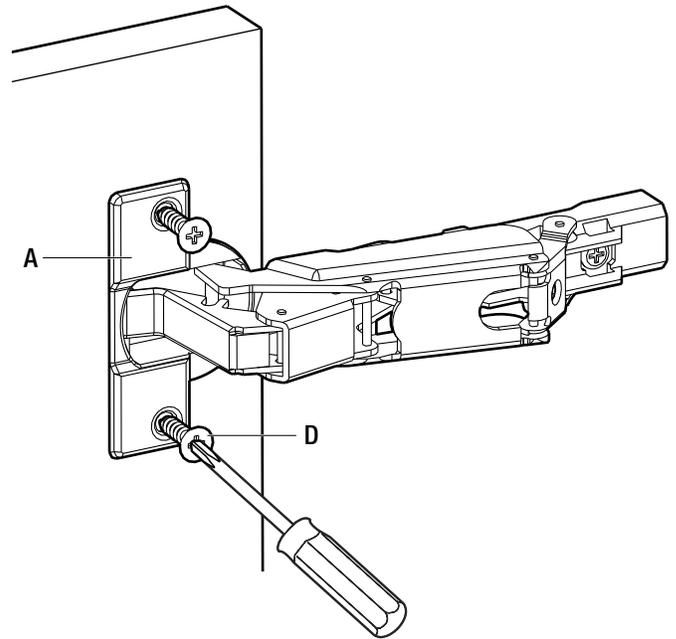


3a Installing the mounting plates to the cabinet

- Align the mounting plates (B or C) and fasten with two screw (E) - See installation diagram on next page.

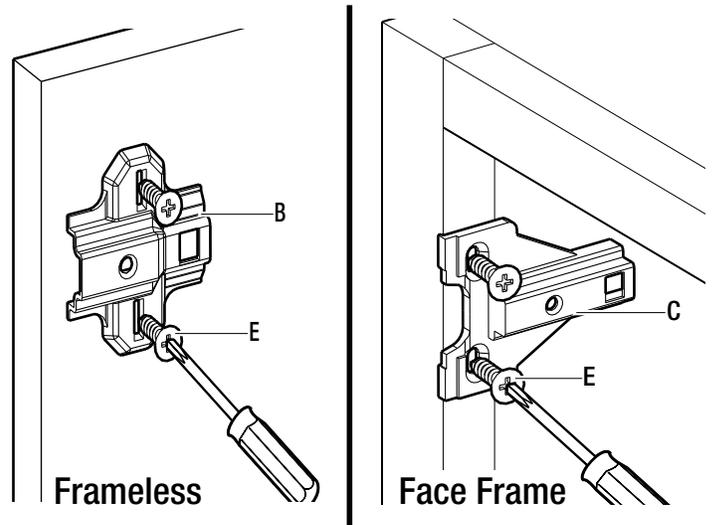


Installation (continued)

3b Diagram for mounting plate screw placement

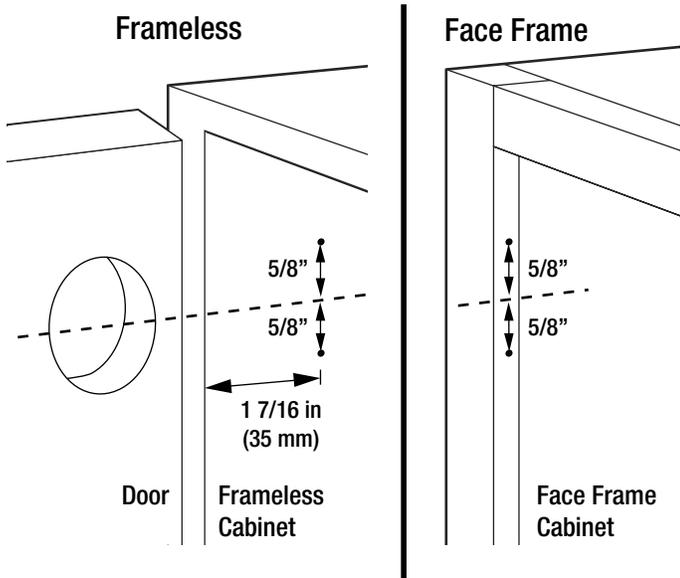


4 Installing the door to the cabinet

- Open the hinges (A) to the fully-extended position.
- Connect the hinge arm (A) to the mounting plates (B) and press the rear of hinge arm (1) down until they snap to the plates.

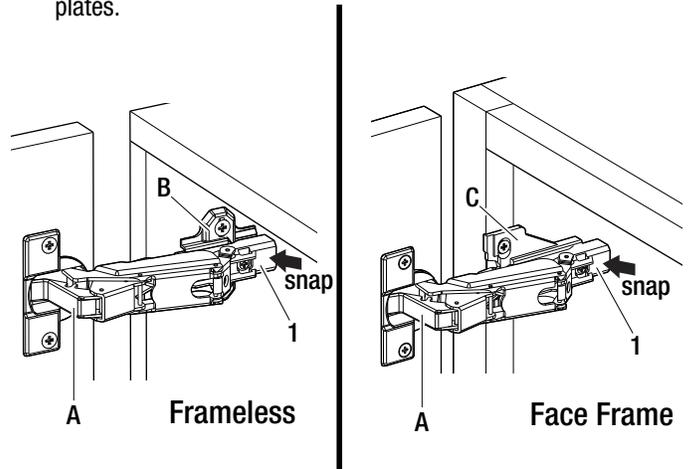

5 Adjusting the door

- **Height Adjustment:** Loosen the top mounting screw (1) to adjust the door up or down.
- **Overlay Adjustment:** Turn the adjustment screw (2) to adjust the door overlay.
- **Depth Adjustment:** Turn the eccentric screw (3) to adjust the distance of the doors from the cabinet.

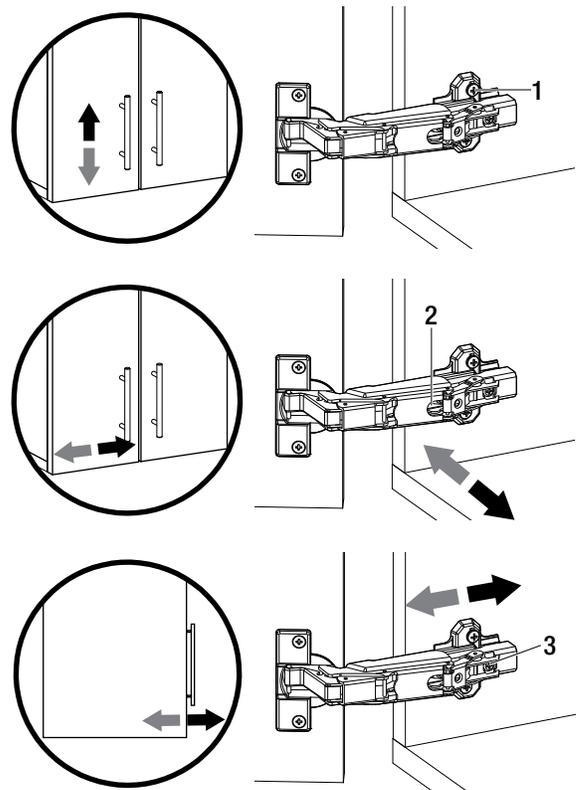



**Questions, problems, missing parts? Before returning to the store,
call Everbilt Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday**

1-800-305-1726

HOMEDEPOT.COM

**For the most up to date instructions - please visit HomeDepot.com.
Retain this manual for future use.**