



SKU#1013320904
Model#25PA02392

USE AND CARE GUIDE

8 ft Gruesome Grounds GIANT-SIZED ANIMATED LED Tumble the Troll



Questions, problems, missing parts?
Before returning to the store, call Home Accents Holiday Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-434-6543

info@pan-asian.com.hk

THANK YOU

We appreciate the trust and confidence you have placed in The Home Depot through the purchase of this 8 ft Gruesome Grounds GIANT-SIZED ANIMATED LED Tumble the Troll. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing The Home Depot!

Safety Information



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible party for FCC: Pan Asian Creations Limited.

Address: PO Box 165, New Hartford, NY 13413

For FCC email: info@pan-asian.com.hk



SAFETY INSTRUCTIONS:

1. All cautions in these operating instructions should be followed completely.
2. Do not use near water; such as a bathtub, laundry tub, kitchen sink, wet basement or swimming pool, etc.
3. Do not display the product near any heat source such as radiators, stoves, fireplaces, etc.
4. Display should be serviced by a qualified service person only. Do not attempt to service this unit beyond what is described in the operating instructions.
5. Take extra care when displaying any figure that may contain small parts around small children.
6. Use of this decoration should always be supervised by an adult.
7. Remove AC/DC adapter when not in use.



WARNING: This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.



IMPORTANT SAFETY INSTRUCTIONS:

When using electrical products, basic precautions should always be practiced including the following:

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
2. Read and follow all instructions that are on the product or provided with the product.
3. Do not use an extension cord.
4. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearance from power and lighting conductors.
5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
6. Do not install or use within 10 feet of a pool.
7. Do not use in a bathroom.
8. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
9. **WARNING: Risk of Fire.** Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
10. **WARNING: Risk of Electric Shock.** Mount the unit at a height greater than 1 foot from the ground surface.
11. Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.

ACTUAL ITEM MAY VARY SLIGHTLY FROM PHOTO.

DISTRIBUTED BY:
HOME DEPOT
2455 PACES FERRY ROAD
ATLANTA, GA 30339

Pre-Installation / Pre-Operation / Pre-Assembly

PLANNING INSTALLATION

Estimated installation time: 30 minutes

Number of people recommended: One

PREPARATION: Before beginning assembly the product, make sure that all parts are present. Compare parts with package contents list and diagram below. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

PACKAGE CONTENTS




Part	Description	Quantity
A	Right Base Support	1
B	Left Base Support	1
C	Right Foot	1
D	Right Leg Support (shorter length)	1
E	Left Foot	1
F	Left Leg Support (longer length)	1
G	Foam Leg Cover - Right & Left	2
H	Hip Support Structure / Control Box	1
I	Hip Hoop Support	1
J	Center Support - Module	1


Part	Description	Quantity
K	Body Suit / Costume / IR Sensor	1
L	Jacket	1
M	Right Arm Support	1
N	Left Arm Support	1
O	Right Forearm - Middle Club	1
P	Left Forearm - Bottom Club	1
Q	Club Head	1
R	Troll Head	1
S	Cotter Pins	6
T	AC/DC Adapter and Cable	1

1 Assemble Base Support

- Ensure this item is assembled on level and stable ground. Align, insert & 'Click Lock' Right (A) and Left (B) Base Supports together.

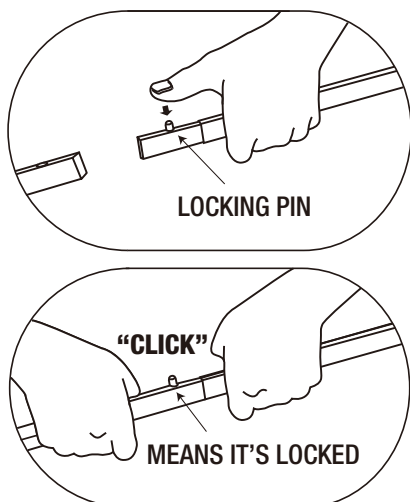


NOTE: Follow this 'Click Lock' procedure for all Support Frame assembly.

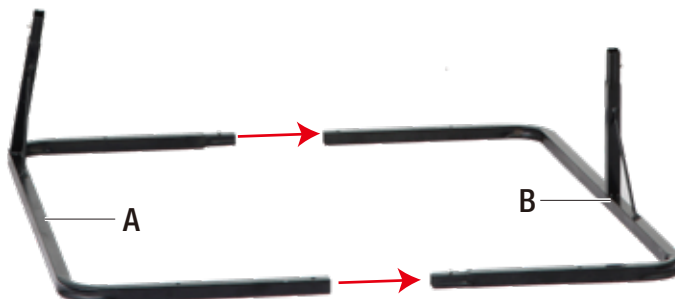

NOTE: the Base Support have holes in it that allows for inserting Ground Stakes for additional outdoor stability. Ground Stakes Sold Separately.


2 Install Left & Right Legs & Feet onto Base Support

- Pass the bottom end of the Right Leg Support (D) through the top and bottom holes on the Right Foot (C).
- Align, insert & 'Click Lock' the bottom end of the Right Leg Support (D) into the top of Right Base Support (A) post.
- Repeat steps for Left Leg Support (F) and Left Foot (E).

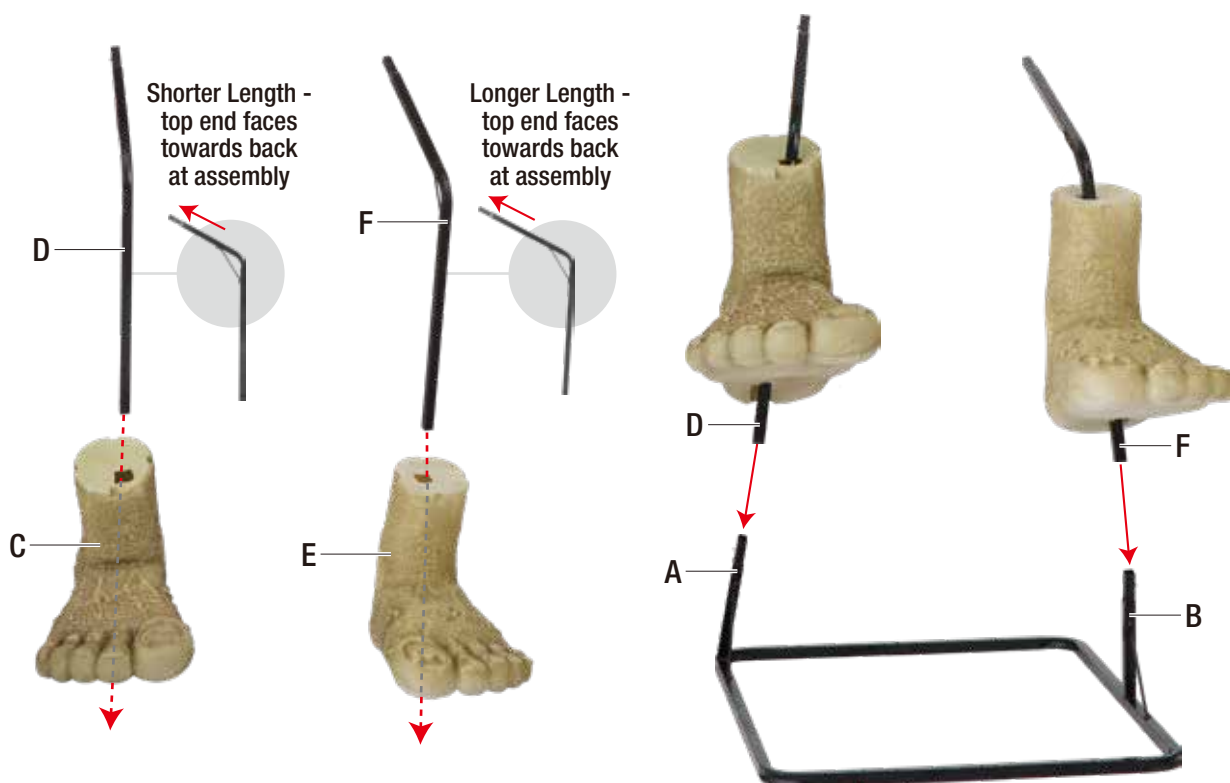


3 Cover Leg Supports with Foam Leg Covers

- Slide Left & Right Foam Leg Covers over Leg Supports (D & F) down to the top of each foot. The Foam Tubes give the legs a fuller appearance.

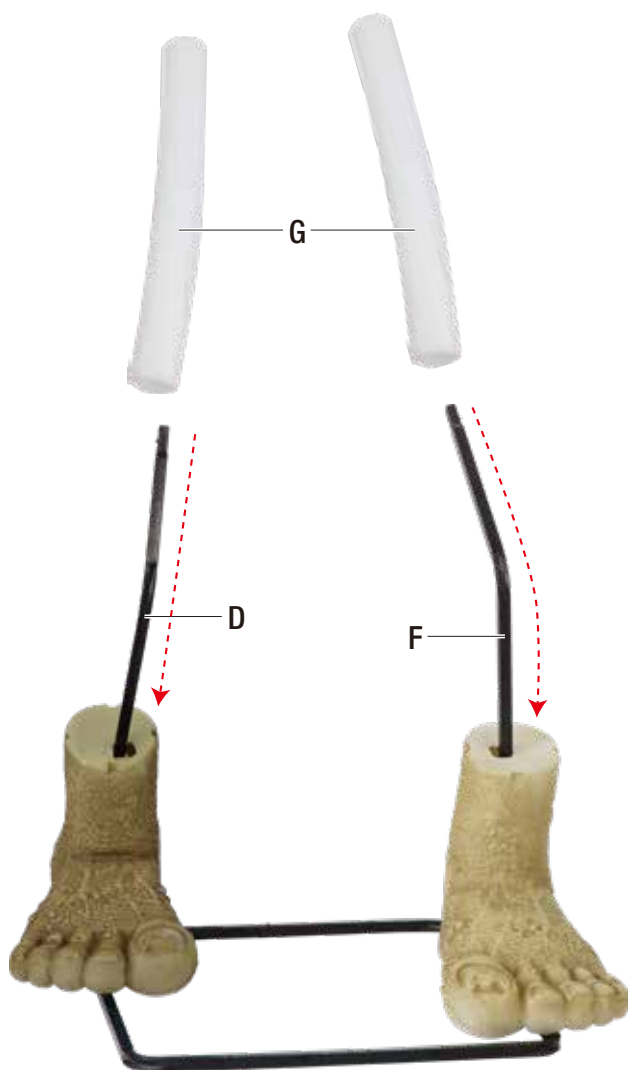

4 Attach Hip Support Structure to Leg Supports

- Align, insert & 'Click Lock' the Hip Support Structure / Control Box (H) into the Right (D) & Left (F) Leg Supports.

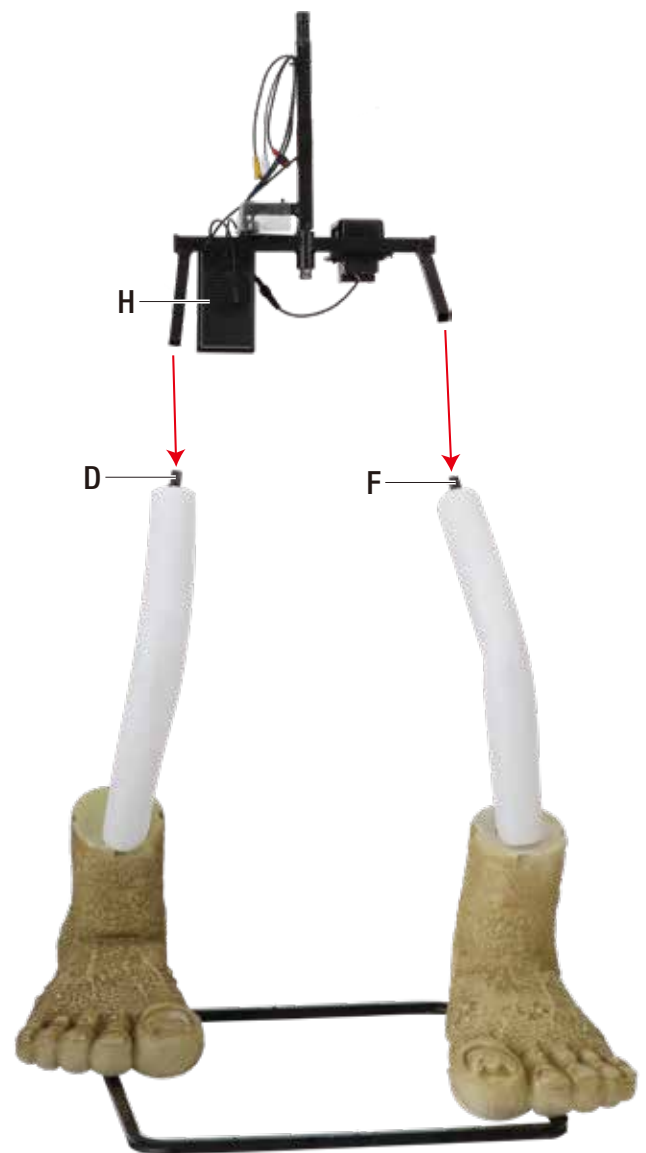

5 Attach Hip Hoop Support to Hip Support Structure

- Insert downward facing metal studs on each side of Hip Hoop Support (I) into slots on sides of Hip Support Structure (H), Fig. 1-1.
- Lock Hip Hoop Support (I) in place with Cotter Pins (S) through holes in bottom of metal studs - one per side, Fig. 1-2.

Fig. 1-1



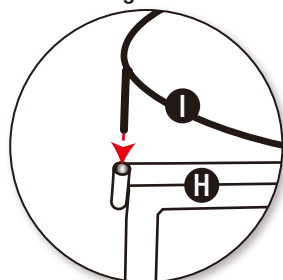


Fig. 1-2

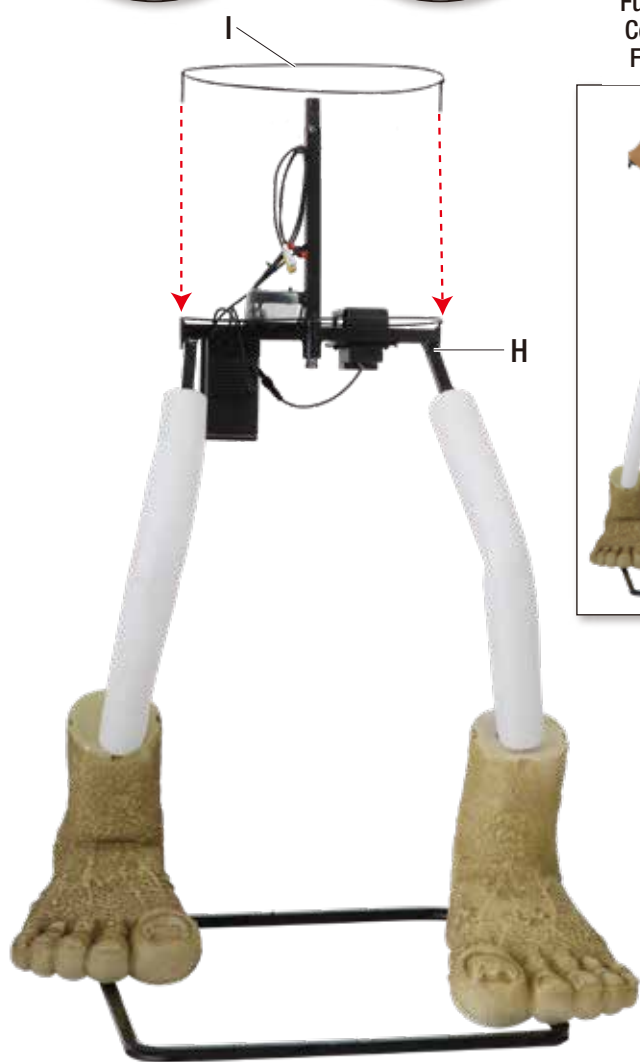


Fully Connected Center Support Frame & Base

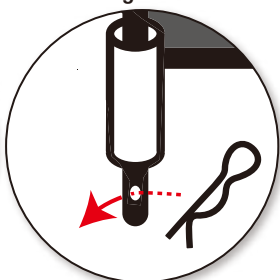



6 Attach Center Support to the Hip Support

- Align, insert & 'Click Lock' the Center Support (J) into the Hip Joint / Control Box (H).
- Cable Connection 1: Connect 'Red to Red' cable plugs from the Center Support (J) to the Control Box (H).

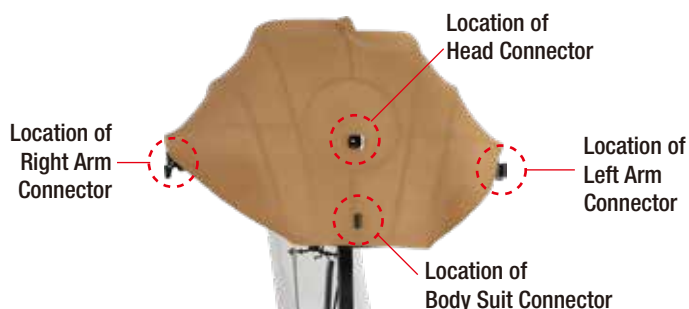


NOTE: Location of Connectors for future use.

CABLE CONNECTION 1

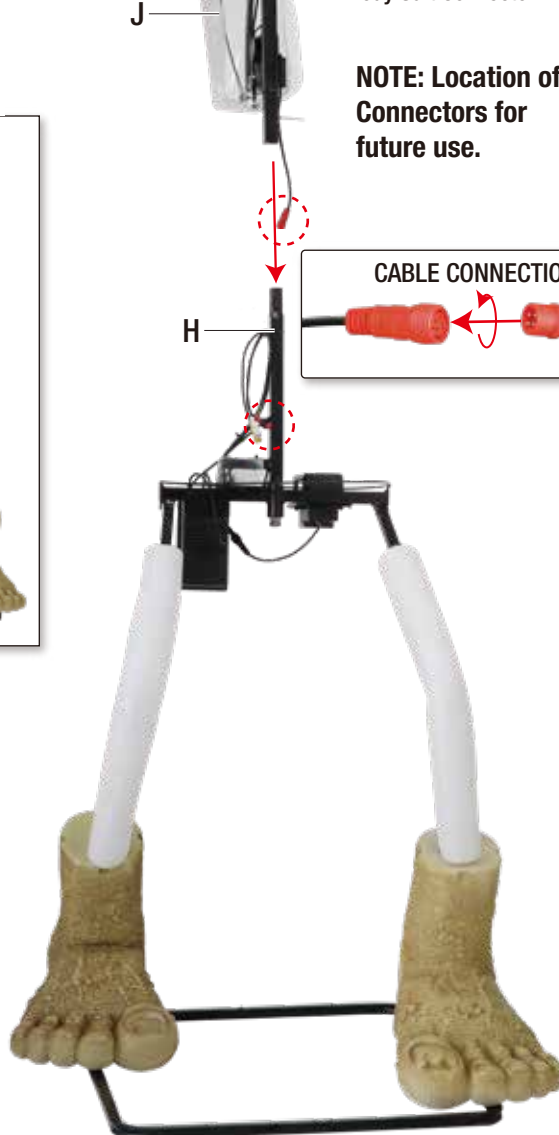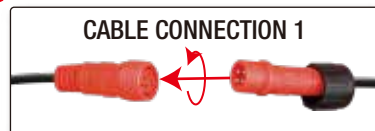

7 Cover assembled Support Frame with Body Suit/Costume


- Cover the Body Suit over the assembled Support Frame. Hook the metal stud located on the interior horizontal wire support of the Costume (K) into the Body Suit Connector on the Center Support (J), Fig. 2-1.

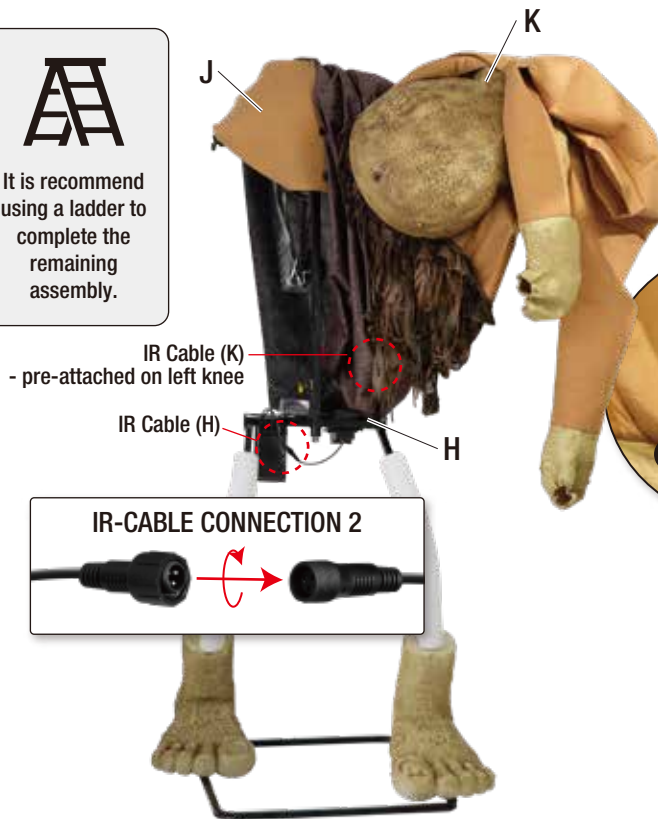

- IR-Cable Connection 2: Connect 'Black to Black' cable plugs, one pre-attached to the inside left knee of the Costume (K) and the other end attached to the Control Box (H), secure with Turn Lock Fastener.


- Close only the upper back of costume with the white Hook & Loop strips after completing cable connection and posing the costume over the frame, Fig. 2-2.

Note: Leave the opening on the bottom of the costume open for now, to have access for Troll Head Cable Connection during later assembly.

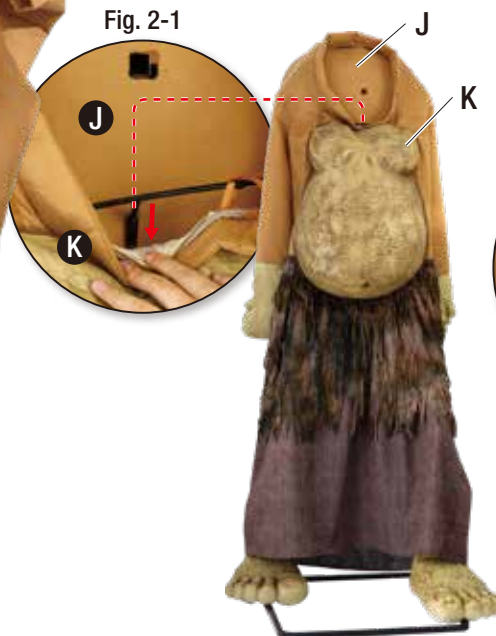

8 Place Jacket on upper Body Suit

- Slide left sleeve of Jacket (L) over the left arm of Body, cover shoulders and repeat with right arm through right Jacket sleeve.
- Stick Hook & Loop strips on collar of Jacket together at neck level, Fig. 3-1.

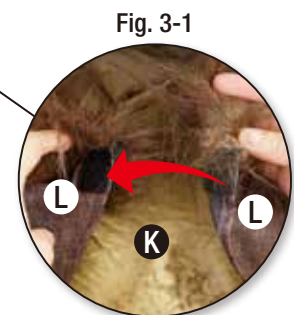

9 Attach Right and Left Arms to Body

- Roll up both arms & sleeves (K & L) to shoulder level.
- Hook metal studs on upper Right Arm Support (M) into receiver slots on right side of Center Support (J), Fig. 4-1.
- Lock Upper Right Arm in place with Cotter Pin (S) through hole in bottom of metal stud, Fig. 4-2.
- Hook metal studs on upper Left Arm Support (N) to receiver slots on left side of Center Support (J), Fig. 5-1.
- Lock Upper Left Arm in place with Cotter Pin (S) through hole in bottom of metal stud, Fig. 5-2.

Fig. 4-1

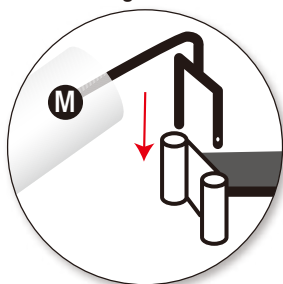


Fig. 4-2

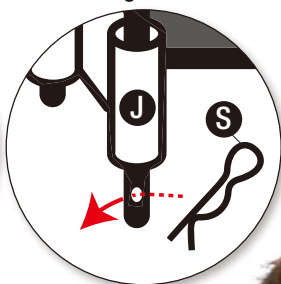


Fig. 5-1


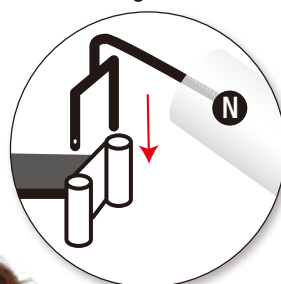


Fig. 5-2

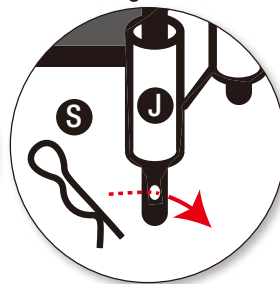

It is recommend using a ladder to complete the remaining assembly.

10 Attach Right Forearm-Middle Club to Right Arm Support

- Hook metal studs on Right Forearm (O) into receiver slots on Right Arm Support (M), Fig. 6-1.
- Lock Right Forearm in place with Cotter Pin (S) through hole in bottom of metal stud, Fig. 6-2.

Fig. 6-1


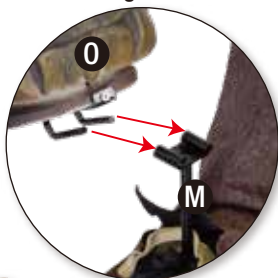


Fig. 6-2

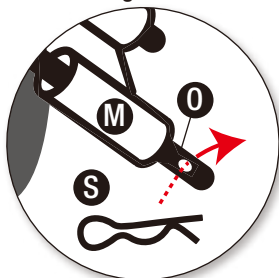


11 Attach Left Forearm-Bottom Club to Middle Club End

- Align the longest of the 4x tabs on the post on the left hand of Left Forearm (P) into the longest slot on bottom of Middle Club on the Right Forearm (O), turn counter-clockwise to lock in place, Fig. 7-1.

By joining the Right & Left Forearms together, the bottom & middle sections of the club are also being assembled.

Fig. 7-1

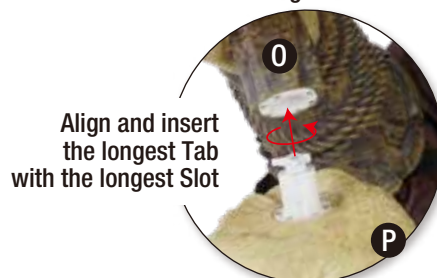


12 Attach Left Arm Support onto Left Forearm-Bottom

- Hook receiver slots on Left Arm Support (N) into upwards facing studs on Left Forearm (P), Fig. 8-1.
- Lock Left Forearm in place with Cotter Pin (S) through hole in bottom of metal stud, Fig. 8-2.

Fig. 8-1



Fig. 8-2

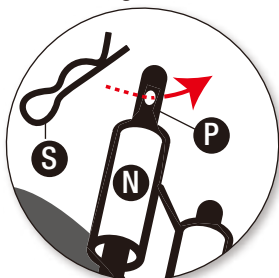

13 Cover Right & Left Arm Supports with Body Suit

- Roll down Right and Left 'Skin' and fabric sleeves on Body Suit to cover Right & Left Arm Supports.
- Attach 'Skin' on arms to the Right & Left Forearms by stretching the elastic ends and setting them into channels on the back end of each forearm, Figs. 9-1 & 9-2.

Fig. 9-1


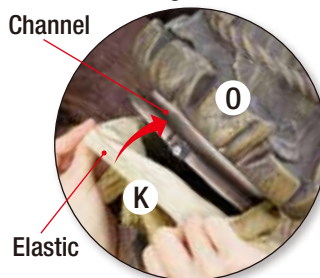


Fig. 9-2



14 Attach Club Head to Right Forearm-Middle Club

- Align the longest of the 4x tabs on the post on the bottom of the Club Head (Q) and insert into the longest slot on top of the Right Hand on Right Forearm-Middle Club (O), turn clockwise to lock in place.

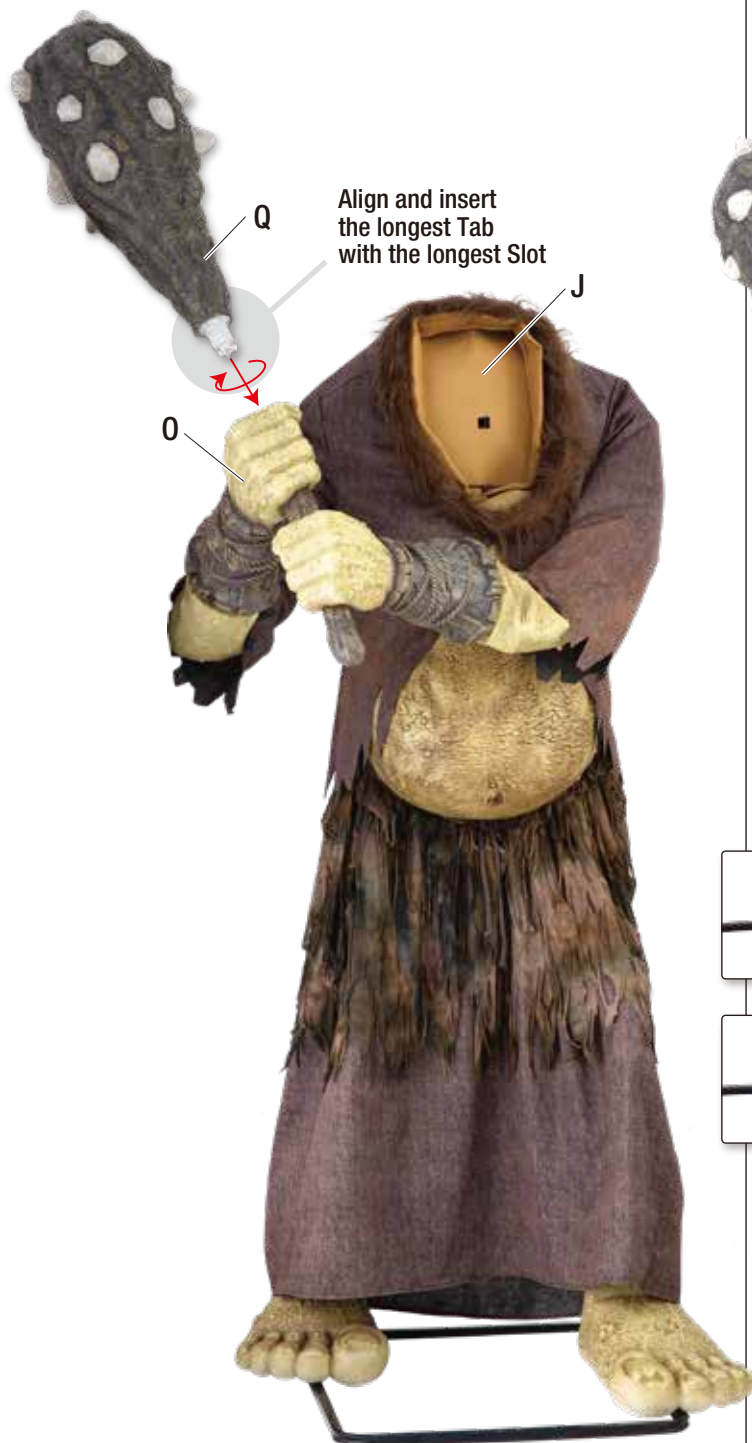

15 Attach Troll Head to Center Support

- Place cables inside Costume. Align, insert & 'Click Lock' Troll Head (R) into the Head Connector on Center Support (J), Fig. 10-1.
- Cable Connection 3: Connect 'White to White' cable plugs from the Troll Head (R) to the Control Box (H).
- Cable Connection 4: Connect 'Yellow to Yellow' cable plugs from the Troll Head (R) to the Control Box (H).




16 Install AC/DC Adapter and Cable into Power Box

- To access Control Box, open the costume - held together by Hook & Loop Strips - on the lower back of the Hip Support (H) as shown below.
- Connect and screw together the DC plug on the Adapter Cord into the corresponding DC Jack connection on the Control Box. Attach and screw the other end of cable into Adapter Head.
- Plug the Adapter into a power source and then place the switch to choose the function to activate. Close the costume once the desired function has been set.
- Close the costume after setting the function by sticking the black colored Hook & Loop Strips together on the lower part of the costume.




Operation Instructions

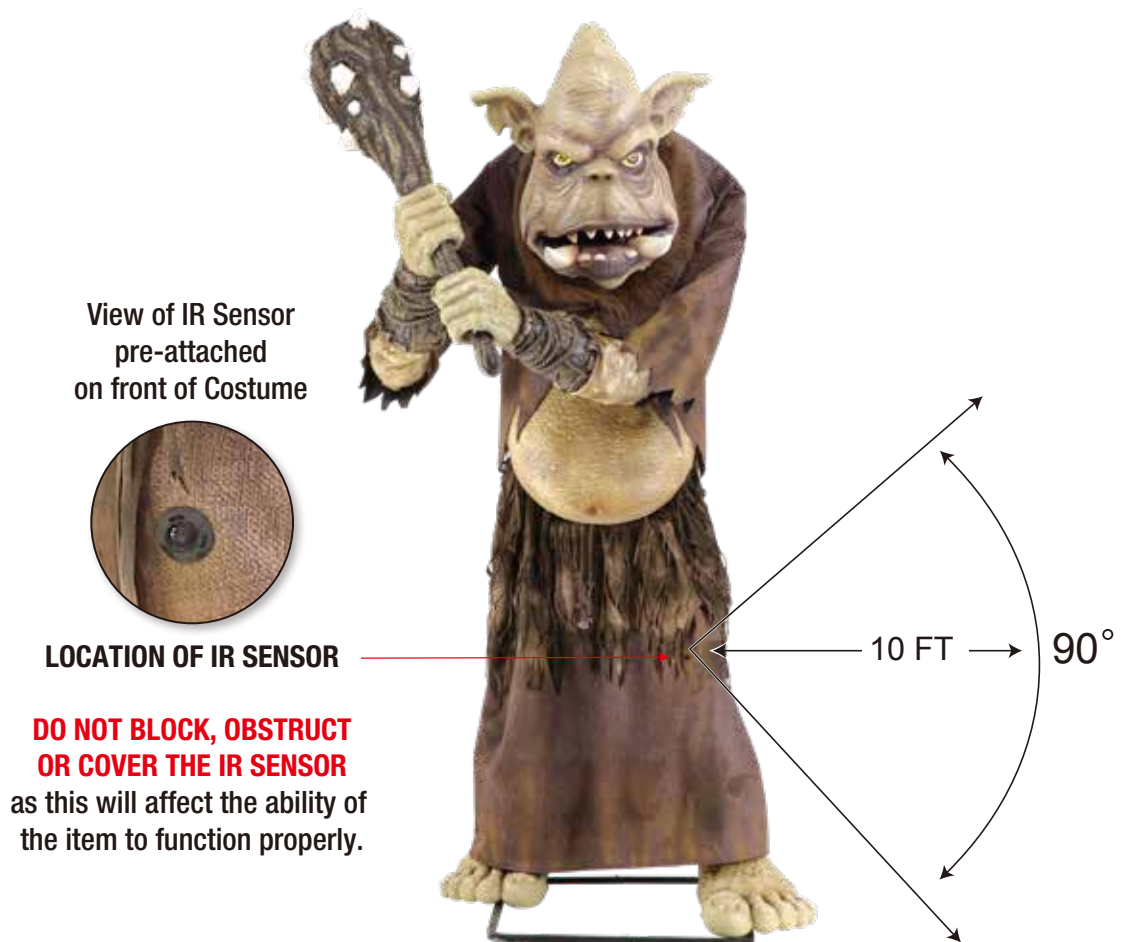

IR Motion Sensor Detection & Activation Range

FUNCTION CONTROLS:

NOTE: THE CONTROL BOX IS LOCATED ON THE BACK OF BODY ON HIP SUPPORT (H).

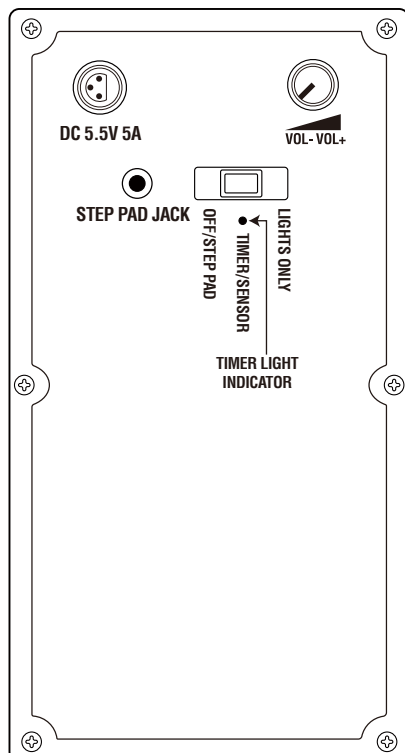

LIGHTS ONLY

Place the switch in the "LIGHTS ONLY" position to activate LED Illumination ONLY.

TIMER/SENSOR

Place the switch in the "TIMER/SENSOR" position for CONSTANT 'ON' LED Illumination and Motion Sensor Activated synchronized LED Lights, Sounds & Animation - on an automatic 6 hours ON / 18 hours OFF cycle. The TIMER Light Indicator shines to show the "TIMER/SENSOR" mode is currently activated.

NOTE: Plays 5 DIFFERENT synchronized Light/Sound/Animation "Cycles" in a rotational order. Each Sensor Activation triggers a different "Cycle" then returns to CONSTANT 'ON' LED Illumination until the IR Sensor is re-triggered.
NOTE: The maximum effective detection range to trigger motion sensor activation is within 10 feet, and at a 90° angle position.

OFF/STEP PAD

Place the switch in the "OFF/STEP PAD" position to deactivate the product and/or to activate the STEP PAD product demonstration feature. To activate the product demonstration, connect the Cable from the STEP PAD (Not Included) into the STEP PAD JACK located on the Control Box, then gently step or press on the STEP PAD for one (1) demonstration "Cycle" of synchronized LED Lights, Sound & Animation. Unplug the Adapter, Cables, and store when not in use.

VOLUME CONTROL

Volume control dial located on Control Box. Raise (+) or Lower (-) the volume using the volume control turn dial, turn all the way down to turn the sound off.

Operation Instructions

- Plug the power adapter into a standard power outlet and adjust the settings on the Control Box.
- This product can be powered by a UL Listed, output 5.5 V/5A input 100-240V/50-60Hz adapter (included).



This is not a toy and is for decorative purposes only. For indoor and outdoor covered use. This item is not intended for use by children under the age of 14. Do not place product near an open fire or heat source such as a radiator, stove, etc.

Care and storage instructions

For best performance operate your item Indoor or Outdoor Covered. When not in use, store this product in its original packing. Keep away from heat and moisture

Troubleshooting

Problem	Solution
The product does not work	□ 1. Check all wire connections and make sure all parts are securely attached. □ 2. Check to make sure the adapter is connected to a working power source. Make sure the adapter is plugged into a standard 120V household outlet.
The IR Motion Sensor does not work	□ 1. Check to see that the switch is located in either the "TIMER/SENSOR" positions. □ 2. Examine if there is an obstruction on the surface of the IR Motion Sensor. □ 3. Change the product placement environment and try again. □ 4. Check to see if the ambient temperature is too high. Place the product in a normal temperature environment.