
GLUCKSTEINELEMENTS

Item# 1001 657 719 Model# 39666-HBCLED

USE AND CARE GUIDE

LED OUTDOOR POST MOUNT

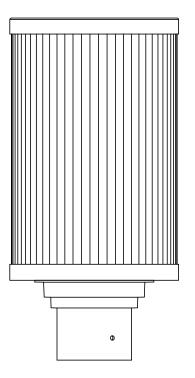

Questions, problems, missing parts? Before returning to the store, call Gluckstein Elements Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-833-695-2045

HOMEDEPOT.CA HOMEDEPOT.COM GLUCKSTEINELEMENTS.COM

THANK YOU

We appreciate the trust and confidence you have placed in Gluckstein Elements through the purchase of this LED outdoor post mount. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Gluckstein Elements!

Table of Contents

Table of Contents	2
Safety Information	2
Warranty	2
Pre-installation	3
Planning Installation	3
Tools Required	

Hardware Included	3
Package Contents	4
Installation	5
Care and Cleaning	6
Troubleshooting	6

Safety Information

- Read all instructions before assembling and installing.
- Consult a qualified electrician for installation of this fixture.
- If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-833-695-2045 or visit www.HOMEDEPOT.ca. / HOMEDEPOT.com. / GLUCKSTEINELEMENTS.com.
- □ Please reference your item number 1001 657 719 or UPC 773546323895.
- □ Keep your receipt and these instructions for proof of purchase.



CAUTION: Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breake or by removing the fuse at the fuse box.



IMPORTANT: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have occurred during shipping. If there is a defect in the wire, do not continue the assembly process.

Warranty

LIMITED WARRANTY

WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of three (3 years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling.

WHAT IS NOT COVERED


This warranty shall not apply to any product that is found to have been improperly installed, set up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specifically disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-833-695-2045 or visit www.HOMEDEPOT.ca. / HOMEDEPOT.com. /GLUCKSTEINELEMENTS.com.

PLANNING INSTALLATION

AA

Read all instructions before assembly and installation. To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard. Inspect each part for defects that may have occurred during shipping. Keep your receipt and these instructions for proof of purchase.

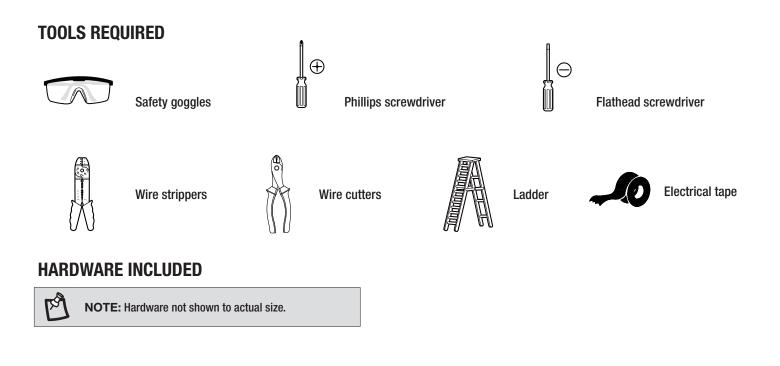


Part	Description	Quantity
AA	Wire nut	3
BB	Install screw	3

BB

Pre-Installation (continued)

PACKAGE CONTENTS

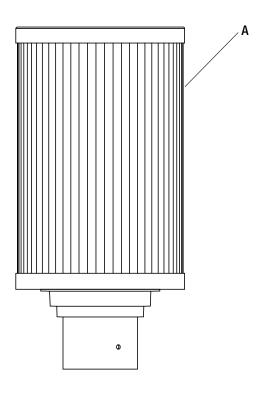

Part	Description	Quantity
Α	Fixture body	1


Installation




Making the electrical connections

NOTE: Always use wire nuts (AA) to connect wires and push all excess wires and connections back into the pole (not included).

- Connect the included white wire from the fixture to the white wire from the pole (not included), and the included black wire from the fixture to the black wire from the pole (not included), and finally the included copper ground wire from the fixture to the copper ground wire from the pole (not included). Cover the three wire connections using the three provided wire nuts (AA).
- Wrap the three wire connections with electrical tape for a more secure connection.

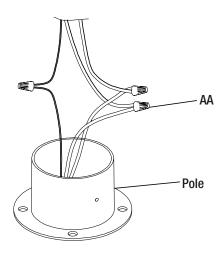


□ Connect the fixture wires as follows:

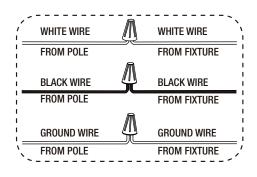

2 Mounting the fixture body

Place the fixture body (A) vertically onto the pole (not included) and secure by the three install screws (BB) to the post cup.

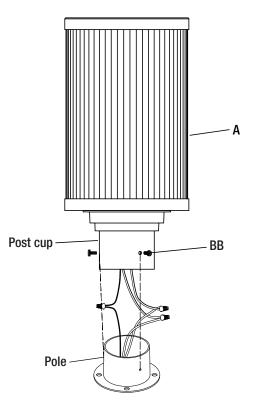

Care and Cleaning

□ Clean the light fixture carefully with a soft, dry cloth. Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Corrective Action
The fixture will not light.	The LED is burned out.	 Replace the fixture.
	The power is off.	 Make sure power supply is on.
	There is a faulty wire connection.	Check wiring.
	There is a faulty switch.	Test or replace the switch.
The fuse blows or the circuit breaker trips when the light is turned on.	There are crossed wires or power wire is grounding out.	Check the wire connections.
		Contact a qualified electrician or call the
		Customer Service Team at 1-833-695-2045.

GLUCKSTEINELEMENTS

Questions, problems, missing parts? Before returning to the store, call Gluckstein Elements Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

> 1-833-695-2045 HOMEDEPOT.CA HOMEDEPOT.COM GLUCKSTEINELEMENTS.COM

Retain this manual for future use.