

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

Rising Glowing Ghoul

Model#5124440



This item, when assembled by the following instructions, should take 15 minutes to assemble. Please follow the step by step guide and enjoy your Rising Glowing Ghoul!

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in it's original packing. Keep away from heat and moisture.

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

- 1. Please use the transformer supplied by manufacturer.
- 2. Please assemble item according to instructions. Connect all wires according to matching color.
- 3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the transformer, as it heats up during operation.

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

PARTS LIST

- A. Base
- B. Support Poles x 2
- C. Torso Frame
- D. Shoulder Frame
- E. Head
- F. Costume
- G. Right Arm
- H. Left Arm
- I. Chest
- J. Hooded Cloak



UL Power Adapter *


* UL Power Adapter Spec
Input: 100 - 240VAC 50/60Hz
Output: 5.9V 1.5A



1. ASSEMBLING THE FRAME


NOTE: The longer end of the (A) Base goes towards the front. First, Assemble the (B) Support Poles to the (A) Base as shown, Assemble the (C) Torso Frame onto the (B) Support Poles as shown, and secure by aligning the quick-connect push buttons into the pre-drilled holes.

NOTE: The Speaker on the Function Control Box located on the (C) Torso Frame should be facing front.

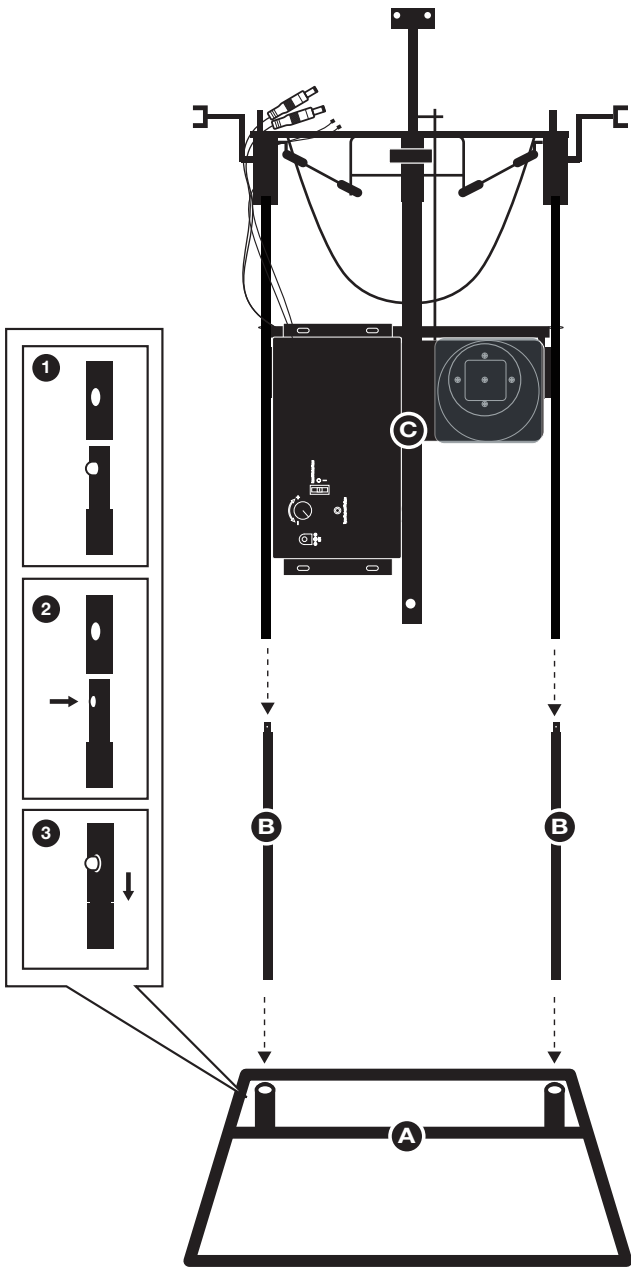

2. ASSEMBLING THE SHOULDERS AND HEAD


Attach the (D) Shoulder Frame into the slots located on the top of the (C) Torso Frame as shown, making sure the curved back of the (D) Shoulder Frame faces the back. Attach the (E) Head onto the support bracket with holes located on the (C) Torso Frame as shown.

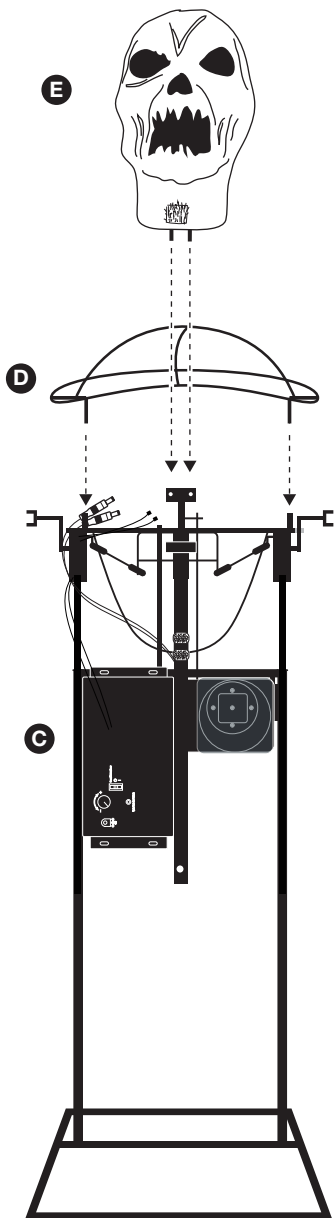

3. ELECTRONICS WIRING

Connect the cables from the (E) Head and (C) Torso Frame as shown.


Now, plug the UL Power Adapter into the input receiving jack marked “DC 5.9V” on the Function Control box and route the power cord down towards the bottom of the frame.

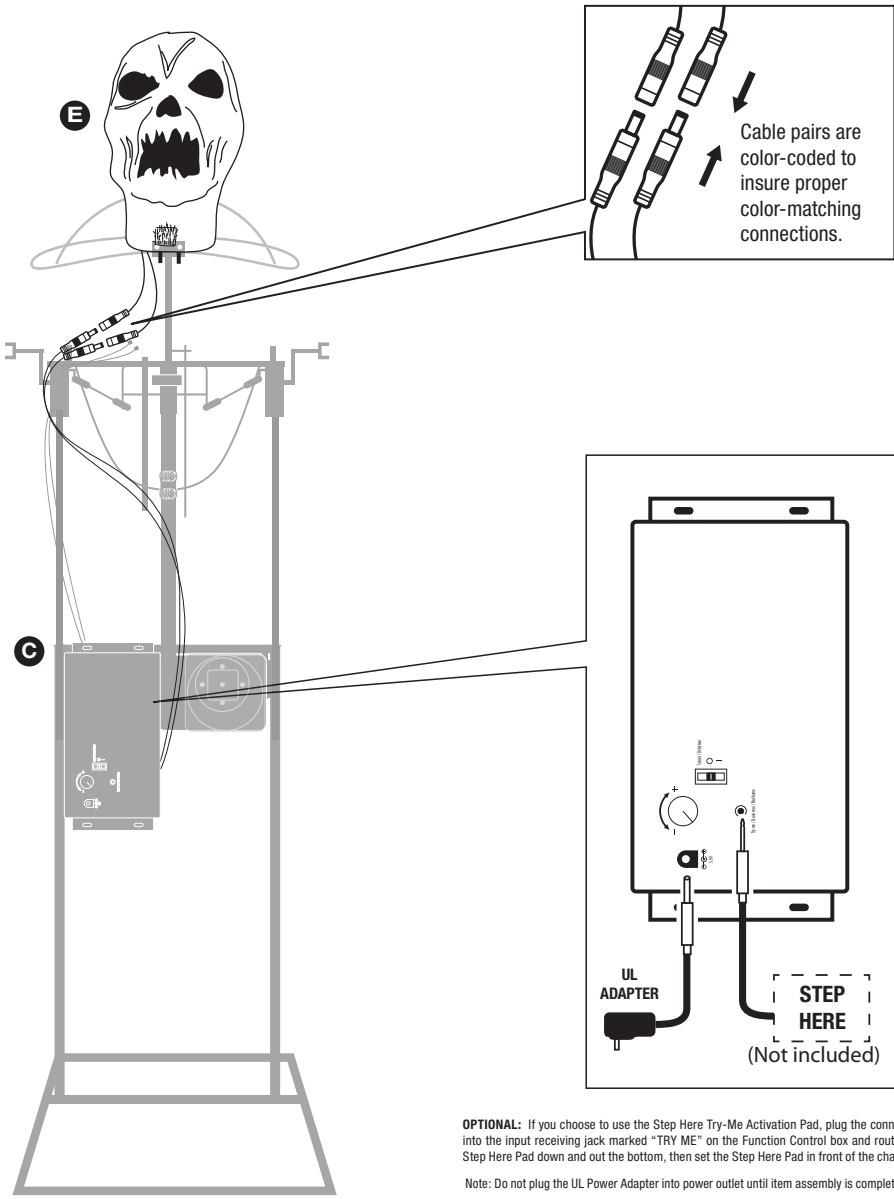

4. ASSEMBLING THE COSTUME AND ARMS

Pull the (F) Costume over the (E) Head and drape over the Assembled Frame as shown.

Guide the wire end of (G) Right Arm and (H) Left Arm through the corresponding sleeves of the (F) Costume and attach into the slots located on the (C) Torso Frame as shown in Figure 1.

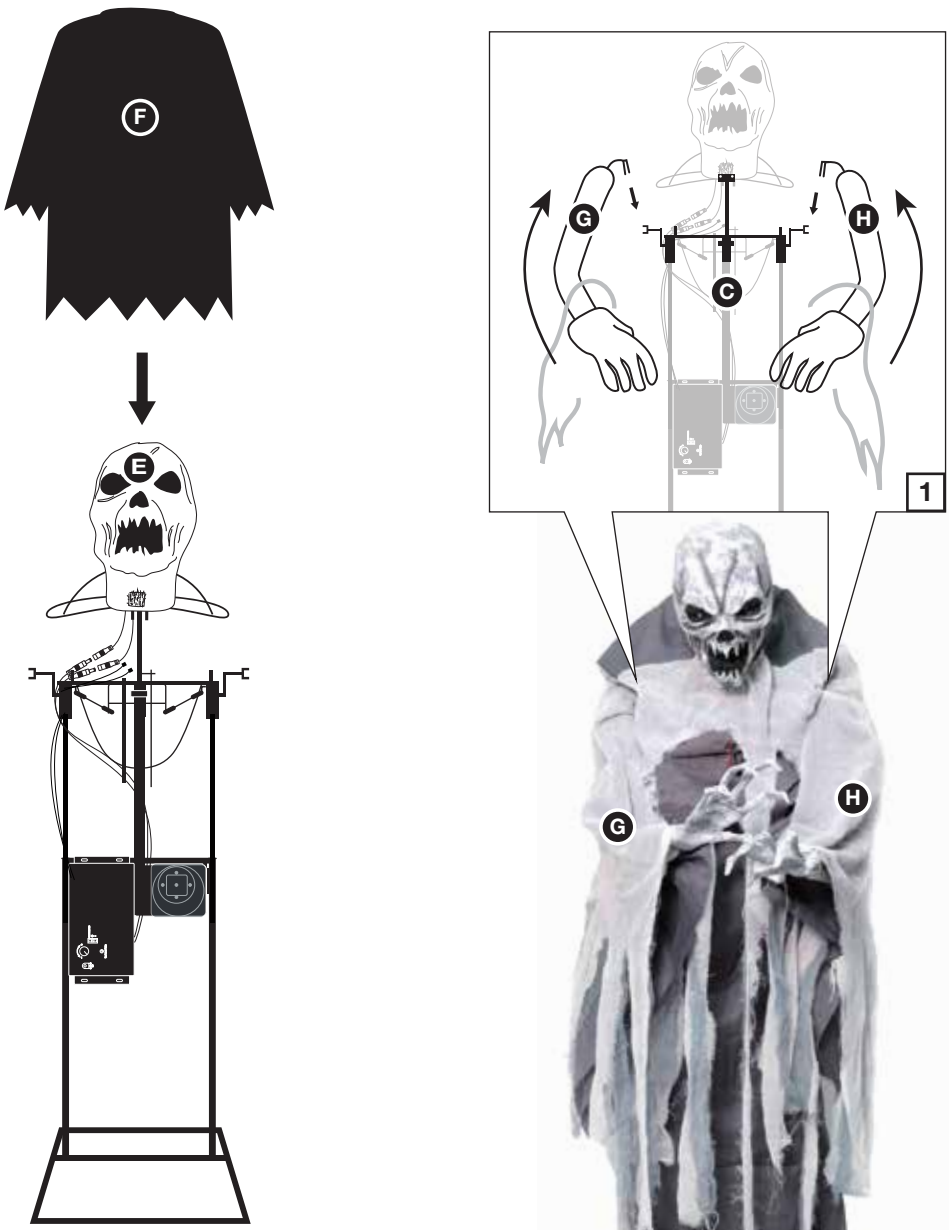

5. ASSEMBLING THE CHEST

Connect the cables from the (I) Chest and (C) Torso Frame as shown in Figure 1.

Set the (I) Chest into place by sliding the forked-hook into the center slot housing on the (C) Torso Frame as shown in Figure 2.



6. ADDING THE HOODED CLOAK AND FINAL COSTUME ADJUSTMENTS

Affix the hook and loop enclosures on the (F) Costume around the neck of the (E) Head to secure in place as shown in Figure 1. Affix the hook and loop enclosures at the end of the sleeves on the (F) Costume around the wrists of the (H) Left Arm and (G) Right Arm to secure in place as shown in Figure 2. Drape the (J) Hooded Cloak over the (E) Head, and then secure in place with the hook and loop enclosures located on the top of the (E) Head as shown in Figure 3.



Before connecting to the power, please be sure that bottom of the costume can not be blocked by the base, otherwise, the rising function will be affected. Style the costume, hooded cloak accordingly for best results.



OPERATION INSTRUCTIONS:

1. Plug the UL power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (C) Torso Frame, as desired.

2. Settings:

Sensor: This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.

○/OFF/Try Me: This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Not Included). The item will operate for one audio cycle with each Try Me activation. Refer to Assembly Instructions Step 3 for further details.

I / ON : This switch mode will continually operate the lights, sound, and animation of the item.

Volume Control: Raise or lower the volume using the volume control turn dial, turn and click all the way down to turn the volume off.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.
CAN ICES-3 (B)/NMB-3 (B)

