

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Support and E-Warranty Certificate www.vevor.com/support

VEGETABLE CUTTER INSTRUCTION MANUAL


We continue to be committed to providing you with tools at a competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represent an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and do not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when placing an order with us if you are actually saving half compared to the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

VEGETABLE CUTTER

MODEL:JKC-300

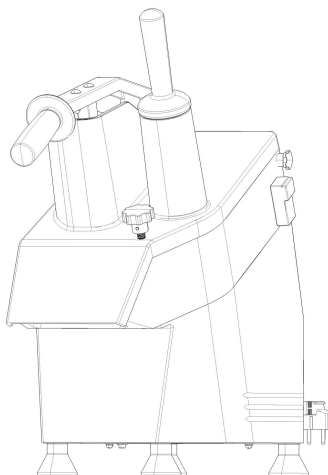

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

 CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Symbol	Symbol Description
	Warning - To reduce the risk of injury, user must read instructions manual carefully.
	This symbol, placed before a safety comment, indicates a kind of precaution, warning, or danger. Ignoring this warning may lead to an accident. To reduce the risk of injury, fire, or electrocution, please always follow the recommendation shown below.
	Danger! Risk of personal injury or environmental damage! Risk of electric shock! Risk of personal injury by electric shock!
	Warning- Be sure to wear ear protectors when using this product.
	Warning- Be sure to wear eye protectors when using this product.
	Warning- Be sure to wear gloves when using this product.
	Correct Disposal: This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.

Important Assurance



WARNING: Before operating this device, please read this instruction manual completely and keep it handy for future reference.

Always follow basic safety precautions when using these devices. These include:

1. **READ ALL OPERATING INSTRUCTIONS AND PRODUCT SAFETY LABELS! FAILURE TO FOLLOW ALL INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE!**
2. **CHECK FOR DAMAGED PARTS:** Before using the machine, check whether all parts work normally and perform the expected functions. Check for alignment, binding and installation of moving parts. and any other conditions that may affect the operation. If any parts are damaged, call the Customer Service number shown in this manual.
3. Always unplug power cord from outlet when not in use, before putting on or taking off parts or accessories, and before cleaning.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. **NEVER LEAVE THE MACHINE UNATTENDED WHILE IT IS RUNNING!**
6. **ALWAYS USE THE PROVIDED STOMPER, AND NEVER FEED FOOD BY HAND. KEEP YOUR FINGERS CLEAR OF THE AUGER AND CUTTING BLADES AT ALL TIMES .NEVER REACH INTO THE CUTTER.**
7. **Wait until all moving parts have stopped and turn off power before removing any part from the machine.**
8. **DO NOT** operate Vegetable cutter, or any other electrical equipment, with a damaged cord or plug or after the unit malfunctions. **DO NOT ATTEMPT TO REPLACE THE CORD.** Call Customer Service to arrange to return the machine for examination, repair, or adjustment.
9. **DO NOT** use outdoors. This product is intended for **INDOOR USE ONLY.**
10. **DO NOT** pull the power cord to disconnect.

11. **DO NOT USE WITH EXTENSION CORD.** Always plug directly into a grounded wall receptacle.
12. Place the machine on a firm and stable surface. Ensure that the grinder is not placed near the edge of the worktop, where it can be easily pushed off or fall.
13. To reduce the risk of unintentional starting, check that the control is OFF before plugging the cord into wall outlet. To disconnect, turn the controller to OFF, then remove plug from wall outlet.
14. **NEVER** plug the machine in where water may flood the area.
15. To protect against the risk of electrical shock, **DO NOT** submerge the machine in water or other liquids. Be sure the grinder is disconnected from the power source before cleaning.
16. The use of attachments or parts not specifically recommended or sold by the manufacturer for this grinder will void the warranty and may cause fire, electric shock or injury.
17. **DO NOT** use the machine for other than intended use.
18. **DO NOT** attempt to cut bones, nuts or other hard items. It only use for fruits and vegetables.
19. The Manufacturer disclaims any responsibility in the case of improper use of the machine. Improper use of the machine voids the warranty.
20. **DO NOT REMOVE WARNING LABELS FROM THE MACHINE.** Doing so will void the product warranty and may result in serious personal injury.
21. This appliance must be grounded to protect the operator from electrical shock. This machine uses a grounded, three prong plug that should be connected directly to a grounded 120V(US)/230V(EC), three prong grounded wall outlet receptacle. Grounded plugs are used on metal-encased electric appliances to protect from an electric shock. **DO NOT** change or alter the plug in anyway. **NEVER** break off a grounding prong from a 3-conductor plug. Doing so voids the warranty and may result in electric shock.
22. Type Y attachment: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SAVE THESE INSTRUCTION!

Configuration & Accessories



	H3*1pc	Shredder disc-3mm
	H4*1pc	Shredder disc-4mm

	H7*2pcs	Shredder disc-7mm
	P2*1pc	Slicing disc-2mm
	P4*1pc	Slicing disc-4mm
Pusher bar	1pc	
Brush	1pc	
Rubber Gloves	10 couple	

Technical Parameter

RATINGS			Capacity	Continuous working time
110V/60Hz	280r/min	550W	≥300KG/H	≥4hours
230V/50Hz	270r/min			

Operation Instructions

1.Install the handle

After unpacking, place the machine on a horizontal table top and install the handle at the end of the handle of the machine.

2. Setting the discs

Rotate the knob and open the cover. Set the plastic ejecting disc first, then the disc elected for the cutting. Close the cover and reverse the rotation of the handle.

3. Use of the equipment

3.1 Connecting the power supply, the green button for starting the machine, and the red button for stopping the machine.

3.2 Lift the handle and set the food inside the opening, then close the handle press the green start button with your right hand, and with your left hand, lightly move the handle downwards until food is fully used up.

3.3 The machine starts automatically when the handle is closed. Repeat these operations until the food is fully used up. It is possible to use the two openings with a single disc. When two discs are used for cutting sticks and match-like food, the inlet opening set over the grid must be used. The smaller round opening is used to slit vegetables as carrots, vegetable marrows, and so on.

WARNING: NEVER USE THE HAND, BUT PRESS THE VEGETABLE WITH THE PESTLE SUPPLIED.

4. Release and replacement of the discs

Turn the knurled handle and lift the cover. Turn the disc anticlockwise and cover the cutting edge with appropriate material as (rubber, fabric, etc), the lift it by setting your hand under the disc. Simply lift the discs to remove the grid disc for dice cutting, or the disc for stick cutting with the plastic disc.

Clean and Maintenance

1. Before cleaning or maintenance operations, ensure the mains switch is off, and the supply plug is disconnected from the mains. Accurately clean the equipment and the discs daily for the correct operation and life of the equipment.

2. After each use, it is necessary to ensure the blade is clean. The clean water can be washed so the blade remains clean and is not corrupted. The service life of the

blade is prolonged.

3.Clean the machine, and above all where the discs rest, with a cloth or a sponge wet with warm water, accurately remove all wastes to prevent the discs from changing their position.

4.Clean the surfaces with water and soap, alcohol, detergents without abrasives or substances based on chlorine or soda.Never use abrasives, steel wool, or similar products, as they may damage the paint.

5.The equipment belongs to precision machining machine. Therefore, self-modification and equipment recreation will affect the use, which belongs to artificial damage.

6.The blade belongs to the natural wear part of the equipment. After cutting a certain time and quantity of ingredients, the blade will be worn. It is necessary to timely purchase the blade with the corresponding specification for replacement (Improper operation or cutting too hard ingredients will also damage the blade).


7.Periodically check whether there is a loose set screw, timely tighten the screw, and maintain the machine.

8.Should the machine be idle for a long time, disconnect the main wall switch and clean the machine and its accessories accurately. Use white Vaseline oil (or similar products) to protect all the machine's elements.These products air mainly made up of oily and detergent substances. They are now available in spray cylinders for the accessible applicant, besides giving a glossy aspect to the aluminium magnestism alloy, prevent moisture and dirt from getting inside the machine, hence, its corrosion. We advise covering the machine with a nylon (or similar) cloth.

Case Of Failures

When the white pilot light on the panel in on, but the machine does not start, check to ensure that the handle and the cover are closed. In this way, both the safety micro switches. The safety micro switches prevent the machine from starting whenever all securities are not activated.In the case of failures, disconnect the main wall switch and warn the maintenance service or the skilled personnel. Neither start nor tamper with the equipment personally.

Explosion Diagram

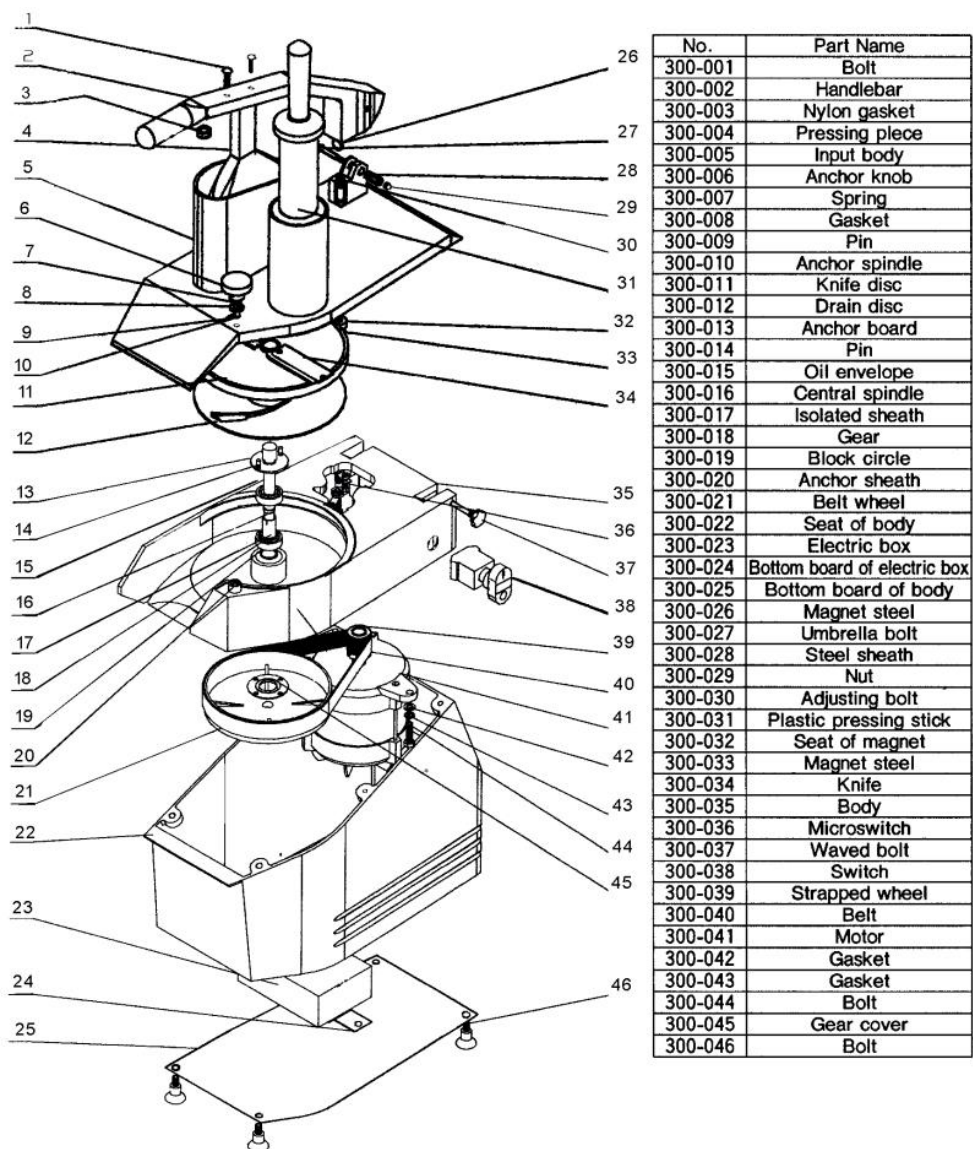

Environmental Protection



■ This product is subject to the provision of European Directive 2012/19/EC.

The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked with this symbol cannot be discarded with normal household waste but must be taken to an electrical and electronic equipment collection point for recycling.

MADE IN CHINA

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Support and E-Warranty Certificate www.vevor.com/support