

**HOME**  
**DECORATORS**  
COLLECTION®

 
**⚠ WARNING: DO NOT USE A DIMMABLE OUTLET OR DIMMER SWITCH WITH THIS PRODUCT.** Use of a dimmable outlet or dimmer switch can cause overheating and/or melting of the product and pose a potential burn hazard.

**Item #1015231503**  
**Model #26LE31014**

## USE AND CARE GUIDE

---

### 7.5FT SMART GRAND DUCHESS TWINKLING BALSAM FIR LED PRE-LIT TREE

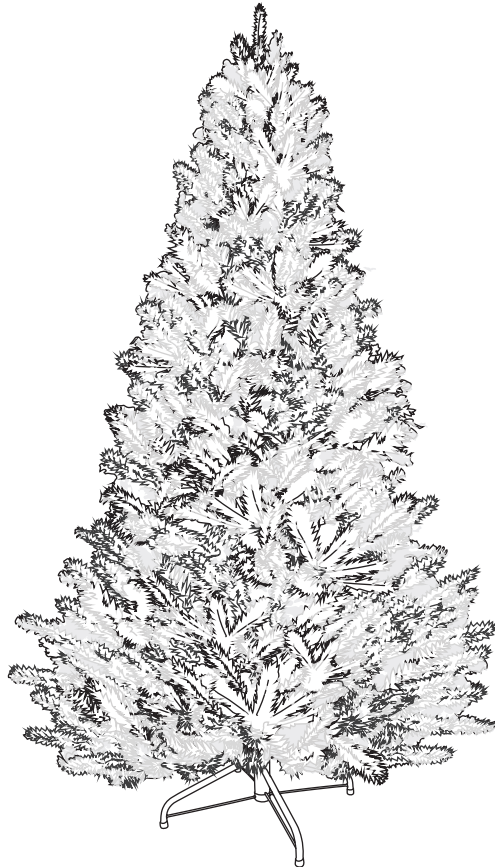

powered by   
**HUBSPACE™**  
SMART HOME PLATFORM

Questions, problems, missing parts?  
Before returning to the store, call Customer Service  
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

**1-877-592-5233**

**HOMEDEPOT.COM/HUBSPACE**

---

#### THANK YOU

*We appreciate the trust and confidence you have placed in HOME DECORATORS COLLECTION through the purchase of this 7.5FT SMART GRAND DUCHESS TWINKLING BALSAM FIR LED PRE-LIT TREE. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.  
Thank you for choosing HOME DECORATORS COLLECTION!*

## IMPORTANT SAFETY INSTRUCTIONS

When using electric products, basic precautions should always be followed including the following:

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- ☐ Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications; connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- ☐ This seasonal use product is not intended for permanent installation or use.
- ☐ Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- ☐ Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- ☐ Do not let LEDs rest on the supply cord or on any wire.
- ☐ Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- ☐ This is an electric product not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- ☐ Do not use this product for other than its intended use.
- ☐ Do not hang ornaments or other objects from cord, wire, or light string.
- ☐ Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- ☐ Do not cover the product with cloth, paper or any material not part of the product when in use.
- ☐ Read and follow all instructions that are on the product or provided with the product.

### SAVE THESE INSTRUCTIONS

### USE AND CARE INSTRUCTIONS

- ☐ Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the LED holders or enclosures, loose connections or exposed copper wire.
- ☐ When storing the product, carefully remove the product from wherever it is placed, including tree branches, or bushes to avoid any undue strain or stress on the product conductors, connections, and wires.
- ☐ When not in use, store neatly in a cool, dry location protected from sunlight.

### CAUTION

- ☐ To reduce the risk of electric shock, use only with the power-supply cord provided or with a cord set intended for indoor use only.
- ☐ Do not use a cracked, frayed, or damaged cord. Inspect the cord periodically.
- ☐ Do not abuse cord – Do not carry product by the cord or yank or pull it to disconnect from the outlet.
- ☐ Disconnect the product from the outlet when not in use.

Model No. TREE-7.5FT-S2250

## **Safety Information (continued)**

---

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Responsible Party - U.S. Contact Information:

Company: HOME DEPOT INC

Address: 2455 PACES FERRY ROAD ATLANTA, GA 30339

Customer service toll-free Number : For Hubspace call 1-877-592-5233

FCC MODEL #: DPSR18-S2250

 
Contains Transmitter Module FCC ID: 2AB2Q-LA02305

## Safety Information (continued)

**⚠ CAUTION:** Do not replace or modify any connectors on this product. Discard product if connector is damaged. Make sure connectors are fully inserted and any connector rings are twisted until completely secured such that the ring can no longer be turned and the two portions of the connector are completely assembled.  
Do not use a dimmer switch or install any additional Christmas lighting or ornamentation that is powered by a light bulb socket. Doing this may result in damage to your light string or cause personal injury. This action will result in a void of the limited warranty of this product.

### BATTERY INSTALLATION:

- ☐ Carefully remove the remote from the packaging.
- ☐ Remove the slide plate located on the back of the remote control.
- ☐ Insert 2 x AAA batteries by aligning the appropriate (+/-) markings accordingly.
- ☐ Replace the slide plate on the back of the remote control.

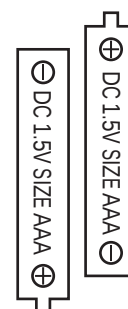

### ⚠ CAUTION:

- ☐ Do not operate this product while it is still in the packaging.
- ☐ Never mix old and new batteries (OR different types of batteries).
- ☐ Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-MH, Ni-CD, etc.) batteries or equivalent.
- ☐ Battery is to be inserted with the correct polarity.
- ☐ 2 x AAA batteries are included.
- ☐ Exhausted battery is to be removed from the battery holder.
- ☐ The supply terminals are not to be short circuited.
- ☐ Do not throw battery into fire.
- ☐ Battery should never be left in the product when not in use for long periods of time.
- ☐ Never allow any plastic part to come in contact with a source of heat or flame.
- ☐ This is a Christmas decoration. This is not a toy. Keep out of the hands of small children.

### DISPOSAL AND RECYCLING:

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. This applies to the battery also.

## Warranty

### LIMITED WARRANTY

This product is warranted to be free from defects in workmanship and materials for up to three seasonal years from date of purchase. If it fails to do so, please contact the Customer Service Team at 1-877-592-5233 or visit [www.HomeDepot.com/Hubspace](http://www.HomeDepot.com/Hubspace).

 **WARNING: DO NOT USE A DIMMABLE OUTLET OR DIMMER SWITCH WITH THIS PRODUCT.**  
Use of a dimmable outlet or dimmer switch can cause overheating and/or melting of the product and pose a potential burn hazard.

Questions, problems, missing parts? Before returning to the store,  
call Customer Service  
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

**1-877-592-5233**

**[HOMEDEPOT.COM/HUBSPACE](http://HOMEDEPOT.COM/HUBSPACE)**

Retain this manual for future use.

Document #: 26LE31014

## Pre-Assembly

### BEFORE YOU BEGIN

We recommend wearing proper clothing in order to prevent scratches that may occur during the assembly process. Carefully unpack the contents from the tree's carton. If any part is missing or damaged, do not assemble this product. Contact Customer Service.

 
### ASSEMBLY DETAILS

Estimated assembly time: 5 minutes

Number of people required: 1-2

No tools are required

### PACKAGE CONTENTS

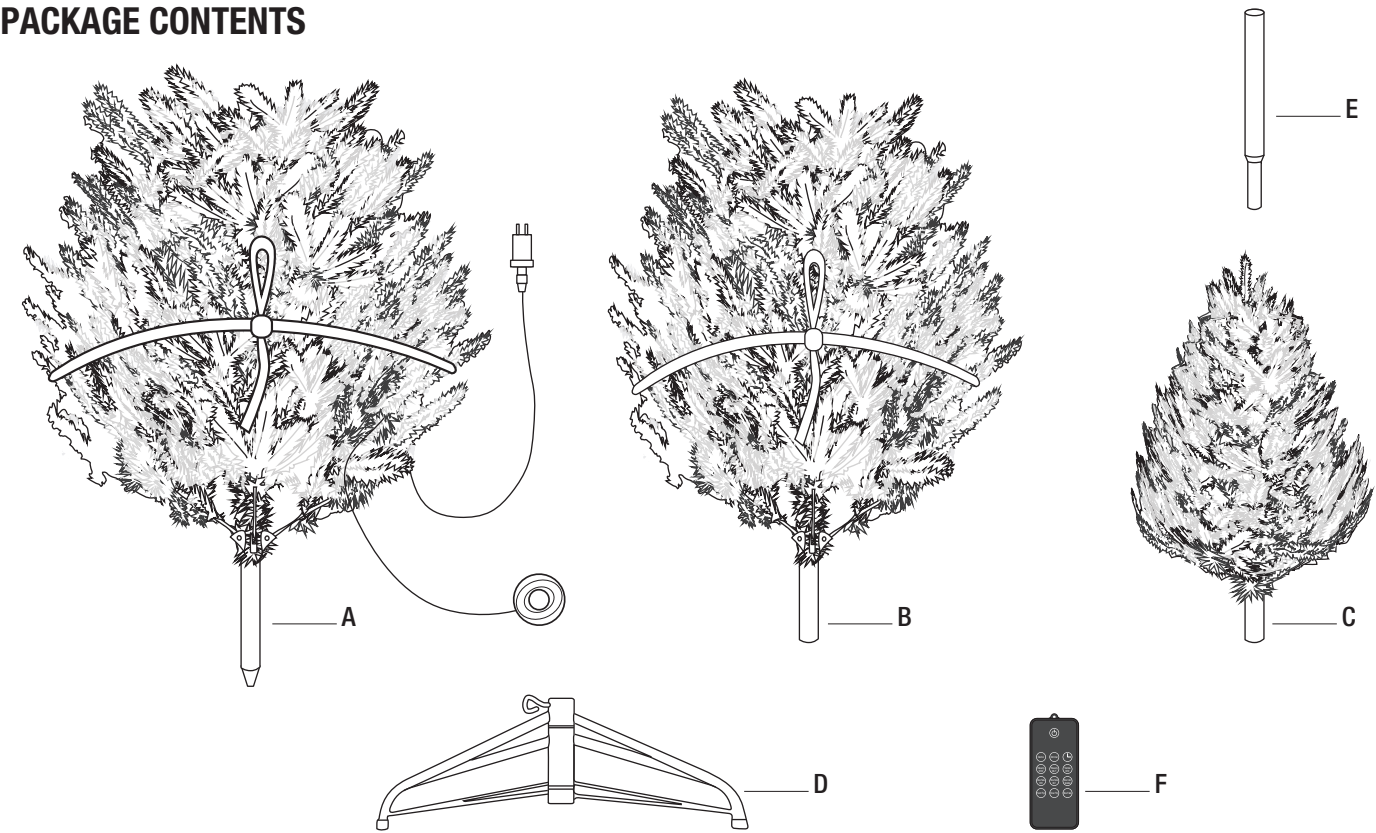


| Part | Description                                                                                          |
|------|------------------------------------------------------------------------------------------------------|
| A    | Tree Section A - Labeled "A"<br>(Attached - A 10 function push button foot pedal with cord and plug) |
| B    | Tree Section B - Labeled "B"                                                                         |

| Part | Description                                      |
|------|--------------------------------------------------|
| C    | Tree Section C - Labeled "C"                     |
| D    | Tree Stand (With single eye-bolt)                |
| E    | Optional - Tree top support rod                  |
| F    | Remote Control (With 2 x AAA batteries included) |

## Assembly
 
### 1 Assembly of the Tree Stand


- Remove the tree stand (D) from the plastic bag, loosen the eye bolt and open the tree stand (D) to form an "X".
- Align the hole for the insertion of the eyebolt.
- Insert the eyebolt and begin threading in a clockwise direction for a couple of rotations only; leaving enough room for the tree's pole from section (A) to be inserted into the assembled stand.
- Place the tree stand (D) in its desired location; as once the tree is fully assembled, it may become too difficult to move and relocate.

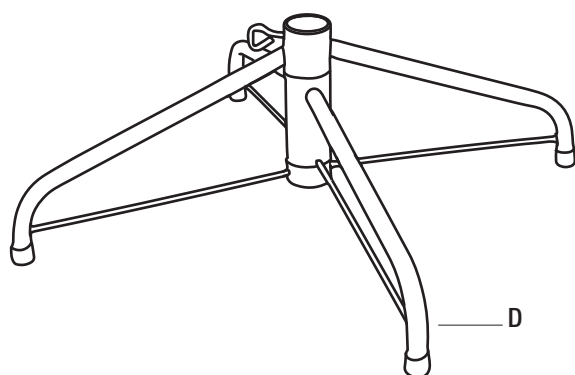

### 2 Assembly of the Tree

- Locate the bottom section of the tree (A) which is identified by a label on the outer branches marked "A".
- Remove the protective plastic cap from the end of the pole, (that is pinched to a point), and place that end into the tree stand (D). Be sure that the pointed end of the pole extends to the bottom of the stand.
- Now tighten the eyebolt on the tree stand (D); being careful not to over-tighten.
- Untie and remove the fabric strapping bounding the branches upright. Caution: DO NOT CUT.
- Gently guide the branches downward into place.
- Beneath the canopy of section (A), contains a 10 function push button foot pedal with cord and plug.

 Remove the twist-tie binding the cord together and insert the plug into a working electrical outlet. Section (A) will now be lit. If section (A) fails to light - press the 10 function push button foot pedal - as it may be in the "Off" position.

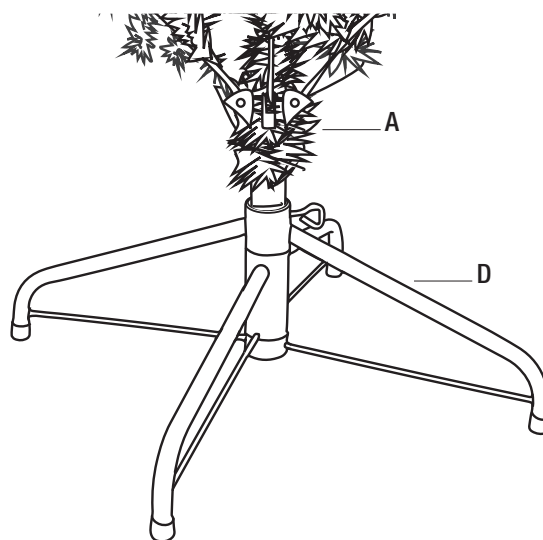

## Assembly (continued)

### 3

#### Push button foot pedal operation:

 
- The push button foot pedal is provided for the tree's On/Off operation; as well as for operating the tree's 10 available lighting functions.

Simply push the foot pedal's button to select your favorite color and or lighting function.

#### POWER POLE TECHNOLOGY


NOTE: Your tree has been designed with Power Pole technology; allowing for each of the tree's remaining sections to light up automatically, upon a firm insertion of each lettered section.

- Locate the next section of the tree which is identified by a label on the outer branches marked (B).
- Remove the protective plastic cap from the end of the pole on section (B); insert that end onto the top of the pole of section (A).

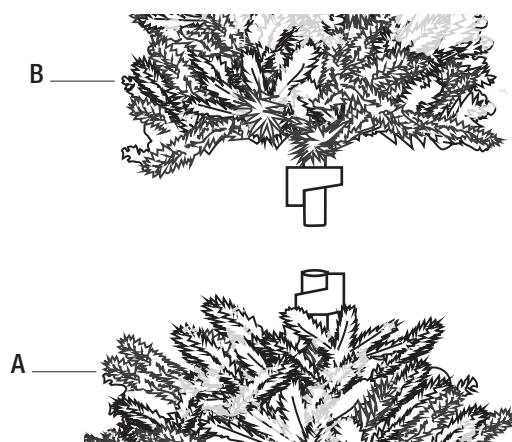

### 4

 - Once section (B) is fully inserted downward into section (A); both section (A) and section (B) will now be lit.
- Again, untie and remove the fabric strapping bounding the branches upright. Caution: DO NOT CUT.
- Gently guide the branches of section (B) downward into place.
- Locate the top section (C) of the tree which is identified by a label on the outer branches marked (C).
- Insert the top section (C) onto the top of section (B).
- Once section (C) is fully inserted downward into section (B); your entire tree will now be lit.
- Gently guide the branches of section (C) downward into place. Assembly is now completed. Proceed to spread & fluff the branch tips, to further enhance the tree's appearance, if needed.
- Optional: A "Tree top support rod" has been provided to aid in the support of a lit or non-lit tree top. Note; A downward insertion of this support rod into a metal sleeve, atop section (C), is required.

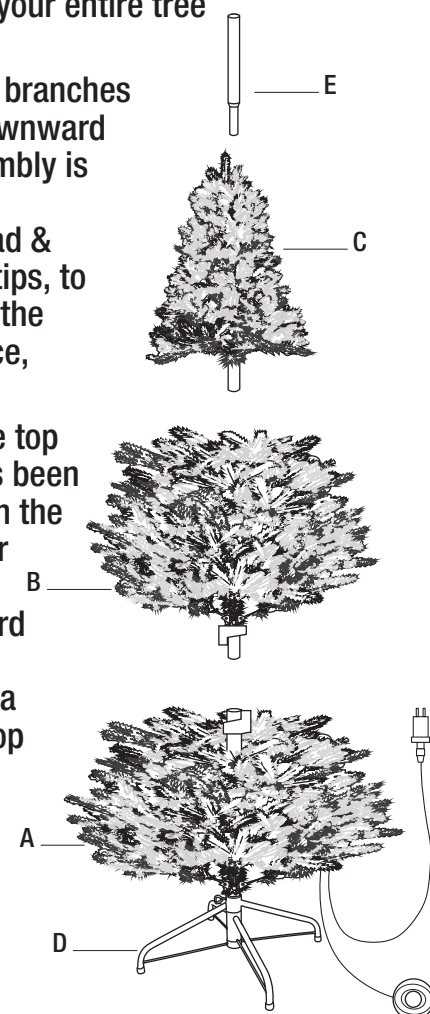

## Additional Features

# 5

### REMOTE CONTROL OPERATION

Your Pre-Shaped & Pre-Lit LED Christmas Tree's 10 functions are controlled by the use of the remote control (F) provided, by the push button foot pedal, or by your smartphone or tablet - by downloading the App!



### SELECTING COLOR & FUNCTION

Simply press a desired lighting function button  
- Per the 10 listed lighting functions below.

1. Demo
2. Steady Warm White
3. Steady Multi
4. Twinkle Warm White
5. Slow Fade Warm White
6. Slow Fade Multi
7. Slow Color Variable
8. Fast Flip Warm White to Multi
9. Slow Flip Warm White to Multi
10. Slow Fade Warm White to Multi

## Operation

# 6

### HUBSPACE - APPLICATION SETUP

1. Download the Hubspace™ app from the App Store or the Google Play Store.
2. Sign in if you have a Hubspace account, or register to create an account and then sign in.
3. Make sure your tree is connected to power.

#### NOTE:

 
- This Hubspace product requires a 2.4GHz Wi-Fi network, which most routers provide.
- If you do not see your Wi-Fi network name when you attempt to connect your product, please check your router settings or move your product closer to your Wi-Fi router.

4. Tap the “+” button in the upper-right corner of the app screen to add your product.

#### NOTE:

- Bluetooth access is required for product setup. Android phones must also enable Location services to allow for Bluetooth scanning.

5. Scan the QR code located on either the wire or the Quick Start Guide.

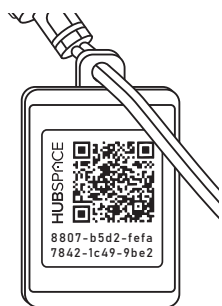

#### NOTE:

- The QR code can be found on the wire as indicated in the diagram above or on the Quick Start Guide.
- The QR code must be scanned from inside the Hubspace app.
- If the QR code cannot be scanned, you can enter the code manually. Tap "Scan problem? Enter the code" and follow the instructions.
- If you cannot locate the QR code or are having trouble scanning the QR code, press the foot pedal for 5 seconds to put the device into setup mode and follow the app instructions or move your product closer to your Wi-Fi router.

6. Control your Grand Duchess product using the Hubspace app.

- Change the brightness and select preset options.
- Set on/off timer.
- Create schedules for product to turn on/off in selected modes.
- Create groups of trees so they can be controlled at one time.

7. Set up your Voice Assistant.

- You can connect your smart Grand Duchess to Google Assistant and Alexa from the Hubspace app. Or, you can sign in to Alexa app or Google Assistant and connect to your Hubspace products from there.

## Additional Features (continued) | Disassembly & Storage

# 7



### DIMMER FEATURE:

- The Dimmer button enables for the selection of your preferred level of brightness - low, medium or high.



### TIMER FEATURE:

- Press the “Timer” button; the trees lights will flash WARM WHITE 3 times – Indicating that the 6 hour “On” / 18 hour “Off” timer has now been activated.
- Note: The tree’s lights will automatically resume back to the “On” position – 24 hours from when it was initially activated.
- Press the “Timer” button again, the trees lights will flash MULTI 3 times – Indicating that the timer feature has now been deactivated.
- Note: The trees On/Off operation is now controlled by either the manual operation of the remote control, foot-pedal control or by the App!

- Gently remove the plug from its electrical outlet, and carefully bind the cord which contains the 10 function push button foot pedal and plug.

- Beginning with the tree’s top section; lift each section straight up from the section below, and continue working downward.

NOTE: You may have to slightly wiggle each section as you lift each section upward.

- To remove the bottom and final section; loosen the eyebolt by turning in a counter-clockwise direction and lift section (A) from the support collar of the tree stand.

- Gently fold the branches of each section upward, towards the center and position in the storage container.

NOTE: With the exception of the tree’s “top” section; by holding each section upside down; the branches will collapse downward, due to the hinging, aiding in the packing of each section into the storage container.

 
 
- Unthread the eyebolt from the tree’s stand and fold together; placing in the storage container.
- Replace the plastic protective caps on the pole’s ends before placing in carton.
- It is recommended to always store the tree in a cool, dry location protected from excessive exposure to heat or sunlight.

NOTE: Store your remote control in a SAFE & DRY location and remove the batteries from the remote control before storage.

NOTE: ALTHOUGH THE LED LIGHT STRINGS ON THE TREE ARE RATED FOR INDOOR OR OUTDOOR USE; THE COMBINATION OF THE TREE WITH THE LED LIGHTS IS FOR INDOOR USE ONLY.

## Troubleshooting

- **NOTE:** Your Pre-Shaped & Pre-Lit LED Christmas Tree's 10 functions are controlled by the use of the remote control (F) provided, by the push button foot pedal, or by your smartphone or tablet - by downloading the App!
- **NOTE:** Your Tree's 10 color & function lighting combinations will continually run in "Demo" mode, until a manual selection is made by the use of the remote control, push button foot pedal or by the APP!
- **NOTE:** By reducing the distance from your tree; you may achieve better remote control reception.
- **NOTE:** Replacement parts can be acquired through our customer service center at 1-877-592-5233.
- If the tree does not illuminate press the on/off button  on your remote control. If failure to light persists, the battery may need to be replaced. Insert 2 x AAA batteries.
- If the tree fails to light due to a damaged or defective remote control; please resort to the 10 function push button foot pedal or to App operation until a new remote control can be provided.
- If failure to light persists, press the 10 function push button foot pedal; as it may be in the "Off" mode.
- If an individual lettered tree section does not illuminate, remove each section and then reinsert as instructed, to ensure the electrical connection is made.
- If a light set, section or area fails to light. Simply check the coaxial connections - along the entire length area of the Quick Set® pole.
- Always ensure that the electric outlet to be used; is functioning & working as it is intended.
- **NOTE:** A SPECIALTY NON-REPLACEABLE LED HAS BEEN APPLIED TO YOUR PRE-LIT TREE; IN THE CASE THAT A INDIVIDUAL LED BULB BURNS OUT, THE REMAINING LED BULBS WILL CONTINUE TO SHINE.
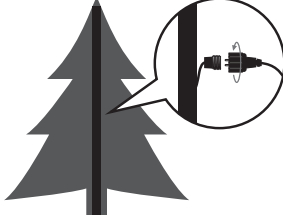
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                               |                                                                                                                                                                                                 |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>A PRE-LIT TREE SECTION IS OUT?</b></p>  <p>Firmly insert each section downward.</p>                                                                                                                                                                                                                                                                                                                                                                             | <p><b>THE TREE IS JUST NOT FULL ENOUGH?</b></p>  <p>Simply spread the branch tips upward and outward.</p> | <p><b>A LIGHT SET OR AREA IS OUT?</b></p>  <p>Simply check the connections along your Quick Set® pole.</p> |
| <p><b>YOUR CHOICE:</b><br/><b>USE THE REMOTE OR HUBSPACE APP!</b></p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="703 1944 871 2196">  <p>Remote included in the polybag.</p> </div> <div data-bbox="934 1944 1176 2196">  <p>Download the Hubspace app and scan the QR code to unlock smart features and control from anywhere</p> </div> </div> |                                                                                                                                                                                               | <p><b>Concerns/ Questions?</b></p> <p><b>Please Call</b></p> <p><b>1-877-592-5233</b></p>                                                                                                       |