


USE AND CARE GUIDE


3.5ft ANIMATED LED R2-D2

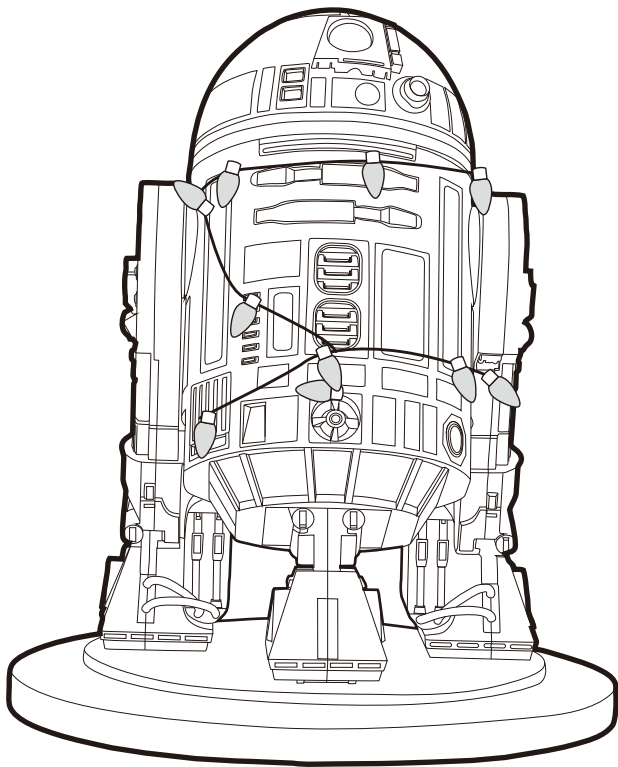

Need help troubleshooting or looking for replacement parts?
Visit SVIservice.com for tips, tricks, and to shop parts.
For additional support, contact Home Accents Holiday Customer Service:
Mon-Fri: 8 a.m. - 7 p.m. EST Sat: 9 a.m. - 6 p.m. EST
1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM

PARTS LIST


- A. Platform x 1
 - B. Platform Supports x 2
 - C. Body x 1
 - D. Left Leg x 1
 - E. Right Leg x 1
 - F. Head x 1
 - G. Eye x 1
 - H. Lights x 1
 - I. Screws x 3
 - J. Adapter x 1
- Power Adapter * Spec
Input: 100-240V~50/60Hz
Output: 5.9V $\overline{\text{---}}$ 3.0A
Wattage: 17.7W

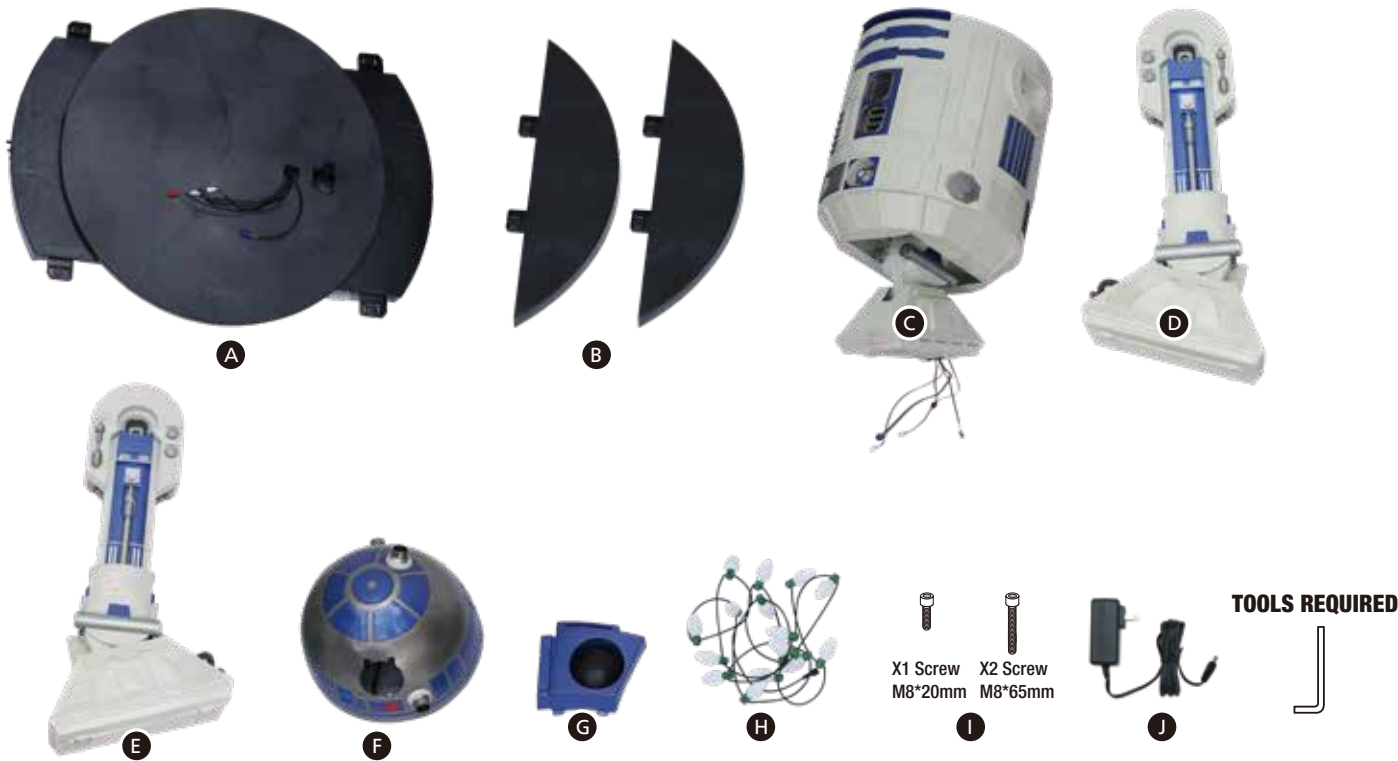


TOOLS REQUIRED



NOTE: Throughout the instructions, Right and Left are relative to the character.

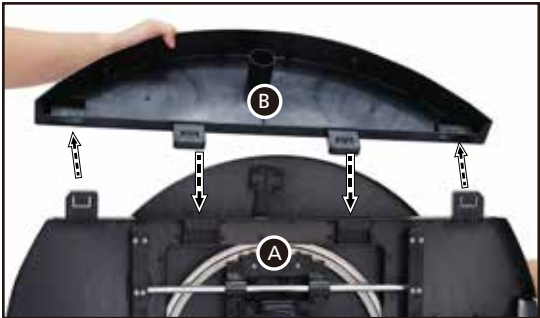


BACK

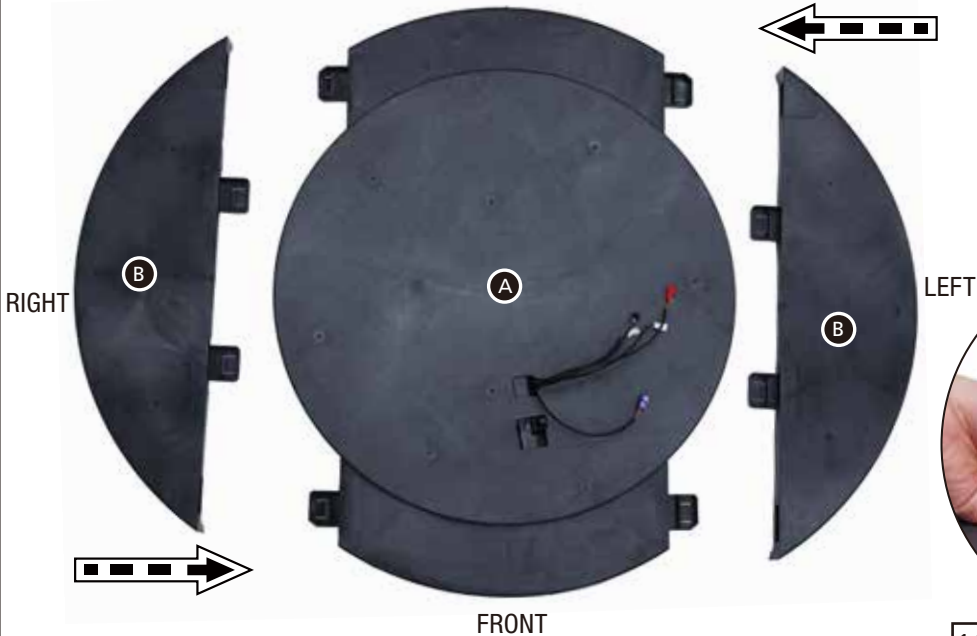

1.1


Cable pairs are color-coded to ensure proper color-matching connections.

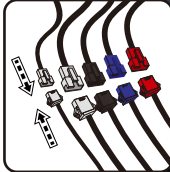

NOTE: Tuck the excess cables into the cavity available at the bottom of the Body (C).





2.1

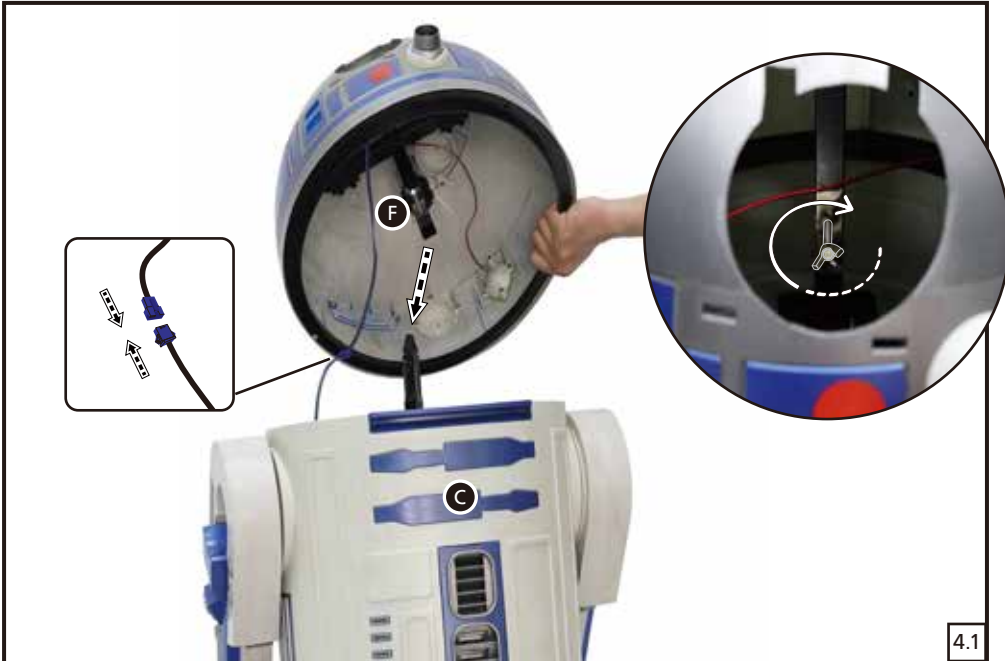

YOUR 3.5FT ANIMATED LED R2-D2 IS NOW FULLY ASSEMBLED. PLUG IN AND TURN ON TO LET THE FUN BEGIN!



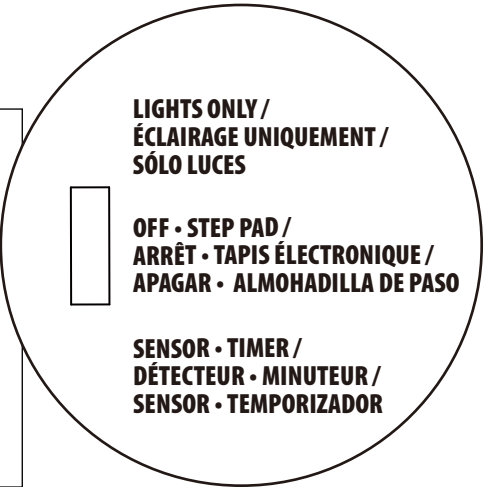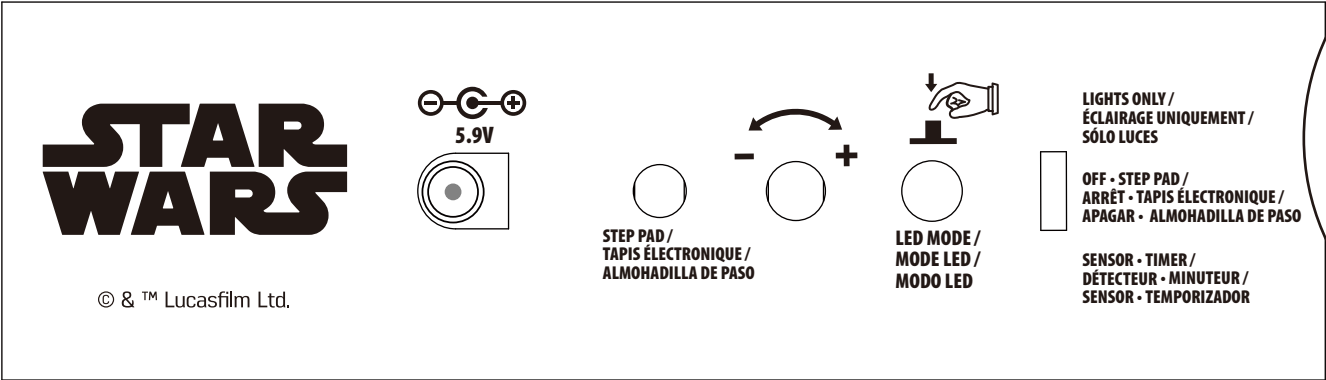

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the Platform (A), as desired.

2. Settings:

LIGHTS ONLY / ÉCLAIRAGE UNIQUEMENT / SÓLO LUCES	This setting will activate the lights of the item. This setting does not have any animation or sound.
OFF • STEP PAD / ARRÊT • TAPIS ÉLECTRONIQUE / APAGAR • ALMOHADILLA DE PASO	This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Not Included). The item will operate for one activity cycle with each Try Me activation. Otherwise, the item will stay off.
SENSOR • TIMER / DÉTECTEUR • MINUTEUR / SENSOR • TEMPORIZADOR	This switch mode will activate SENSOR mode for 6 hours followed by a deactivated period of 18 hours. This cycle will continue indefinitely unless the setting is changed. During the 6-hour active period, the Infra-red (IR) sensor can be triggered. If the Infra-red (IR) sensor is activated, the prop will activate for one activity cycle which includes animation and sound. The lights will stay on indefinitely throughout the 6-hour active period even when the sensor is not triggered. The infra-red (IR) sensor has a range of up to 4 m/13 ft and will activate when someone comes within an 80-degree angle from left to right as well as from above or below.
LED MODE / MODE LED / MODO LED	LED Mode 1 – Bulbs will light up with red, yellow, green, and blue lights. LED Mode 2 – Bulbs will light up with orange and purple lights
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.

2. Please assemble item according to instructions. Connect all wires according to matching color.

3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep flammables away from the adapter, as it heats up during operation.

Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

CAN ICES (B) / NMB (B)

IMPORTANT TIPS:

- The product should be placed on the flat floor
- Ensure that the item's adapter is plugged in at the function control box and in the wall.
- Ensure that the switch on the function control box is on the desired setting.
- If not functioning properly (Platform (A) doesn't turn or move prop, head doesn't turn, bulbs don't light up), ensure that cables are connected.
- Be sure nothing is blocking movement or caught in moving parts.
- Ensure that the floor or surface that the item sits on is flat and level.
- Ensure that the volume is not all the way down.



Need help troubleshooting or looking for replacement parts?
Visit [SVlservice.com](https://www.svlservice.com) for tips, tricks, and to shop parts.
For additional support, contact Home Accents Holiday Customer Service:
Mon-Fri: 8 a.m. - 7 p.m. EST Sat: 9 a.m. - 6 p.m. EST
1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM