



With your inspiring rating, COSTWAY will be more consistent to offer you **EASY SHOPPING EXPERIENCE, GOOD PRODUCTS** and **EFFICIENT SERVICE!**

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen **EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE** und **EFFIZIENTEN SERVICE** zu bieten!

Avec votre évaluation inspirante, COSTWAY continuera à fournir une **EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ** et un **SERVICE EFFICACE !**

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle **EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS** y **SERVICIO EFICIENTE.**

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti **ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI** e **SERVIZIO EFFICIENTE!**


Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze **WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY** i **SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.**

US office: Fontana

UK office: Ipswich

DE office: FDS GmbH, Neuer Höltigbaum 36, 22143 Hamburg, Deutschland

FR office : 26 RUE DU VERTUQUET, 59960 NEUVILLE EN FERRAIN, FRANCE

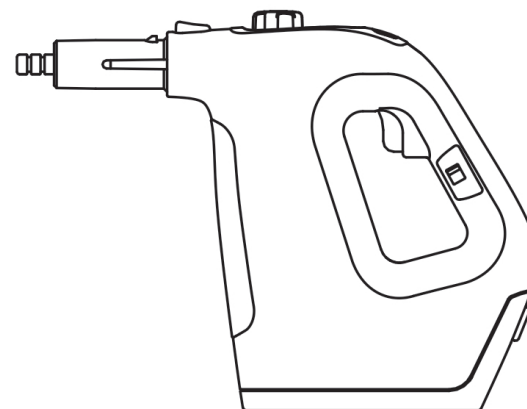

**USER'S MANUAL**

**Handheld Steam Cleaner**

**ES10028US**



## Dear Customer:

Thank you for choosing our products. For your convenience and safe operation, please read the instructions carefully and follow the instructions below.

Due to product improvements, the products you received may not be exactly the same as the images on the instructions.

Please keep the manual to the user's easy-to-access place. If you transfer or give this product to other persons, please be sure to attach this manual.

This is a new type of household sanitary cleaning tool that uses high temperature, high pressure steam to clean and disinfect the home. It can be used to clean bathrooms, toilet utensils, glass windows, furniture, kitchen utensils, automobiles, etc. It can effectively remove dirt on walls and every corner of the floor, killing the invisible bacteria, it is a good helper for your home cleaning.

## Features

### 1.Advanced

Unique patented technology, using high temperature, high pressure steam to clean the floor, doors and windows and clothing, range hood, air conditioner, microwave oven, sanitary ware for surface sterilization, remove dust and bacteria, environmental sanitation. It prevents allergies and eliminates stubborn stains and oil stains. No chemical detergents are required, and there is almost zero damage to cleaning items. When people enjoy a clean and hygienic environment, they will not cause secondary pollution to the environment.

### 2.Safety

Highly sensitive temperature and pressure control system provides high temperature, high pressure steam at 125 °C ( 257 °F).

Empty heating protection design, when the heater is out of water, it can automatically cut off the power.

With automatic pressure leaking function safety valve, the machine automatically starts leaking pressure when the steam pressure in the machine is too high.

The heater and hose inside the machine are designed to be durable and can withstand 5 times the pressure of the machine during normal use. Even when the machine failed, it can avoid hurting users.

With double-layer insulated power cord and grounding-wired three wire plug, the inside electrical components of the machine are all grounded and safe to use.

## 3.Durable

The ultra-thick inner wall design of the aluminum alloy die-casting boiler enables rapid and good heating, high pressure resistance, and long service life of the machine.

## 4.Energy saving

The special heating tube and boiler are designed in a unified way, heating in all directions, with high thermal efficiency and more energy saving.

The double-layer shell structure can effectively prevent heat loss, which is environmentally friendly and energy-saving.

## 5.Convenience

Connect to the power, turn on the power switch to start heating; press the steam button, strong steam sprays out, easy to operate.

Equipped with a complete set of cleaning accessories, easy to assemble and disassemble, can be cleaned in a variety of occasions, and has strong adaptability (for more details, please refer to the accessories instructions).

## Precautions

Before using the multifunctional steam cleaner, please read all operating instructions.

Safe Tips: When the multifunctional steam cleaner is working, the sprayed steam is high temperature, please remind the user to use it carefully.

1. This is a household appliance. It is not recommended to be used for large-scale commercial or industrial purposes, or for purposes other than steam cleaning.
2. To extend the life of the steam cleaner, please use clean water, do not add any chemicals or solvent to avoid damage to the appliance.
3. This product cannot be used by unsupervised children.
4. Please ensure that the steam hole is without blocking.
5. Leather furniture or other furniture with non-high temperature resistant materials are not recommended to clean by the steam cleaner.
6. Before replacing the accessories, please turn off the power, to make sure that there is no steam coming out before replacing.
7. Before cleaning the product, please unplug the power cord, then clean it with a dry/wet cloth. Do not use alcohol, benzene or diluting agent etc. solvent to clean the surface of the appliance to avoid damage to the machine and affect its electrical performance.

## Warning:

To avoid fire, shock or burn etc. danger, please read the following notes carefully:

A. Do not share power socket with other electrical appliances while A. using the machine, to avoid the circuit overload.

B. Water or other liquid immersion is strictly prohibited.

C. To avoid power cord damage: please pull the plug by hand, do not directly pull the power cord; Be careful of sharp objects friction; Stay away from heat sources.

D. If the power cord, plug or product failed, please stop using it and contact professional after-sales service staff for repair.

E. Do not touch the plug or product body with wet hands.

F. Please cut off the power supply before you stop using the electric appliance.

G. When adding water, please use the original equipped water cup, and do not put the electrical appliance under the tap water.











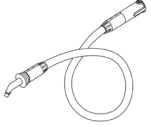


H. When using steam for cleaning, do not reverse the gun at random, do not direct the steam spraying to people or animals and plants, to avoid danger.

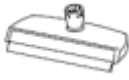I. Do not use the steam cleaner in the storage area of flammable and explosive materials.


J. Unplug the power supply and store the machine until the product has cooled down completely.

K. Please keep the product in place far away from children and less people to avoid accidents.

## Accessories:

Soft hose x1		Measuring x1	
Small towel x1		Glass brush x1	
Big nozzle x1		Stainless brush x1	
Nylon brush x3		Extension tube x3	
Brush connector x1		Floor brush x1	
Glove x1		Brush towel x1	
Funnel x1			


## Steam cleaner structure diagram

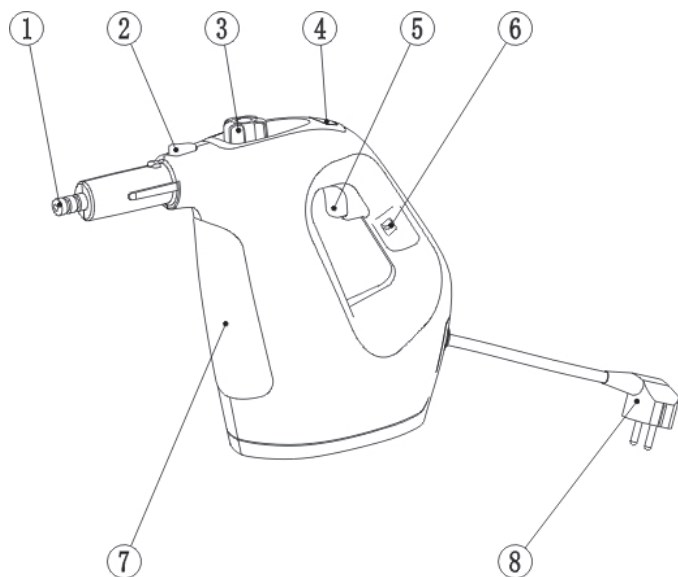

NO.	Name	Function
1	Steam nozzle	For steam output
2	Accessory lock	Connected with each accessory
3	Cap of water tank	Filled water inside when opened
4	Power light	Red light means the power is on
5	Steam button	Control the steam on/off
6	Children lock	Lock for steam button
7	Water tank	Water for storage
8	Power cord	Connect with socket to get power

## Machine Instructions

1. Place the steam cleaner on the platform and open the cap of water tank.
2. Using measuring cup to fill water, and the maximum volume is 350ML.  
Remark: If water overflows, please stop to fill immediately and make sure to use clean towel to dry it.

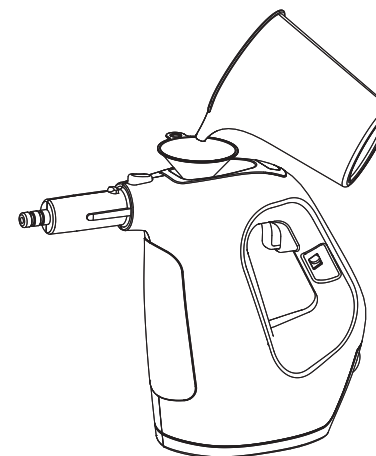

### Special Attentions:

please use clean water (small solid particles may block pipe or cause machine failure)  
\* please do not pour any chemicals such as alcohol, cleaning agents into the water tank. (some chemical solvents can easily cause machine failure, and even endanger the user's personal safety in serious cases)

#### 3. Preparation for use

\* plug the power plug into the socket (please check the right related power and voltage), the red light up, the machine starts heating.

\* in order to make the steam work better, it is recommended to start using the steam after 1 minute heating. The initial sprayed out steam may contain lots of water droplets, please do not use it to clean carpet, curtain and other textiles that absorb water easily. Initial steam may also be sprayed into a tank or other container. The steam will return to normal after 3-5 seconds, please feel free to use it.

4. Press down the children lock first, then press the steam button. Steam will be sprayed directly. You should always press the steam button for continuous use. Once you release this button, the children lock will be locked automatically.

Children lock: You need to press down the children lock first, or you can not press the steam button successfully.

Attention: There will be some noise in use, which is the sound of water pump when it delivers water from the water tank to the boiler.

\* If the machine needs to be used again when there is no water in the water tank, just open the cap of water tank to fill water directly. You do not need to turn off the power.

#### 5. Turn off the power

Please pull out the plug after use. Then drain the remaining water in the tank.  
If there is any dirt on the surface of the machine, please wipe it gently with a clean cloth.

### Instructions of accessories:


#### 1: Soft hose

If the steam cleaner is hard to reach the cleaning area, it can be used with a soft hose.  
The operation method is as follows: connect the end of the hose to the steam outlet until the fixed lock is fully fastened to the hole of the hose, and hear a sound of clicking means installation completed.





#### 2: Big nozzle

The big nozzle can be used to clean the corners easily, by connecting the big nozzle to the steam outlet until the fixed lock is fully fastened to the hole of the big nozzle, and hear a sound of clicking means the installation is complete.

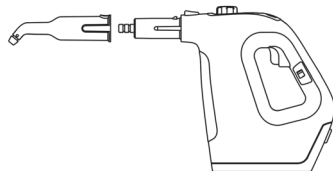


#### 3: Glass brush and small towel

Insert the big nozzle into the notch of the glass brush (below picture 1), and turn it clockwise until it clicks (below picture. 2). After use, turn it counterclockwise to remove it.  
If you want to clean tables and chairs, bookshelves or iron clothes, put a small towel in the glass brush.

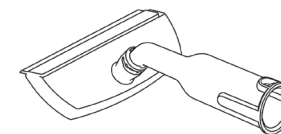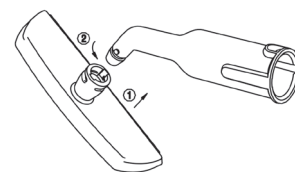


#### 4: Nylon brush and stainless brush

Insert the big nozzle into the notch of the nylon brush (below picture 1), and turn it clockwise until it clicks (below picture. 2). After use, turn it counterclockwise to remove it.

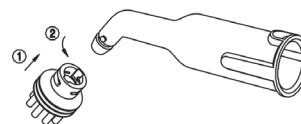


#### 5: Extension tube

If the steam cleaner is hard to reach some cleaning areas or is used to clean floor and glass in high place, it can be used with an extension tube. The operation method is as follows: connect the end of the extension tube to the steam outlet until the fixed lock is fully buckled into the hole of the extension tube, and hear a sound of clicking means the installation is complete.

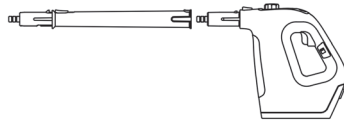

#### 6: Floor brush and floor brush towel

When cleaning the floor, connect two or three extension tubes together to the steam machine. The other end of the extension tube is installed with floor brush. The extension tube is directly connected to the connector of the floor brush, open the clips on both sides of the floor brush and fix the towel.

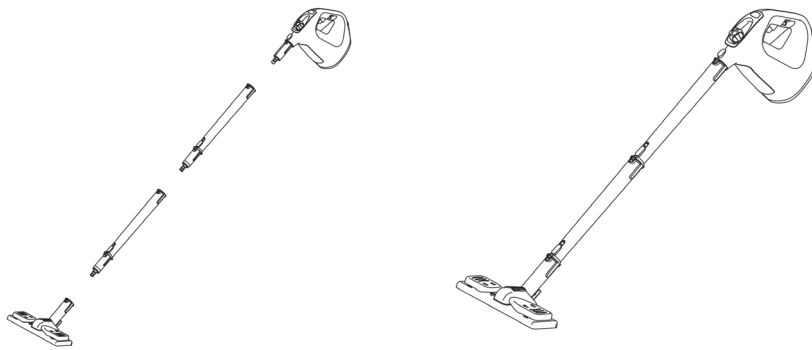

### Maintenance

1. Clean the surface of the machine, please clean with a wet cloth, do not use detergent.
2. Please pour out the remaining water in the tank before storing.
3. The main machine and accessories are stored in a dry place away from light after natural drying.

If any abnormality occurred during the operation, please send the machine to the designated maintenance department for repair. Do not repair by yourself, which is dangerous.

### Common troubleshooting

Status	Please check following the key points as below	Method of exclusion
No steam spraying out	<ol style="list-style-type: none"> <li>1.The power plug is not connected well to the socket</li> <li>2.Water tank out of water</li> <li>3.Water pump is working but no steam is coming out. The pump may be blocked.</li> </ol>	<ol style="list-style-type: none"> <li>1.Reconnect or replace the socket</li> <li>2.Add water to the tank</li> <li>3.Find a professional person to repair the machine</li> </ol>
Water coming out of the nozzle	<p>Every time start using steam, hot water will flow out. No steam spray for a long time, the tube is cool and the steam condenses into water in the tube.</p>	<p>It is normal, because the connecting tube is necessary, and there must be condensed water. If don't need a lot of water for cleaning, spray it into a container.</p>

Voltage:120 V  
 Frequency: 60 Hz  
 Power: 1400W