Wash Cycles

The wash cycles are designed for specific types of wash loads. Select the cycle that best matches the load contents for maximum wash performance and fabric care. See Sorting Laundry section for best results, and follow the fabric care labels on your garments. For a guide to fabric care symbols, see **Sorting Laundry** section.

Cycle Guide

Turn the knob or press the button to select the desired cycle. When you select a wash cycle, the light for the corresponding wash cycle will turn on.

NOTE

Whenever load weights are mentioned, assume 1 lb (0.45 kg) = 1 thick bath towel (dry).

High • Temperature: Cold > Cool > Warm > Very Warm > Hot Hot Spin: No Spin > Low > Medium > Medium High > High Cold No Spin Light Soil: Light > Limited > Normal > Moderate > Heavy Temp. Spin Soil

Cycle	Normal			
Description	Use to wash all normal items such as cotton, linen, shirts, jeans or mixed loads, except delicate fabrics such as wool or silk.			
	 Pressing the Start/Pause button without selecting a cycle will cause the Normal cycle to begin immediately, using the default settings. 			
Wash Temp.	Default: Warm Available: All			
Spin Speed	Default: Medium High	edium High Available: High, Medium High, Medium, Low		
Soil Level	Default: Normal	Available: All		

Cycle	Bedding			
Description	Suitable for washing blankets or bulky items which have difficulty absorbing water, such as pillows, blankets, comforters, sheets or pet bedding.			
	• Do not use this cycle to wash a mixed load of bedding and non-bedding items.			
	Do not mix large/bulky items with smaller articles of clothing.			
	Do not wash excessively large items. If large/bulky items do not fit easily into the tub, there may not be enough room for them to move during washing.			
Wash Temp.	Default: Warm Available: Very Warm, Warm, Cool, Cold			
Spin Speed	Default: Medium Available: Medium, Low, No Spin			
Soil Level	Default: Normal	Available: All		

Cycle	Delicates			
Description	Suitable for washing dress shirts/blouses, nylons, lingerie, or sheer and lacy clothes which can easily be damaged. (less than 8 lb (3.63 kg))			
Wash Temp.	Default: Cool Available: Warm, Cool, Cold			
Spin Speed	Default: Medium	Available: Medium, Low, No Spin		

Cycle	Delicates			
Soil Level	Default: Normal Available: All			

Cycle	Heavy Duty			
Description	Suitable for washing heavily soiled laundry, such as cotton fabrics, using more powerful wash motions.			
	When washing large loads, there will be brief periods of 2 minutes or more without agitation. These soak periods are part of the cycle's design, and are normal.			
Wash Temp.	Default: Warm Available: All			
Spin Speed	Default: High	Available: High , Medium High , Medium , Low		
Soil Level	Default: Heavy	Available: All		

Cycle	Speed Wash			
Description	 Quickly washes lightly soiled clothing and small loads. For high wash and rinse efficiency, wash small loads of 2-3 lightly soiled garments. (less than 3 lb (1.36 kg)) Use very little detergent in this cycle. To add an extra rinse, use the Extra Rinse option. 			
Wash Temp.	Default: Very Warm Available: Very Warm, Warm, Cool, Cold			
Spin Speed	Default: High	Available: All		
Soil Level	Default: Light	Available: All		

Cycle	Downloaded (Rinse+Spin)			
Description	Use a smartphone to download a specialized cycle to this cycle position. • The default cycle is Rinse+Spin . This cycle is also available for download. • Refer to the LG ThinQ application to see the cycles available for download.			
Wash Temp.	Default: Cool Available: Cool			
Spin Speed	Default: Medium High Available: All			
Soil Level	Default: -	Available: -		

Available Options

† This option is automatically included in the cycle and cannot be deselected.

NOTE

• If the **Turbo Wash**TM option is on, you cannot set the spin level to **No Spin**.

Cycle	Steam	Turbo Wash TM	Extra Rinse	Pre-wash
Normal	•	•†	•	•
Bedding	•	•	•	•

OPERATION-WASHER

Cycle	Steam	Turbo Wash TM	Extra Rinse	Pre-wash
Delicates			•	•
Heavy Duty	•	● †	•	•
Speed Wash		•	•	
Downloaded default: Rinse+Spin			•	