
USE AND CARE GUIDE

CAMBRIDGE PATIO CLUB LOVESEAT WITH CUSHION

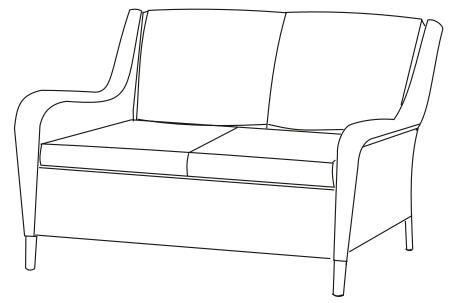



Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

Table of Contents

Table of Contents2	Pre-Assembly	. 3
Safety Information	Hardware Included	. 3
What is covered		
What is not covered	Assembly	
Warranty3	Cleaning and Maintenance	6
wairanty	Service Parts	

Important Safety Instructions

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- 2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

SET UP YOUR FURNITURE PROPERLY

- 1. Ensure that all parts are assembled properly and fully tightened as per the instructions.
- 2. When placing in the desired location, ensure that all legs are resting on the same surface.

EXAMINE YOUR FURNITURE

Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be re-tightened fully before additional use.

OBSERVE WEIGHT LIMITS

The weight limits for the following products are listed below:

☐ Chair: 300 lbs	☐ Sofa: 700 lbs
☐ Swivel Chair: 300 lbs	☐ Rocking Chair: 300 lbs
□ Loveseat: 500 lbs	☐ Chaise Lounge: 300 lbs
☐ Ottoman: 150 lbs	☐ Dining Table: 100 lbs
☐ Table: 50 lbs	☐ Dining Chair: 200 lbs



CAUTION:

If you overload your furniture, injuries can occur.

Warranty

THREE YEAR FRAME, WEAVE AND FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame, weave and fabric to be free of manufacturing defects to the original purchaser for three years. For glass table top we warrant 30 days from the date of purchase.

WHAT IS NOT COVERED

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty.

 
We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.Hamptonbay.com.

Pre-Assembly

PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly.

HARDWARE INCLUDED







3






Part	Description	Quantity
AA	Bolt (1/4X35mm)	8
BB	Washer (6mm)	10
CC	Cap for bolt (6mm)	10
DD	Bolt (1/4X20mm)	2
EE	Hex wrench (4mm)	1

Pre-Assembly


PACKAGE CONTENTS

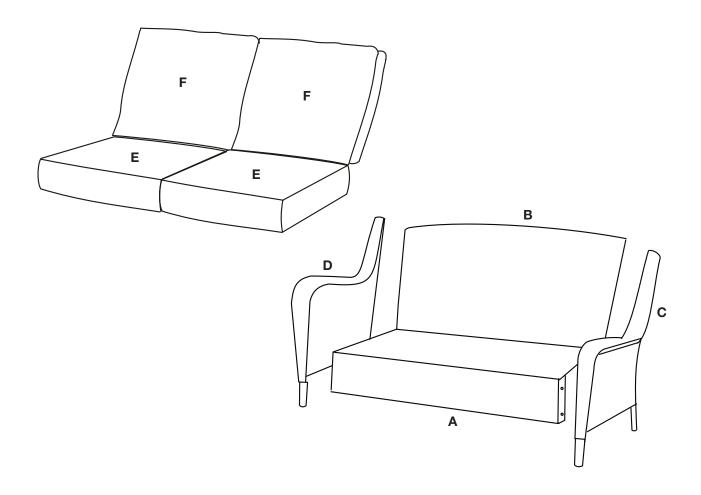

Part	Description	Quantity
Α	Seat	1
В	Back	1
C	Left Arm	1
D	Right Arm	1
E	Seat Cushions	2
F	Back Cushions	2


Attaching the back

- Attach the back (B) to the seat (A) by aligning two holes on the back (B) with the two holes on the seat (A). Insert bolts(DD) with washers (BB) .
- □ Tighten half way using the Hex wrench(EE). Do not tighten completely. .

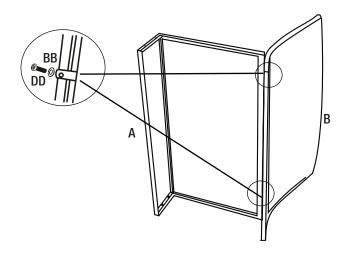


2 Attaching the left arm

- Attach the left arm (C) to seat (A) fasten with bolts (AA) and washers (BB). Tighten half way using the Hex wrench(EE). Do not tighten completely. (Fig 1)
- Attach the back (B) to the left arm(C) by aligning the hole on the back (B) with the hole on the left arm (C). Insert bolts(AA)with washers (BB) and tighten half way using the Hex wrench (EE). Do not tighten completely. (Fig 2)

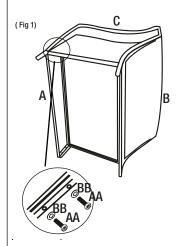


(Fig 2)

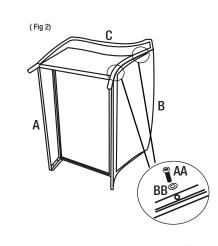


Attaching the right arm

- Attach the right arm (D) to seat (A) fasten with bolts (AA)and washers(BB). Tighten half way using the Hex wrench (EE). Do not tighten completely. (Fig 1)
- Attach the back (B) to the right arm (D) insert bolts
 (AA)with washers (BB) and tighten half way using the
 Hex wrench (EE). Do not tighten completely. (Fig 2)

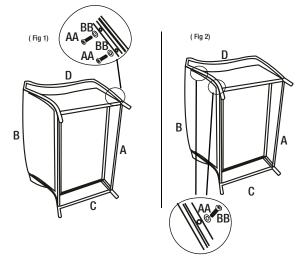

4. Completing the assembly

- Place the loveseat right side up.
- □ Fully tighten all the bolts (AA) with the Hex wrench (EE)
- □ and cover with the bolt caps (CC).(Fig 1)
- Adjust leg levelers as required.
 Place the seat cushion (E) and back cushion (F) on the loveseat. This loveseat is now ready for your enjoyment.

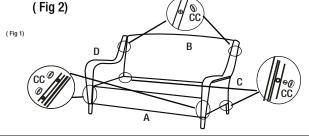



5 HAMPTONBAY.COM

Cleaning and Maintenance

re using, wipe with a clean, dry cloth. Do not use bleach or solvents. When not in use, store furniture in a cool, dry place. ot use bleach or solvents on fabrics. When cleaning the table top make sure to use a soft, clean cloth that does not bleed color ell. In the frame with a mild solution of soap and water, rinse with clean water, and dry thoroughly. It is is in the frame with a mild solution of soap and water, rinse with clean water, and dry thoroughly. It is is in the cushion cover thoroughly and allow to drip dry. The cushion and pillow should be spot cleaned with a soft cloth. Do not machine wash or tumble dry, as cushions may shrink. Do not use the or solvents on fabrics. Never use cleaners that contain acid or abrasive materials. It is in the off season.		

6

Service Parts

Part	Description	Quantity
Α	Seat	1
В	Back	1
С	Left Arm	1
D	Right Arm	1
E	Seat Cushions	2
F	Back Cushions	2

7

HAMPTON BAY

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.