

ivation

30" LED DIGITAL TIME BAR

User Guide

JIDO130RED / JIDO130BLU / JIDO130ORG / JIDO130GRN

Thank you for purchasing the **Ivation** LED Digital Time Bar. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only.

IMPORTANT INSTRUCTIONS

Intended Use

This device is used to display the following information:

- Current Time in Hour-and-Minute Format
- Bright LED bulbs are used in the display, and the product is approved only for operation in dry rooms. Any use other than that described above will lead to damage to the product and may present additional risks.

Safety Instructions and Danger Warnings

If damage is incurred as a result of non-compliance with these operating instructions will void the manufacturer's guarantee. **Ivation** assumes no liability for personal injury or damage to property caused by incorrect handling or non-observance of the safety Instructions.

1. For safety and licensing reasons, unauthorized conversion and/or modifications to unit are not permitted.
2. Do NOT expose this product to extreme temperatures (<32°F/>+122°F), strong vibration or heavy mechanical stress.
3. Never bring this product in contact with liquids. Risk of fire or fatal electric shock. If liquid or any other object enters the unit's housing, disconnect power cord immediately and contact a technician.
4. Only connect to standard wall outlet.
5. Always disconnect power cable when not in use for prolonged period of time, before cleaning unit, and during thunderstorms.
6. Never switch device on immediately after it has been moved from a cold to a warm room. Water condensation can damage or destroy this device under certain circumstances. Always allow device to reach room temperature before switching on.

FOR HOUSEHOLD USE ONLY! SAVE THESE INSTRUCTIONS

IMPORTANT ADDITIONAL SAFEGUARDS

1. Users of this appliance must read and understand these instructions before operating or cleaning this product.
2. The cord to this appliance should be attached to a 120 V AC electrical outlet ONLY.
3. To reduce the risk of injury to persons or property, never use this appliance in an unstable position.

NOTES ON THE CORD

The short power-supply cord provided should be used in a way that reduces the risk resulting from becoming entangled in or tripping over a longer cord. Do not use an extension cord with this product.

NOTES ON THE PLUG

This product has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will only fit in a polarized outlet one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, this product may not operate properly. It should be operated using a separate electrical circuit from other appliances.

What's Included

30" LED Digital Time Bar


Wall Plug

User Manual

The remote-controller

Parts & Controls

1. 30" LED Display
2. 12 V Power Input Jack
3. Wall-Hanging Hole
4. "A" Button, "B" Button, "C" Button

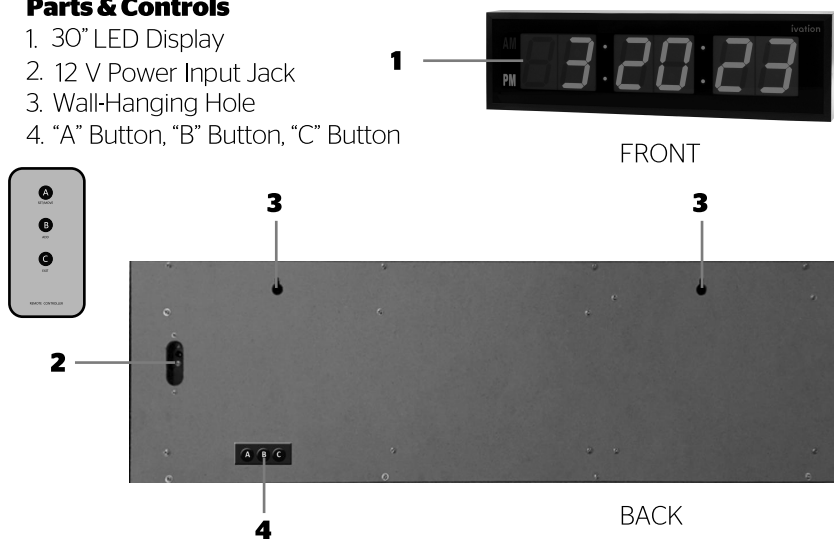

General Operation

Basics

1. To power on the clock, follow these steps to insert smaller end of cable into 12 V Power Input Jack (#2) located on backside of clock:
 - a. Position cable end perpendicular to backside of clock
 - b. Push cable end into groove then slide to the right
 - c. Turn cable so that it lays flat against backside of clock
 - d. Secure cable by threading through jagged groove
2. Plug other cable end into standard wall outlet socket
3. Display will turn on automatically and display time and date

Important: Always unplug adapter from wall socket before disconnecting low-voltage plug from clock.

Adjusting Clock

1. Short-press "A" Button (#4) to select fields you wish to adjust
 - Adjustable fields are: Hour, Minute, Second

Long-press "A" Button(#4) to change 12/24 hour mode

2. Once field is selected, short-press "B" Button (#5) to adjust it
 3. To move to next field, short-press "A" Button (#4) again
 4. Short-press "C" Button (#6) to save changes and exit setup
- In normal mode short-press "C" Button (#5) to turn on or off power

Remark:

The functions of button on the remote control is same as on the clock except the 12/24 hour mode can't be changed by button "A" on the remote.

Adjusting Display Brightness

- Short-press "B" Button (#5) to switch dimmer settings. It has six levels brightness.

Placement

The **Ivation** 30" LED Digital Time Bar can be affixed to the wall. When hanging on wall, ensure that the unit is securely attached. Improper hanging may lead to unit falling and causing injury and/or damage.

- *Important: Make absolutely sure that that no power, gas or water pipes are damaged in the process of hanging clock on wall*
- Use screw and dowel suitable for material of wall
- *Note: Do not position device directly alongside disturbance sources such as computers, mobile phone, etc.*
- Always keep a distance of at least 20 inches (50 cm) from such sources of disturbance

Use Wall-Hanging Hole (#3) on rear of unit as a drilling model. Drill corresponding hole in wall and insert dowel, if necessary. In order for clock to be attached correctly, screw must stick out approximately 4mm from the wall surface. To hang, simply align with screw and slide down.

Maintenance and Disposal

Outer surfaces of device should be cleaned with a soft, slightly damp cloth or a dry brush. Never use aggressive cleaning agents or chemical solutions, as these may damage device or impair its function. When device has become unusable, dispose of it in accordance with the current local statutory regulations.

Important Note!

Due to electromagnetic discharge or disturbances, clock may cease to function correctly. This can be expressed, for example, by an erroneous display. Reset device by disconnecting power cord and allowing device to rest for 10 minutes. Clock should then function properly.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

Customer Service:

supportlfc@camarketing.com
888-390-7622

Distributed by
C&A Marketing, Inc.
114 Tived Lane East
Edison, NJ 08837 USA
Europe: C&A Europe
167 Hermitage Road
Crusader Industrial Estate
London N4 1LZ
United Kingdom

Made in China
IVATION is a trademark of
C&A IP Holdings, LLC. in the U.S.
©2013 All right reserved