 
 


730-0896GH

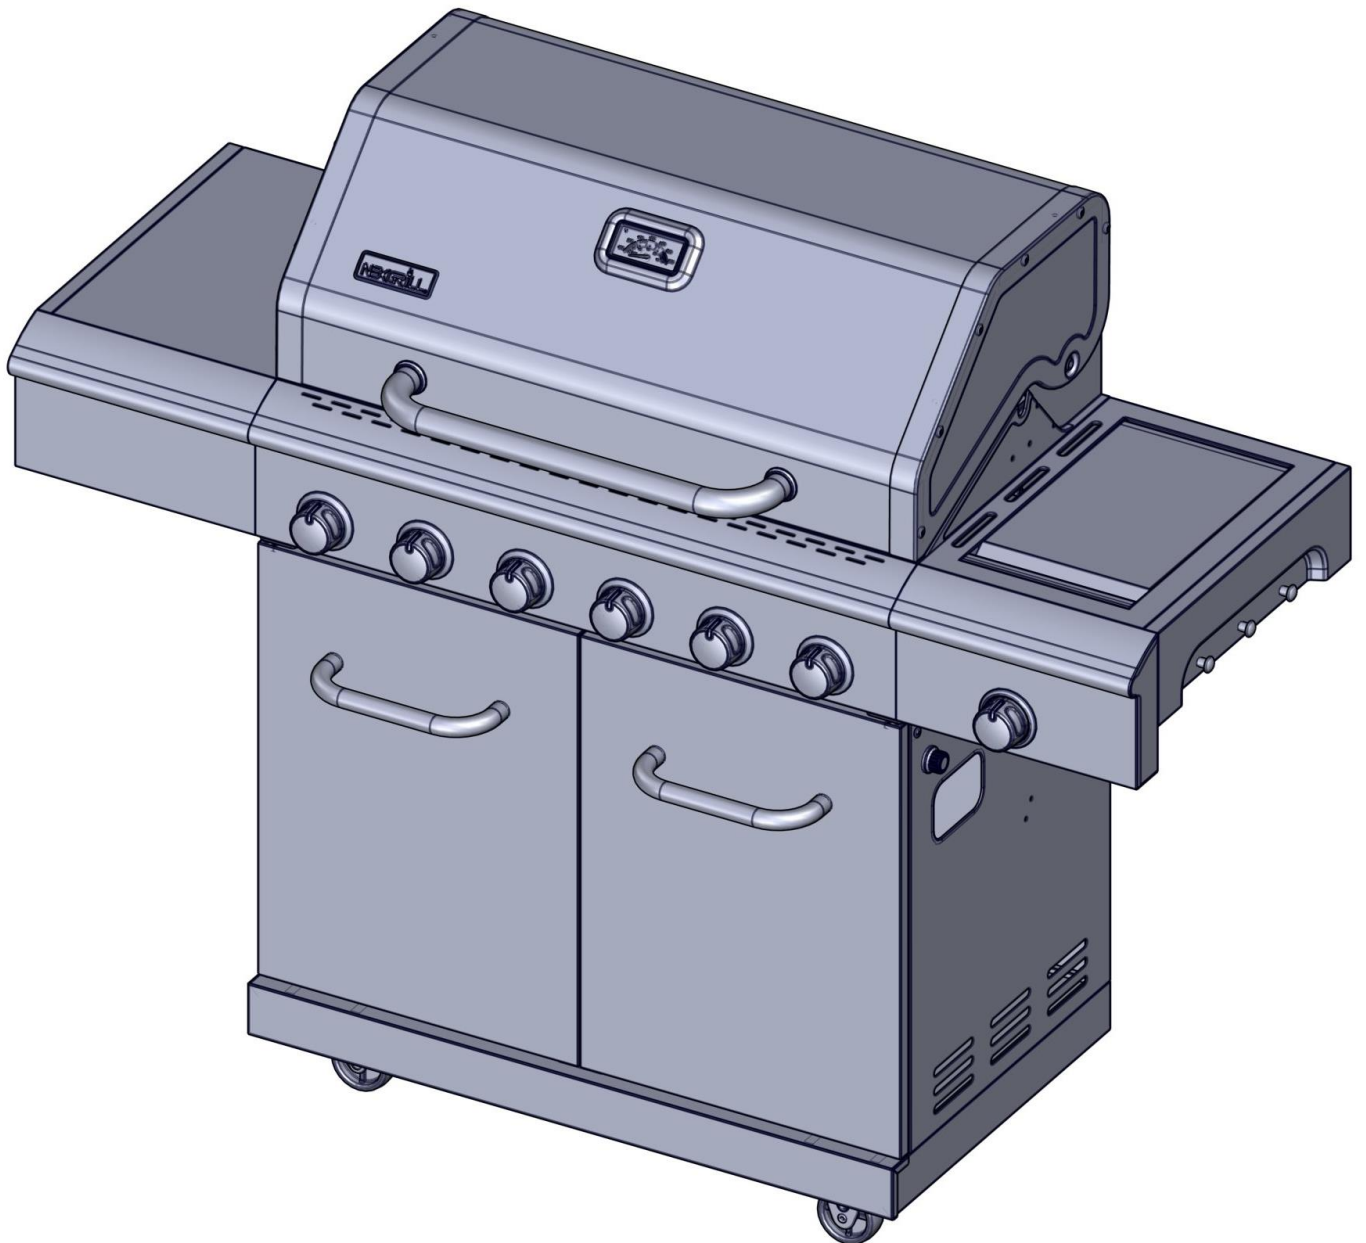 


Package parts List


1

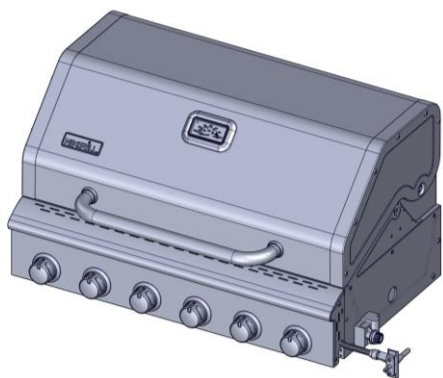


2

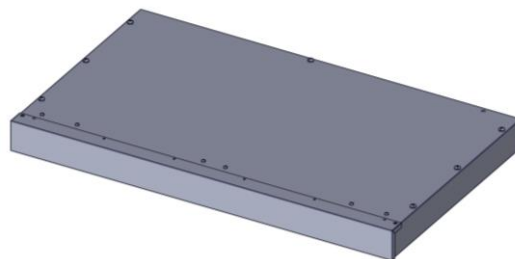


3

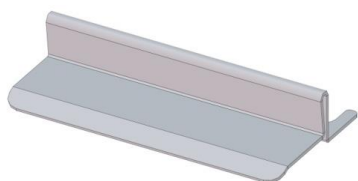 


4

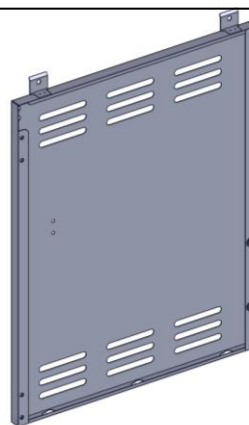 

5

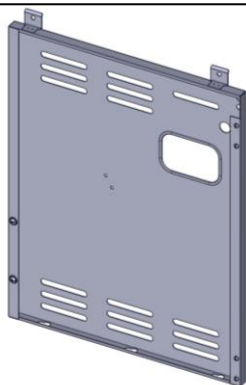 


6

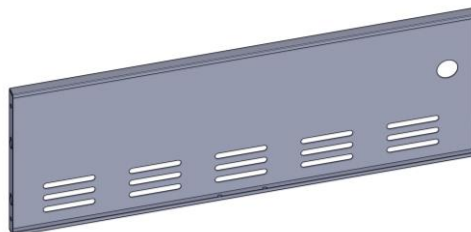 


7



 
8

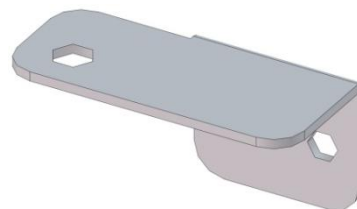

9

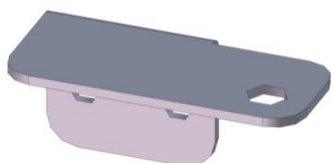 


10 (x2)

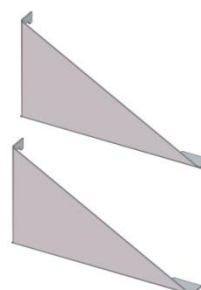 


Package parts List

 
11 x2

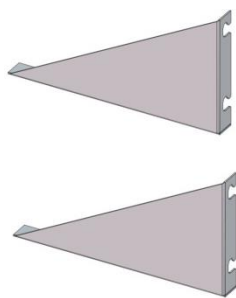

12

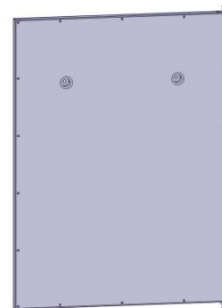 

13

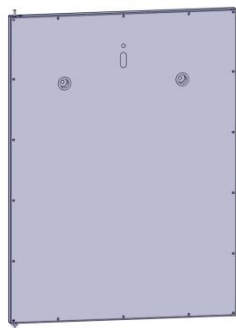 


14 x2



15



 16

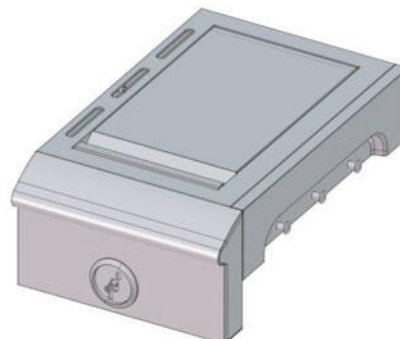


17



18



 19

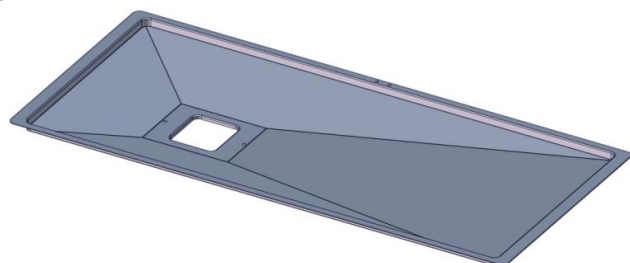


20




Package parts List

 21

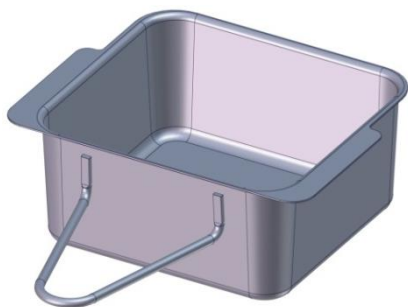


22

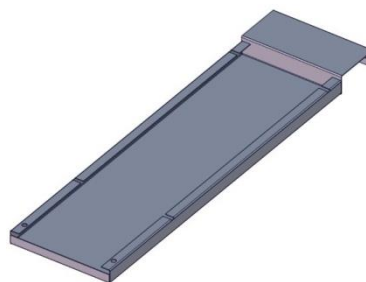 

23



 
24 x6

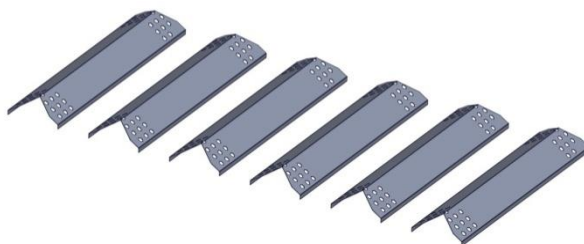

25 x2



 26

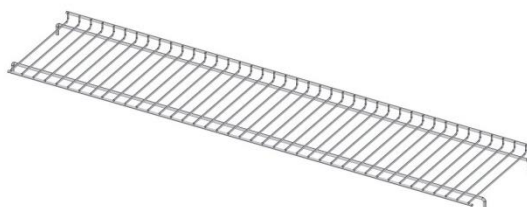


27



28




 Parts Diagram

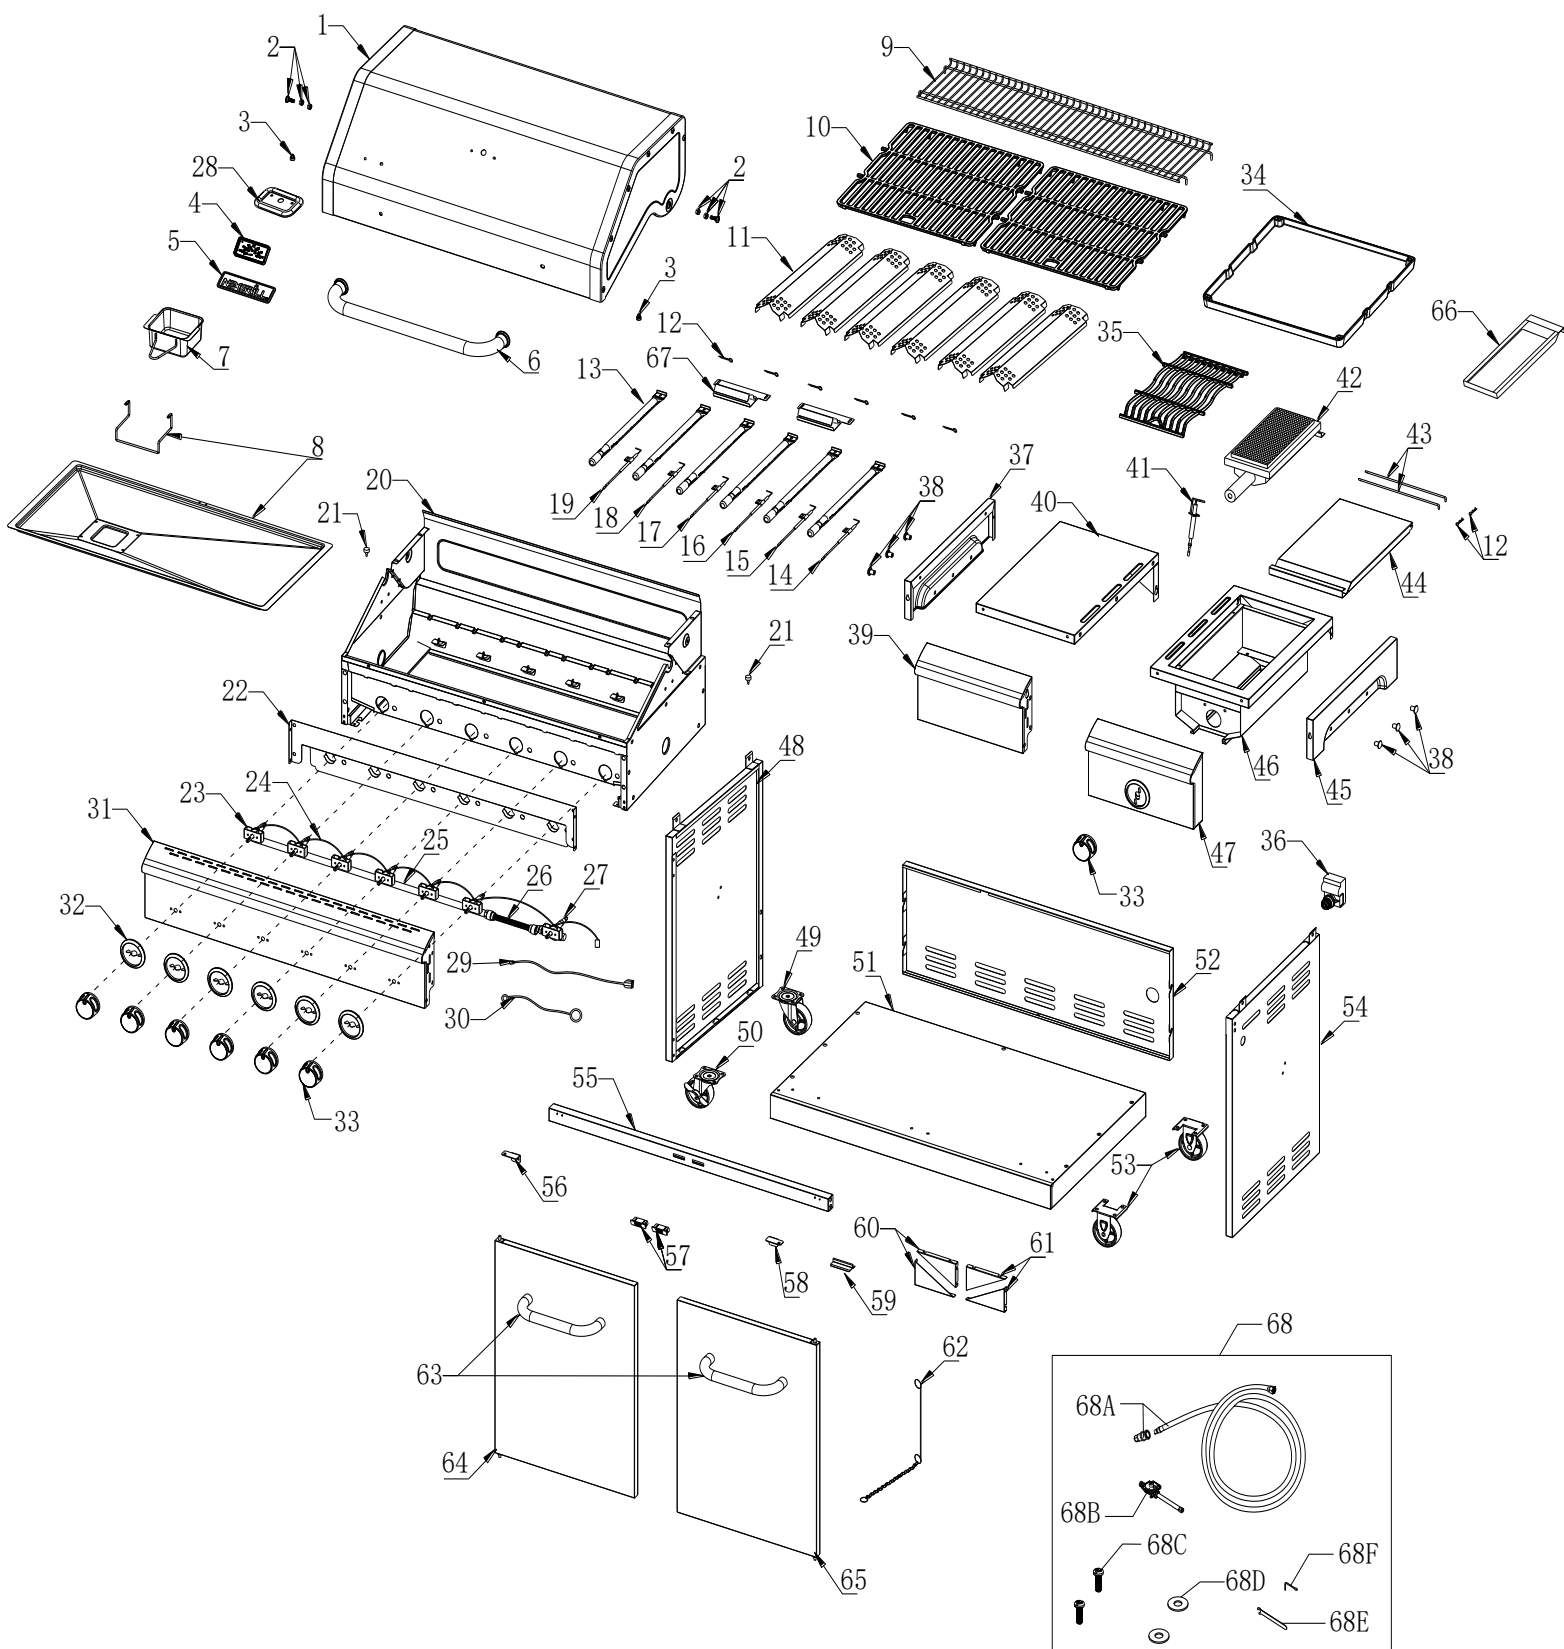

No.	Part (Description)	QTY	No.	Part (Description)	QTY
1	Main lid	1	38	Tooling hook	6
2	Main lid screw	2	39	Side shelf control panel	1
3	Hood buffer A	2	40	Side shelf, left	1
4	Temperature gauge	1	41	Searing side burner igniter wire pin	1
5	Logo	1	42	Searing side burner	1
6	Main lid handle assembly	1	43	Searing side burner lid hinge rod	2
7	Grease box	1	44	Searing side burner lid	1
8	Grease pan assembly	1	45	Side burner shelf trim piece	1
9	Warming rack	1	46	Searing side burner bowl assembly	1
10	Cooking grid	2	47	Searing side burner control panel	1
11	Flame tamer	6	48	Side panel, left	1
12	Main burner pin assembly	8	49	Swivel caster with brake	1
13	Main burner	6	50	Swivel caster	1
14	Main burner igniter wire A	1	51	Bottom panel	1
15	Main burner igniter wire B	1	52	Rear panel	1
16	Main burner igniter wire C	1	53	Caster	2
17	Main burner igniter wire D	1	54	Side panel, right	1
18	Main burner igniter wire E	1	55	Cart frame, front	1
19	Main burner igniter wire F	1	56	Door hinge fixed plate, left	1
20	Main burner bowl assembly	1	57	Door magnet	2
21	Hood buffer B	2	58	Door hinge fixed plate, right	1
22	Front baffle	1	59	Door iron piece	1
23	Main gas valve	6	60	Triangle bracket A	2
24	Switch cord assembly	1	61	Triangle bracket B	2
25	Main manifold	1	62	Lighting Rod	1
26	Searing side burner flex gas line	1	63	Door handle assembly	2
27	Searing side burner flex gas valve	1	64	Door, left	1
28	Temperature gauge housing	1	65	Door, right	1
29	Side burner igniter wire	1	66	Searing side burner grease tray	1
30	Grounding wire	1	67	Cross Lighting	2
31	Main control panel	1	68	NG Conversion kit	1
32	Main burner bezel	6	68A	NG gas hose with quick connector assembly	1
33	Control knob A	7	68B	NG Regulator assembly	1
34	Cooking griddle	1	68C	Truss head screw with lock	2
35	Searing side burner cooking grid	1	68D	Flat washer	2
36	Pulse Igniter Module	1	68E	6mm Wrench	1
37	left side shelf trim piece	1	68F	6 mm Nut Drive	1

 
Tools Needed

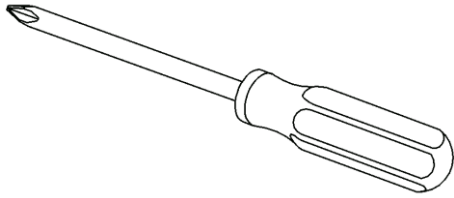


Some parts come with Screws pre-installed.
Loosen and tighten for final assembly.

Hardware package list

 
Truss Head Screw
1/4 - 20 x 5/8"

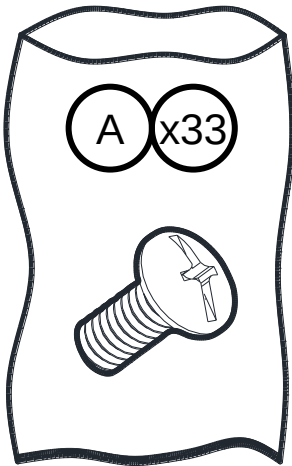


Truss Head Screw
5/32 - 32 x 3/8"


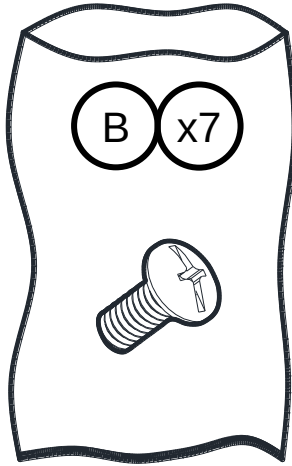 


Flat Washer
1/4"

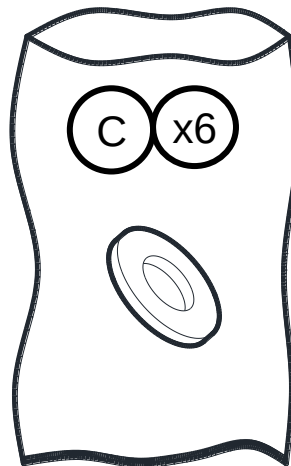 


Flat Washer
5/32"

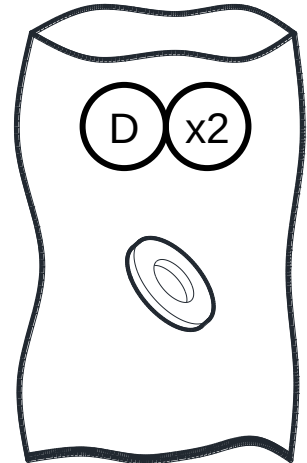 


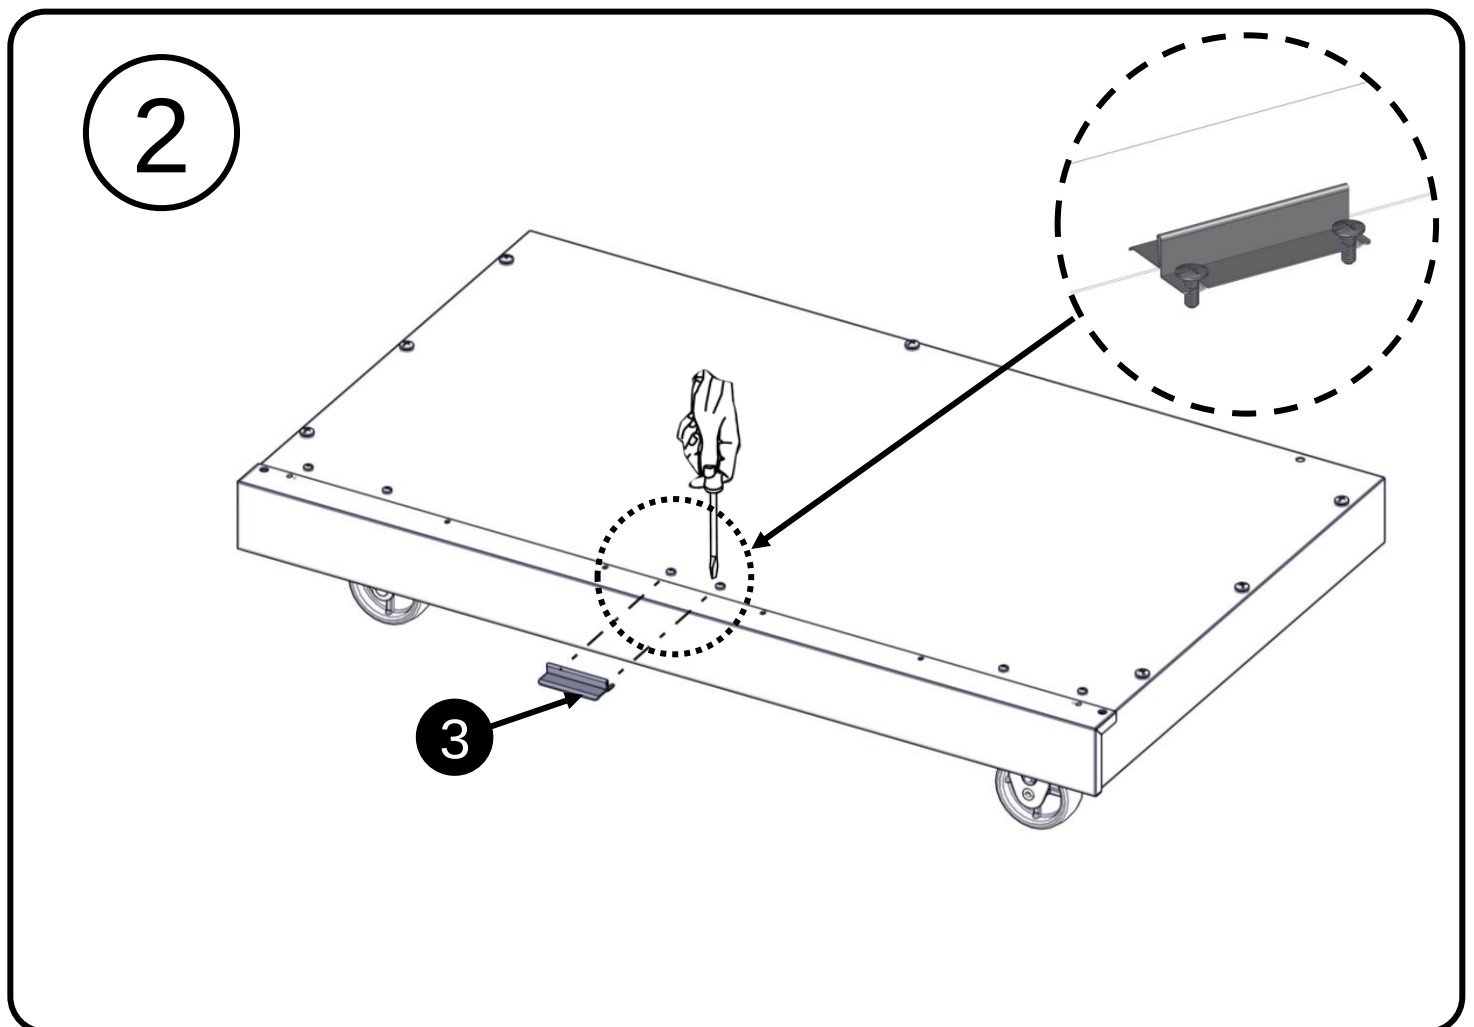 
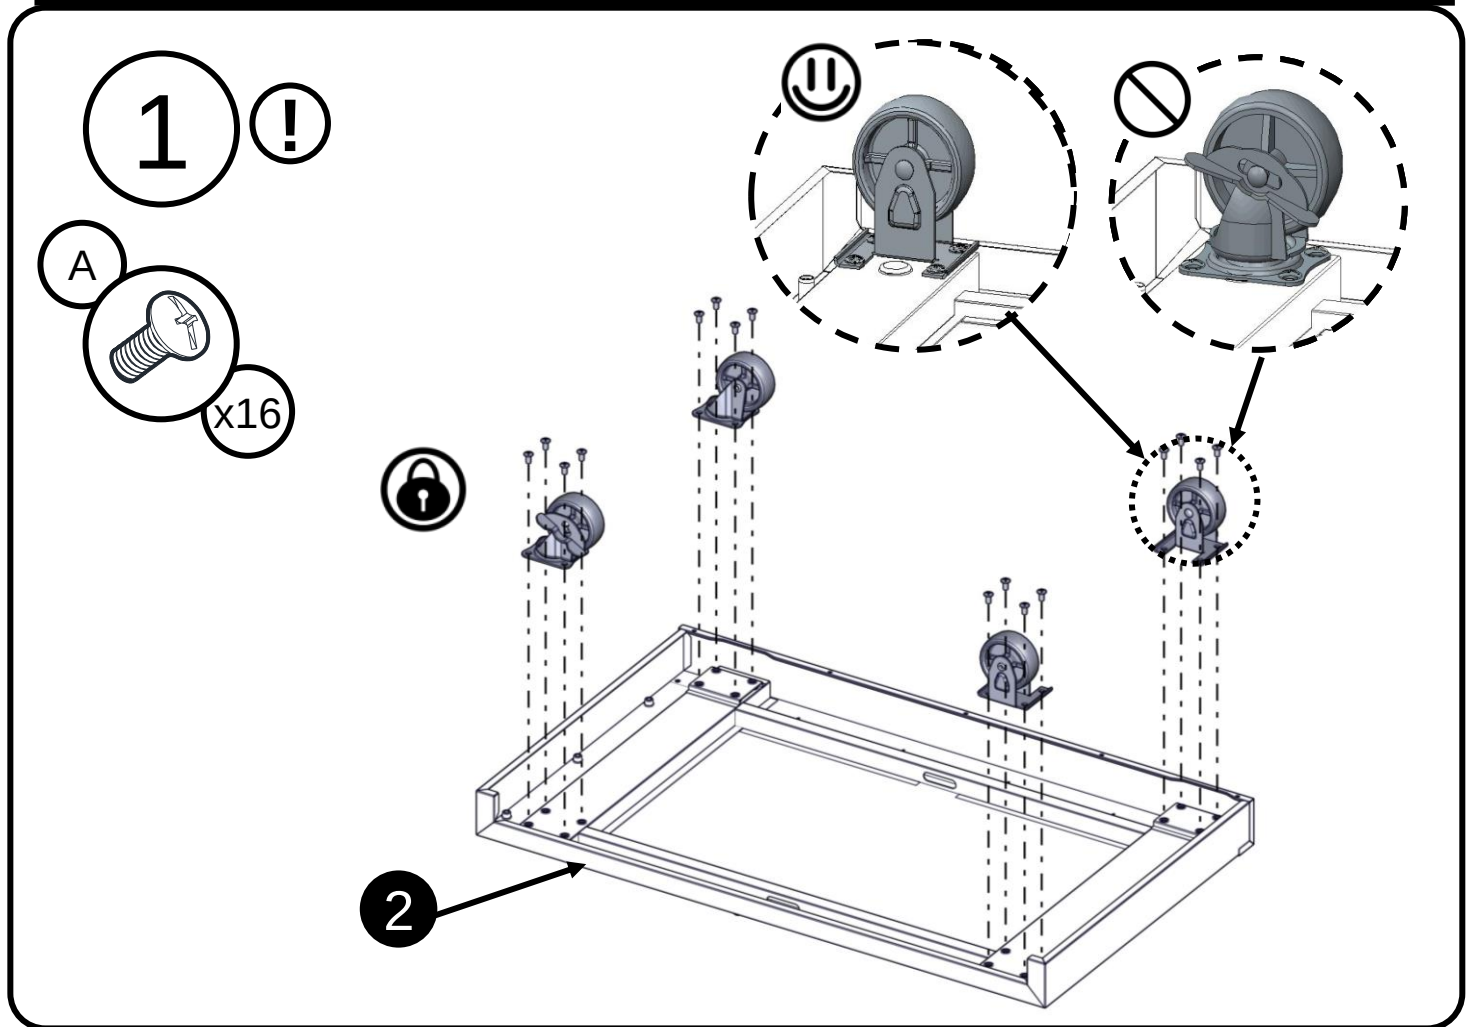 




3

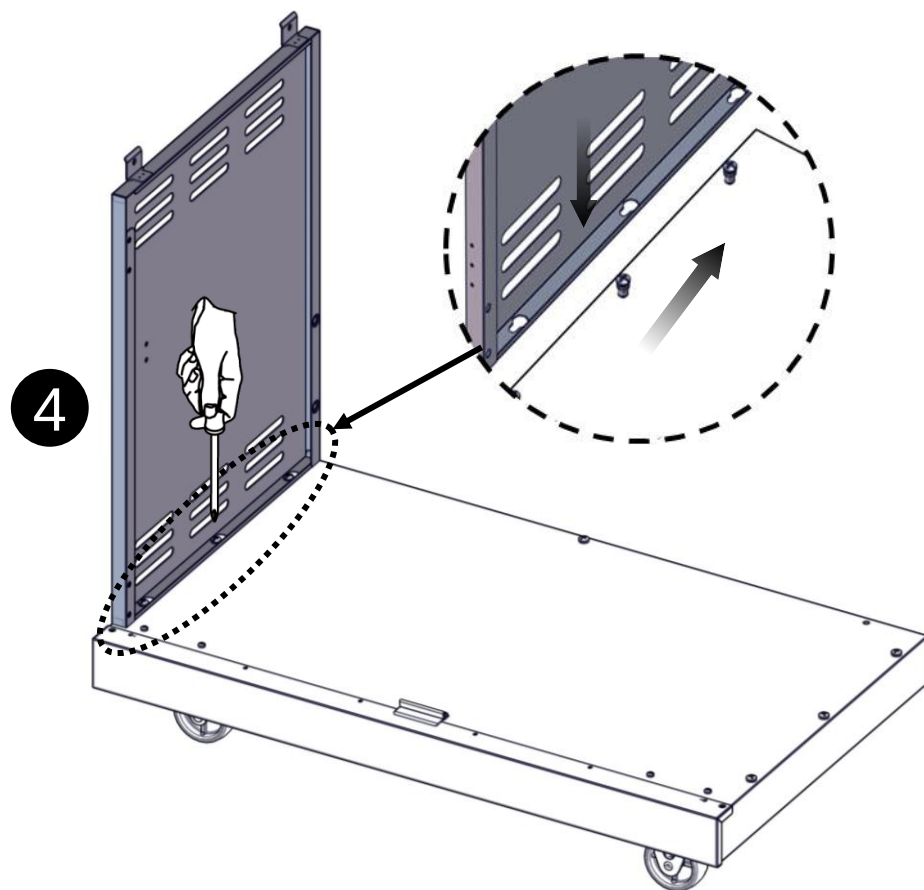 


4

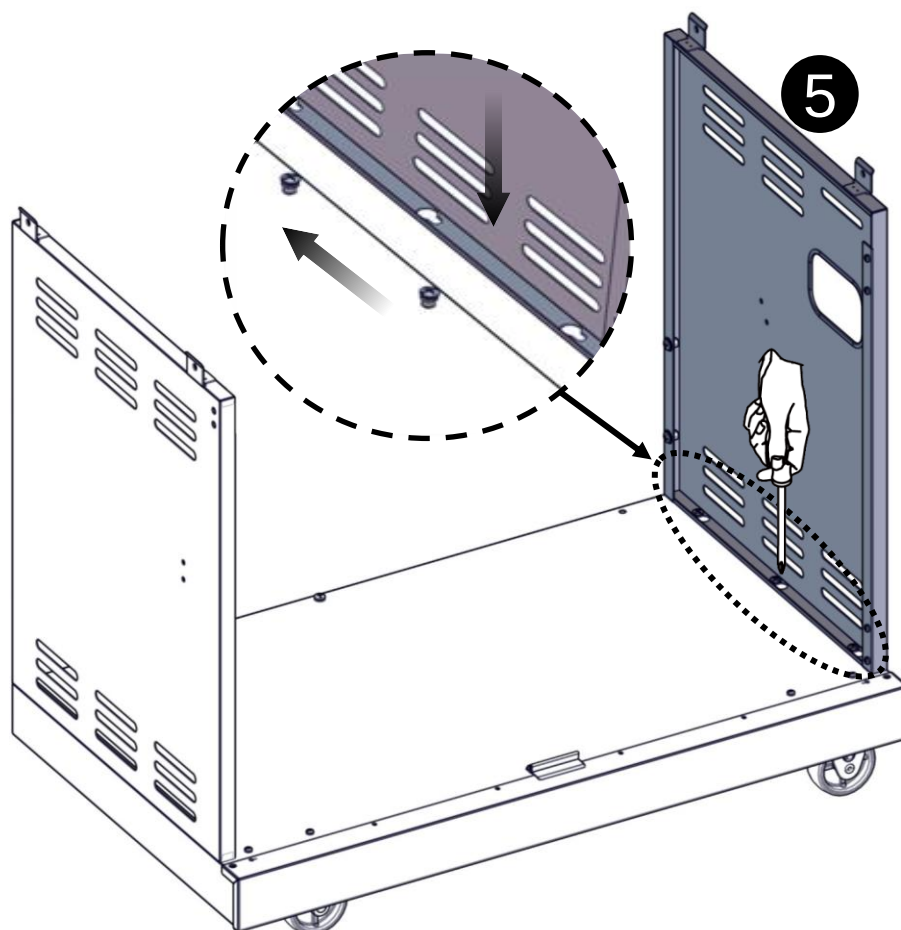 

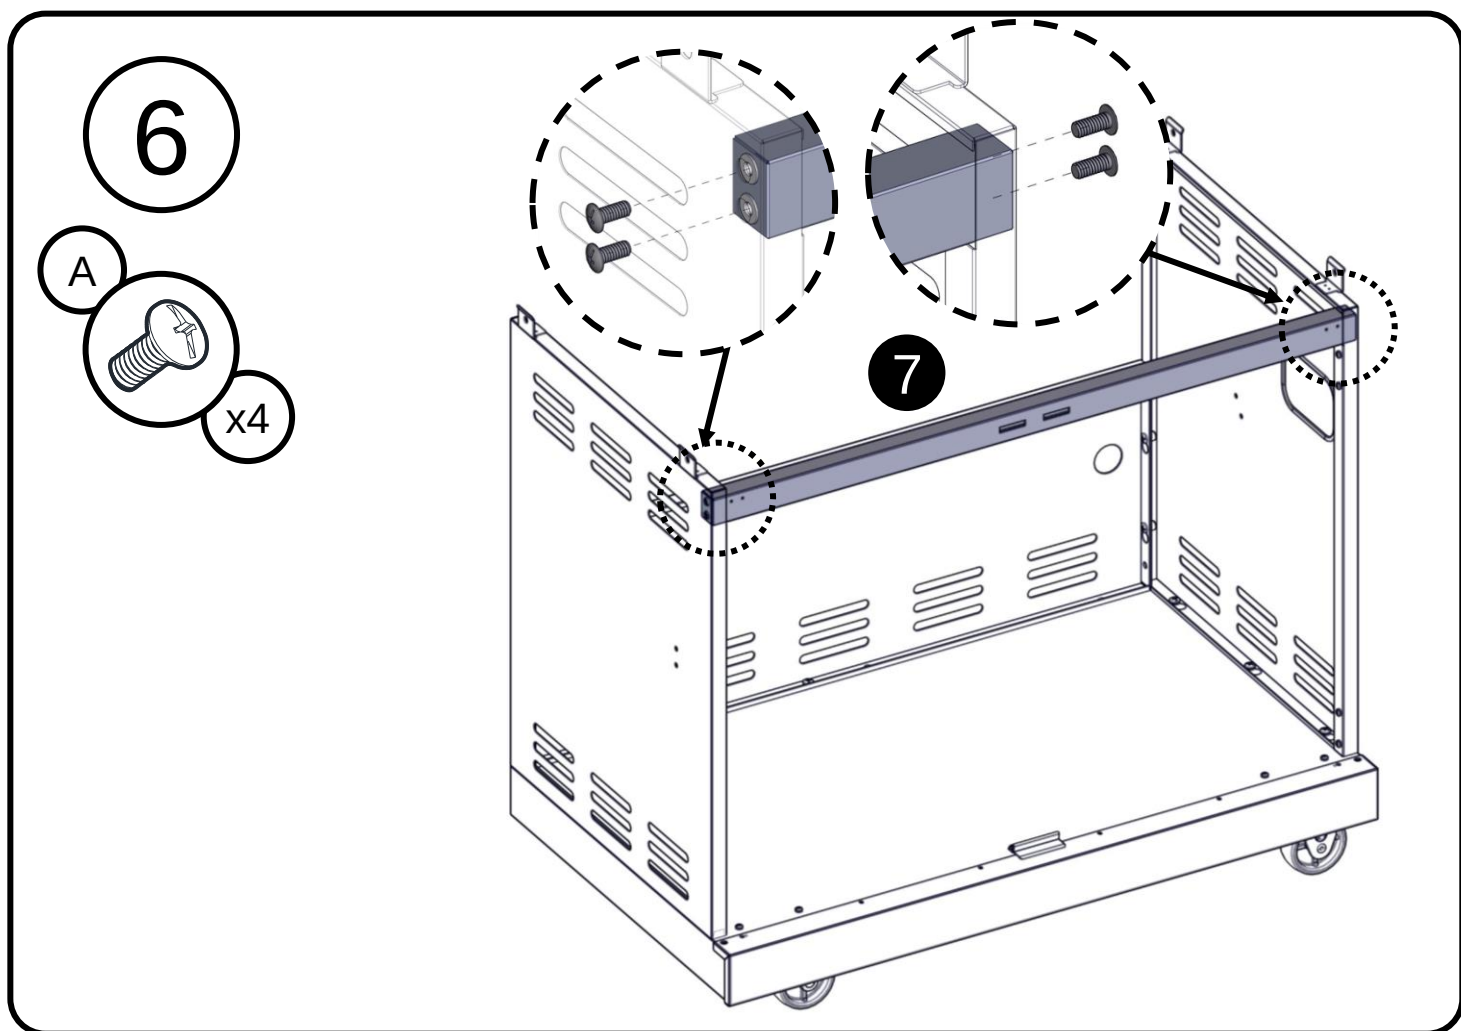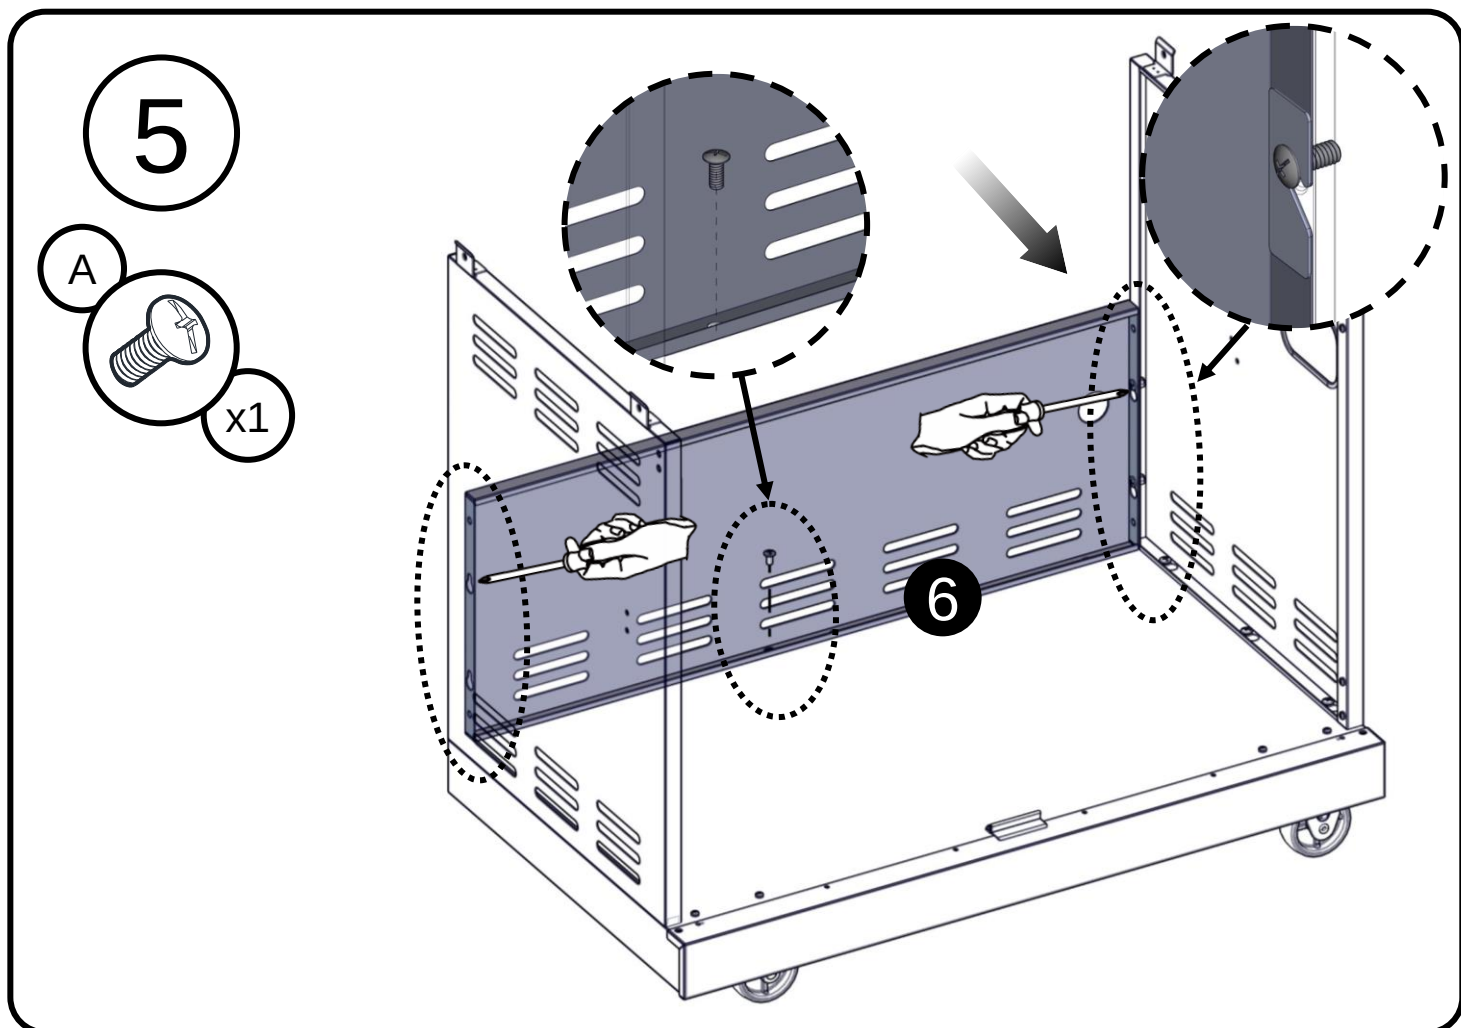  


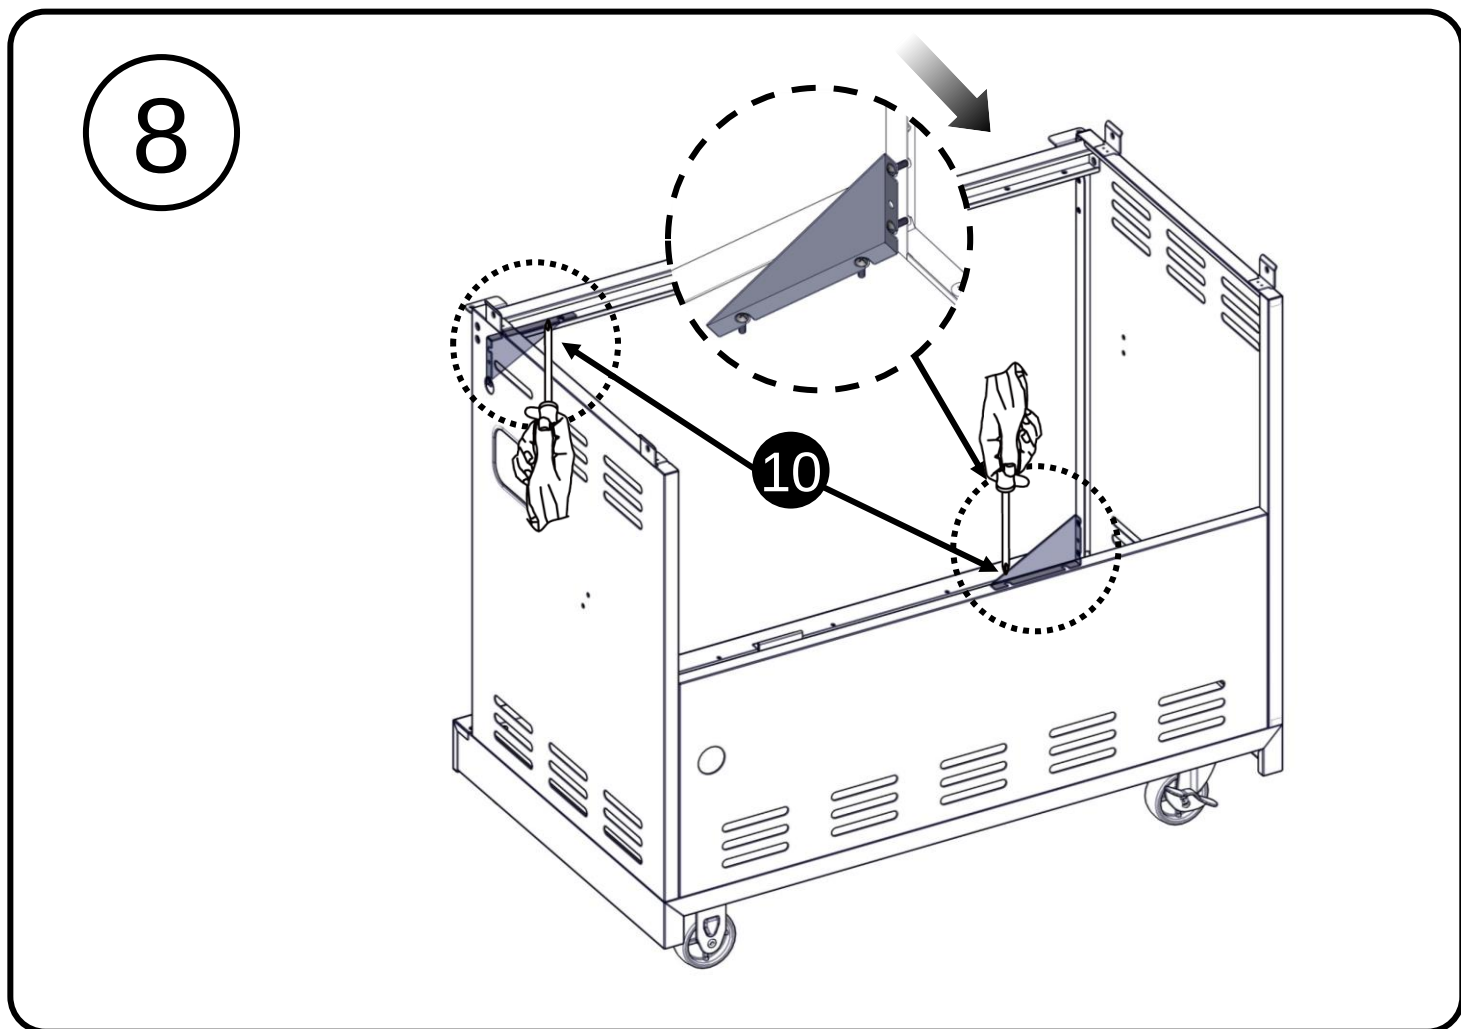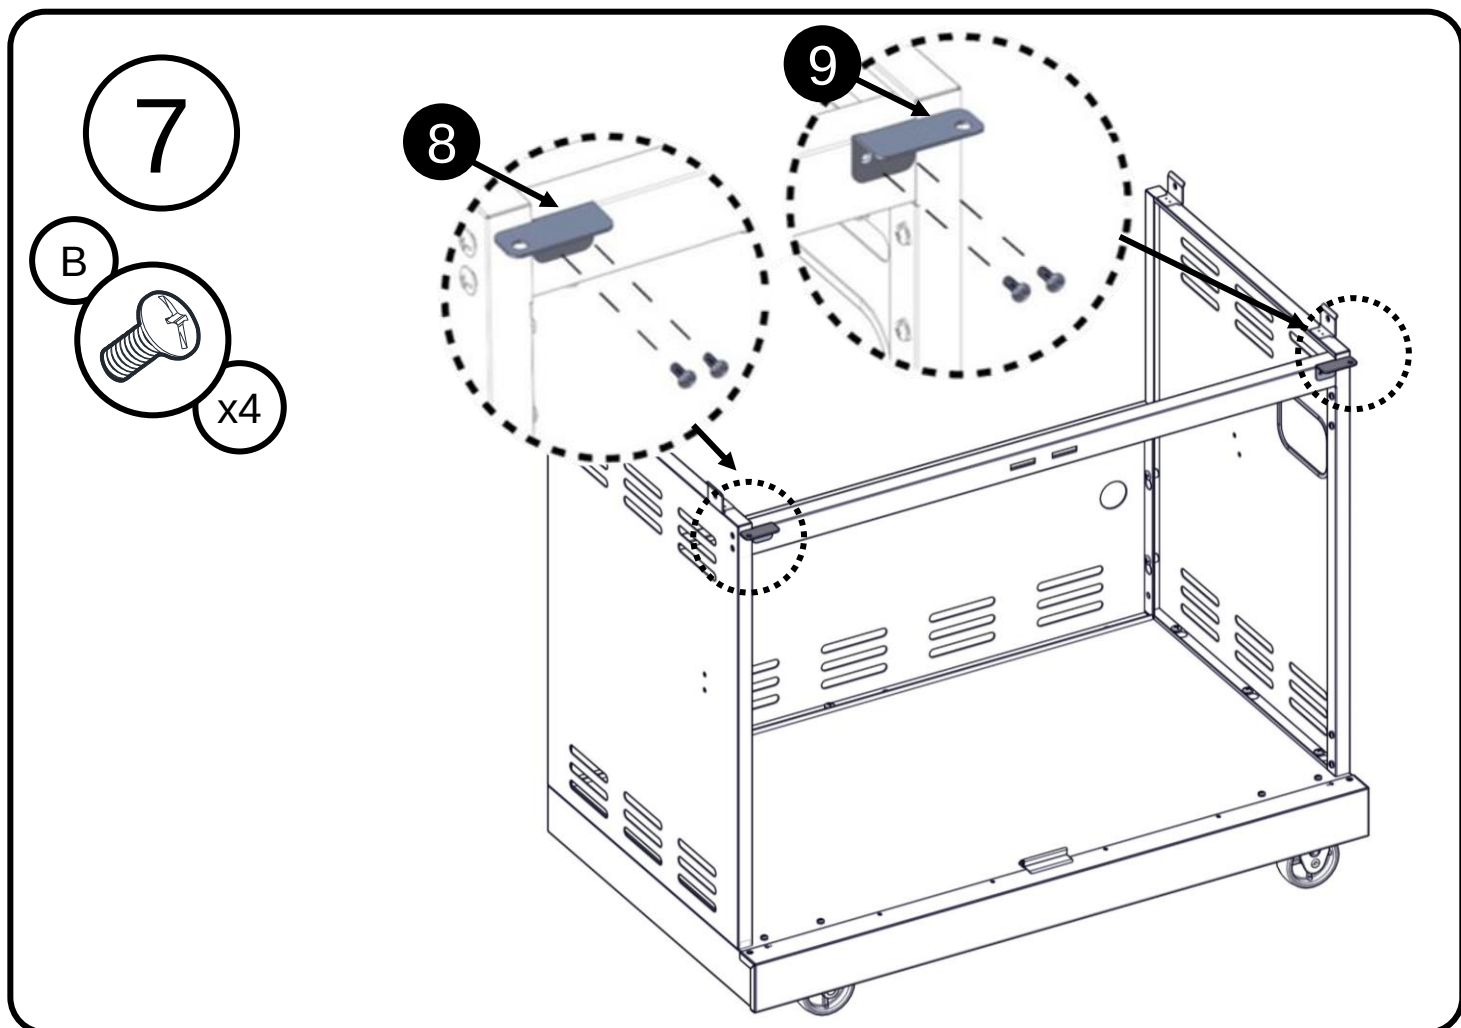  

9

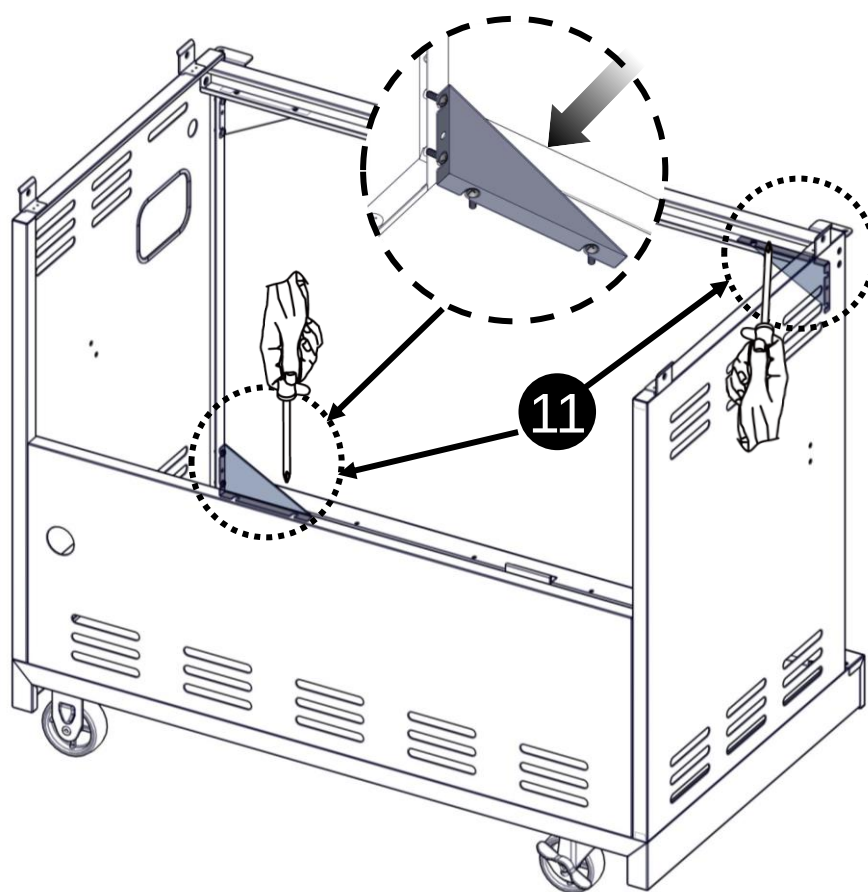 

10

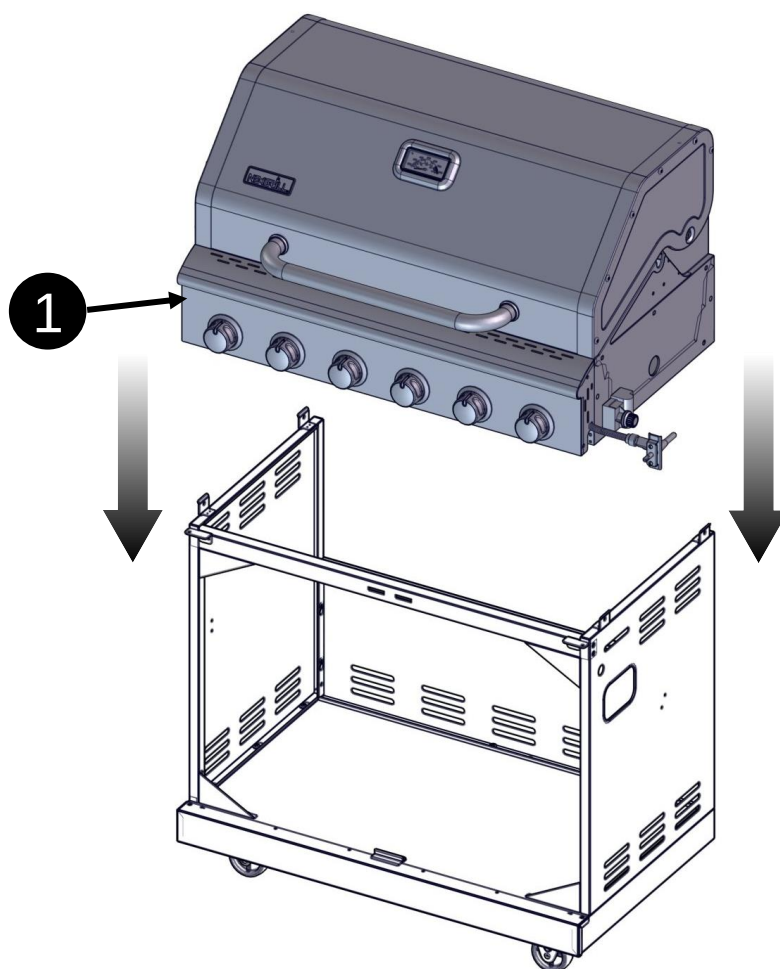 


11


A



 
x4

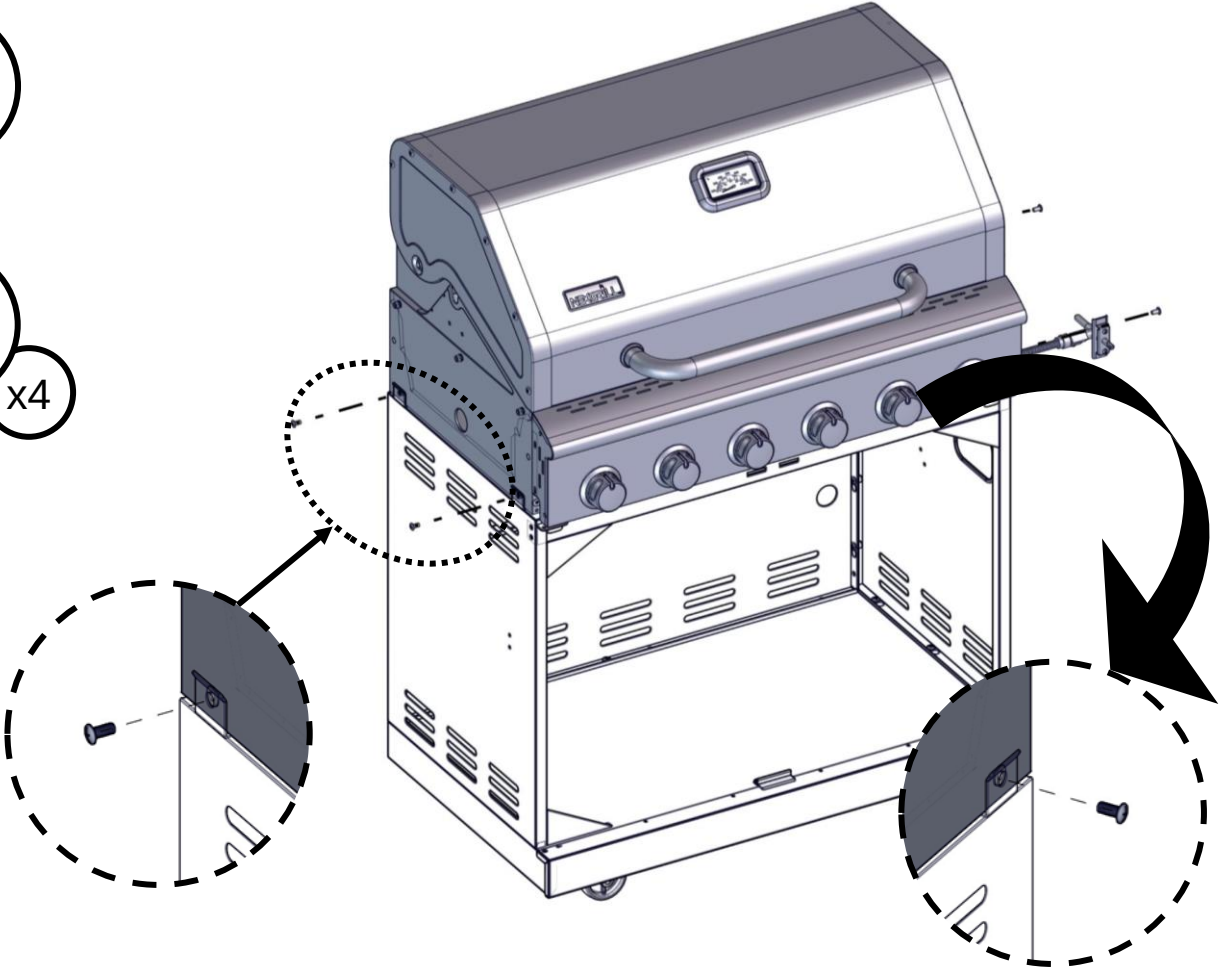


12

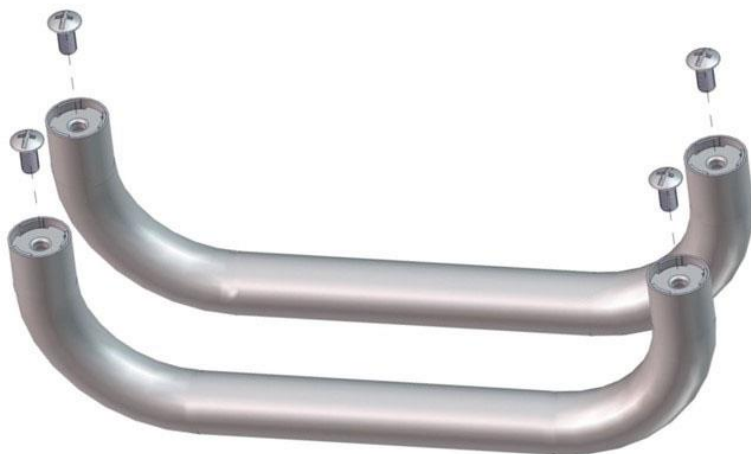 


13

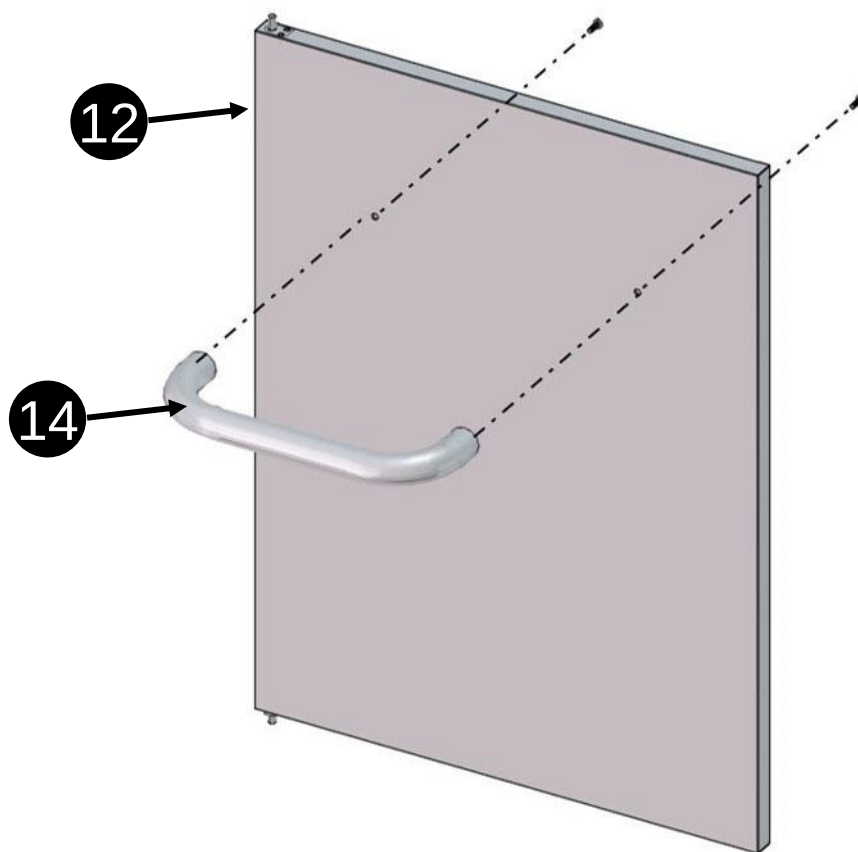 


14


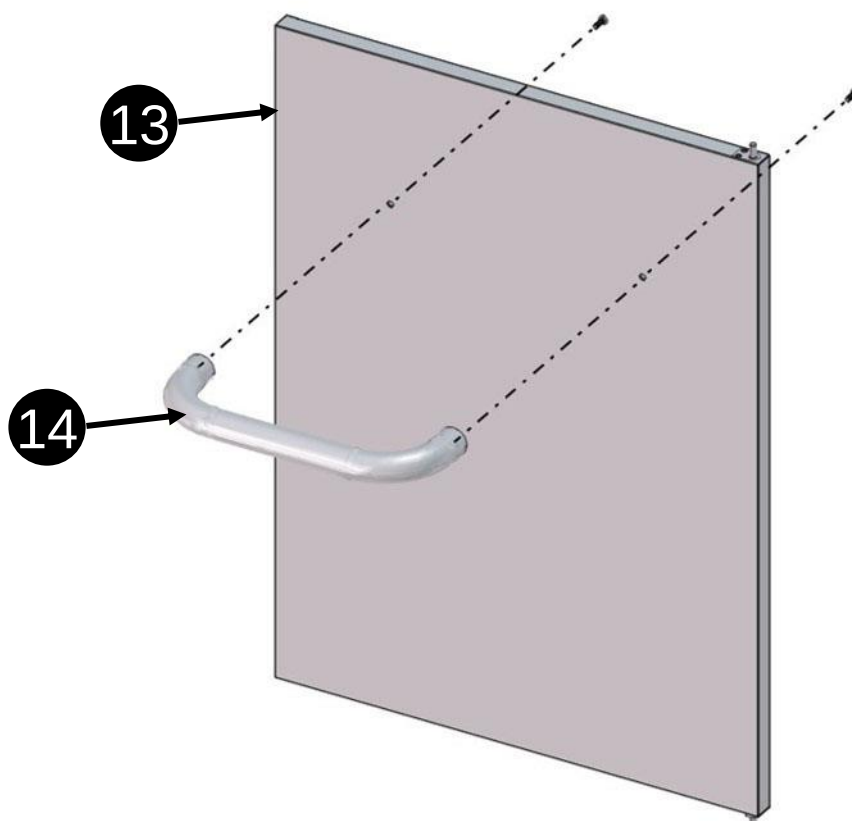 




15

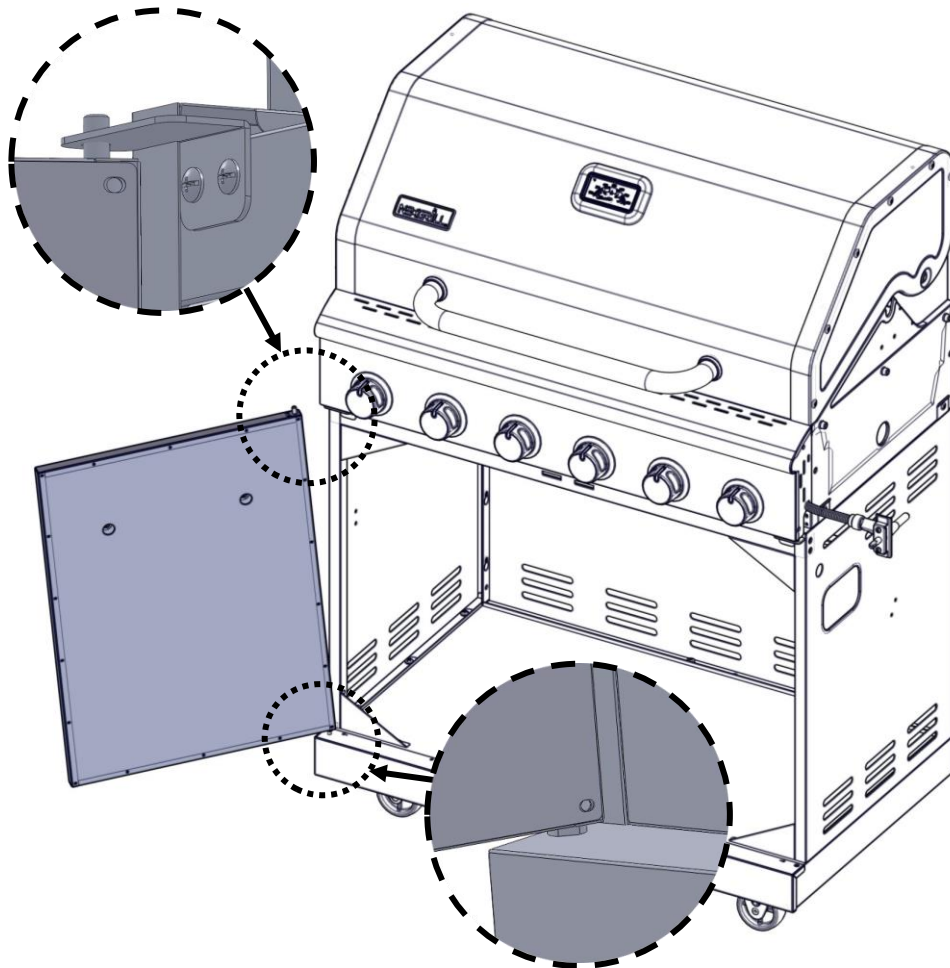 


16

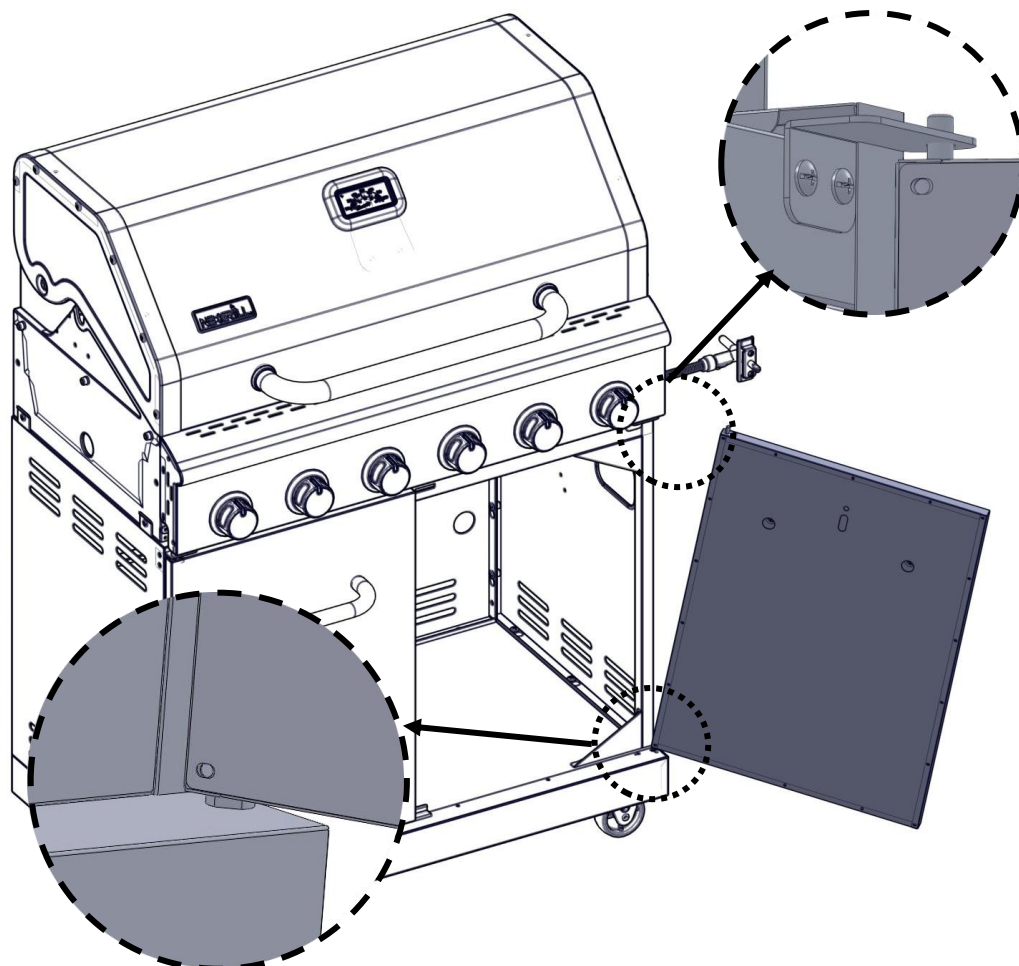 

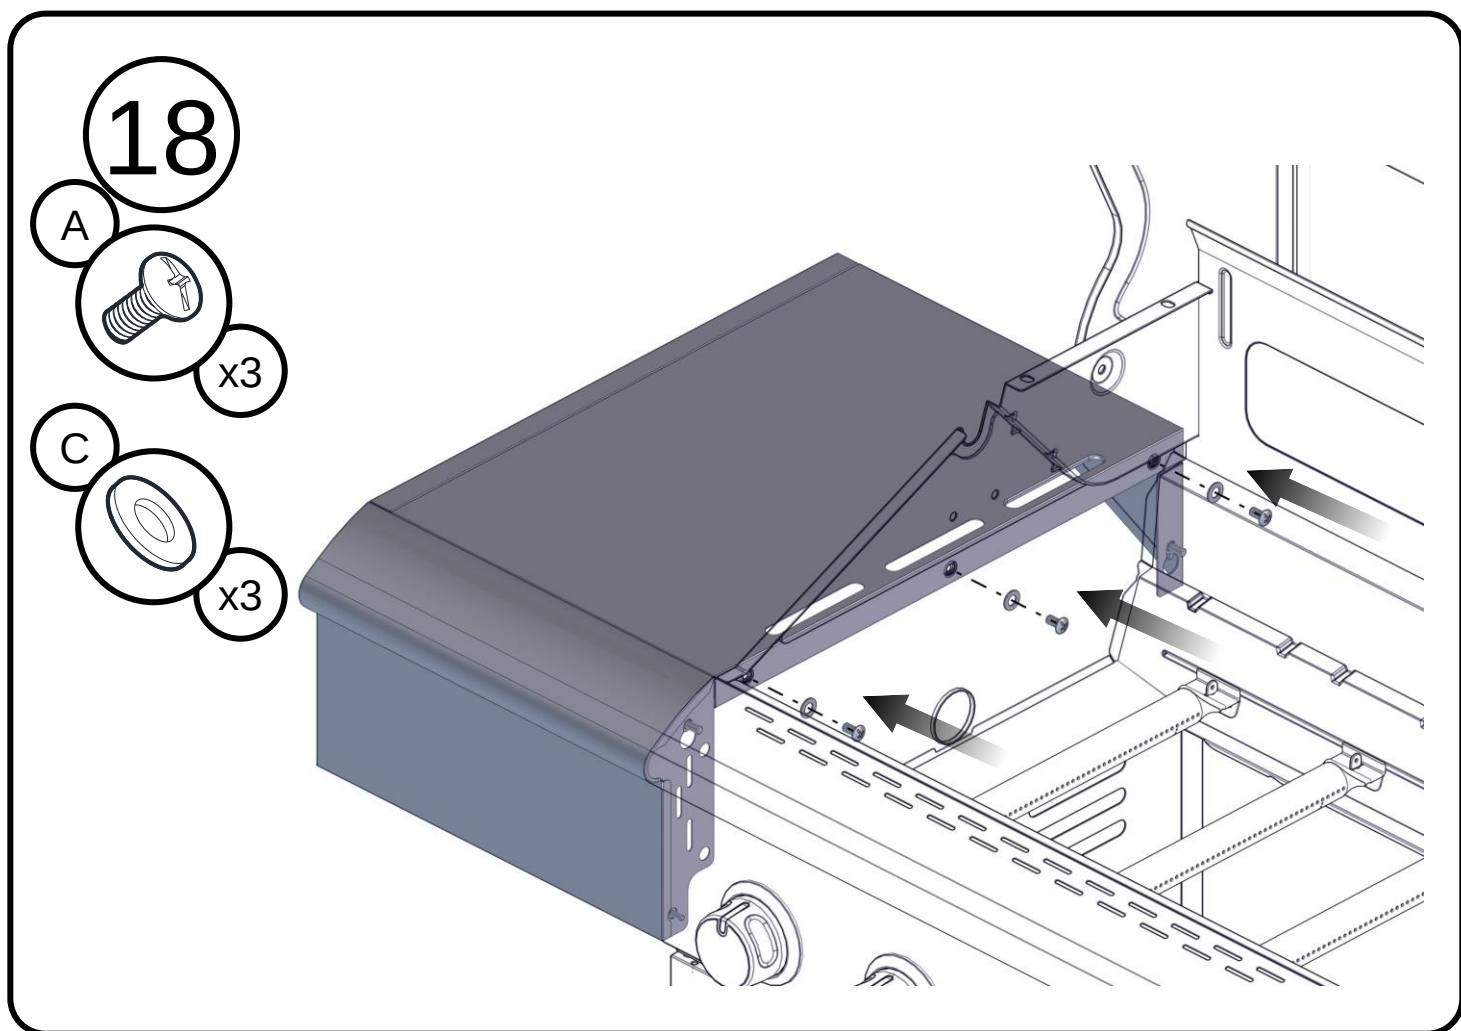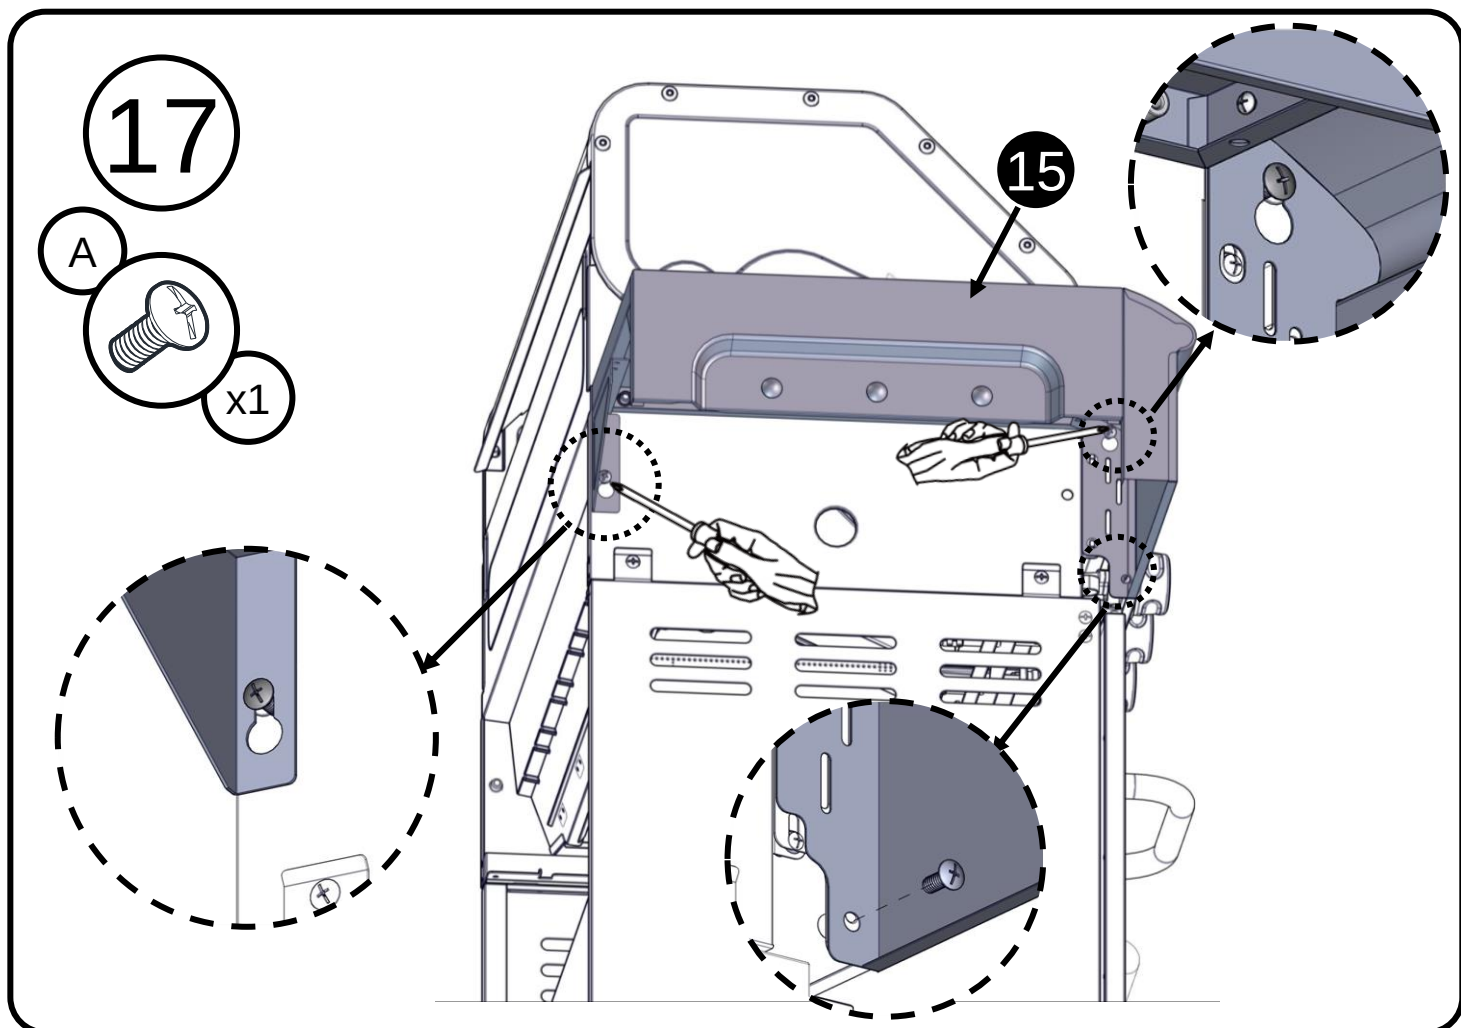  


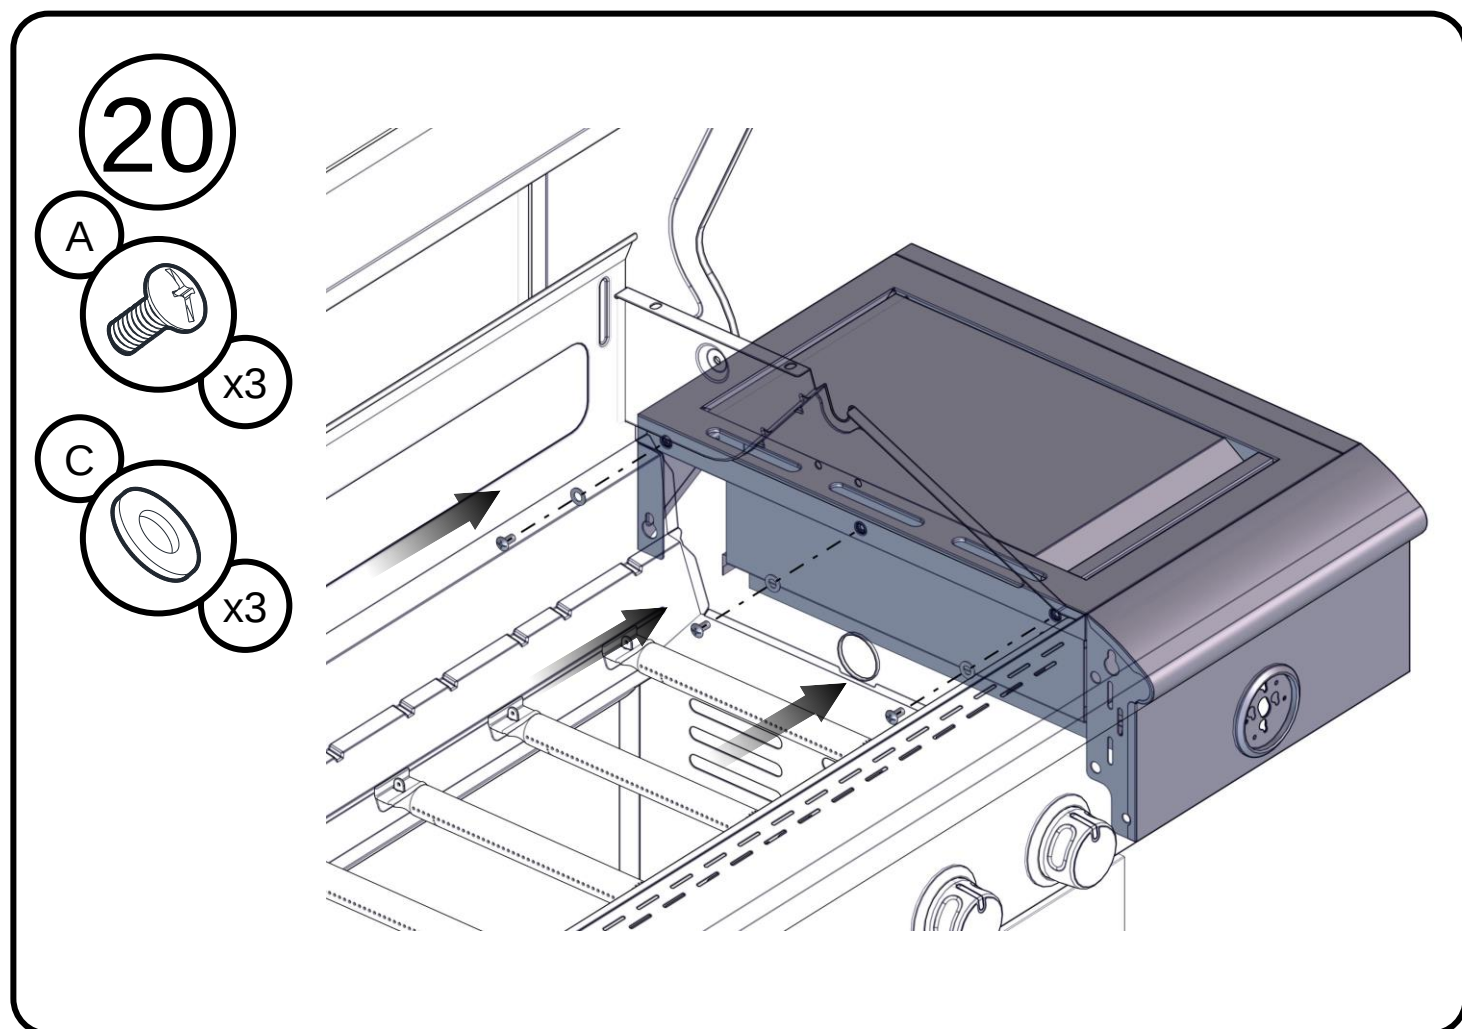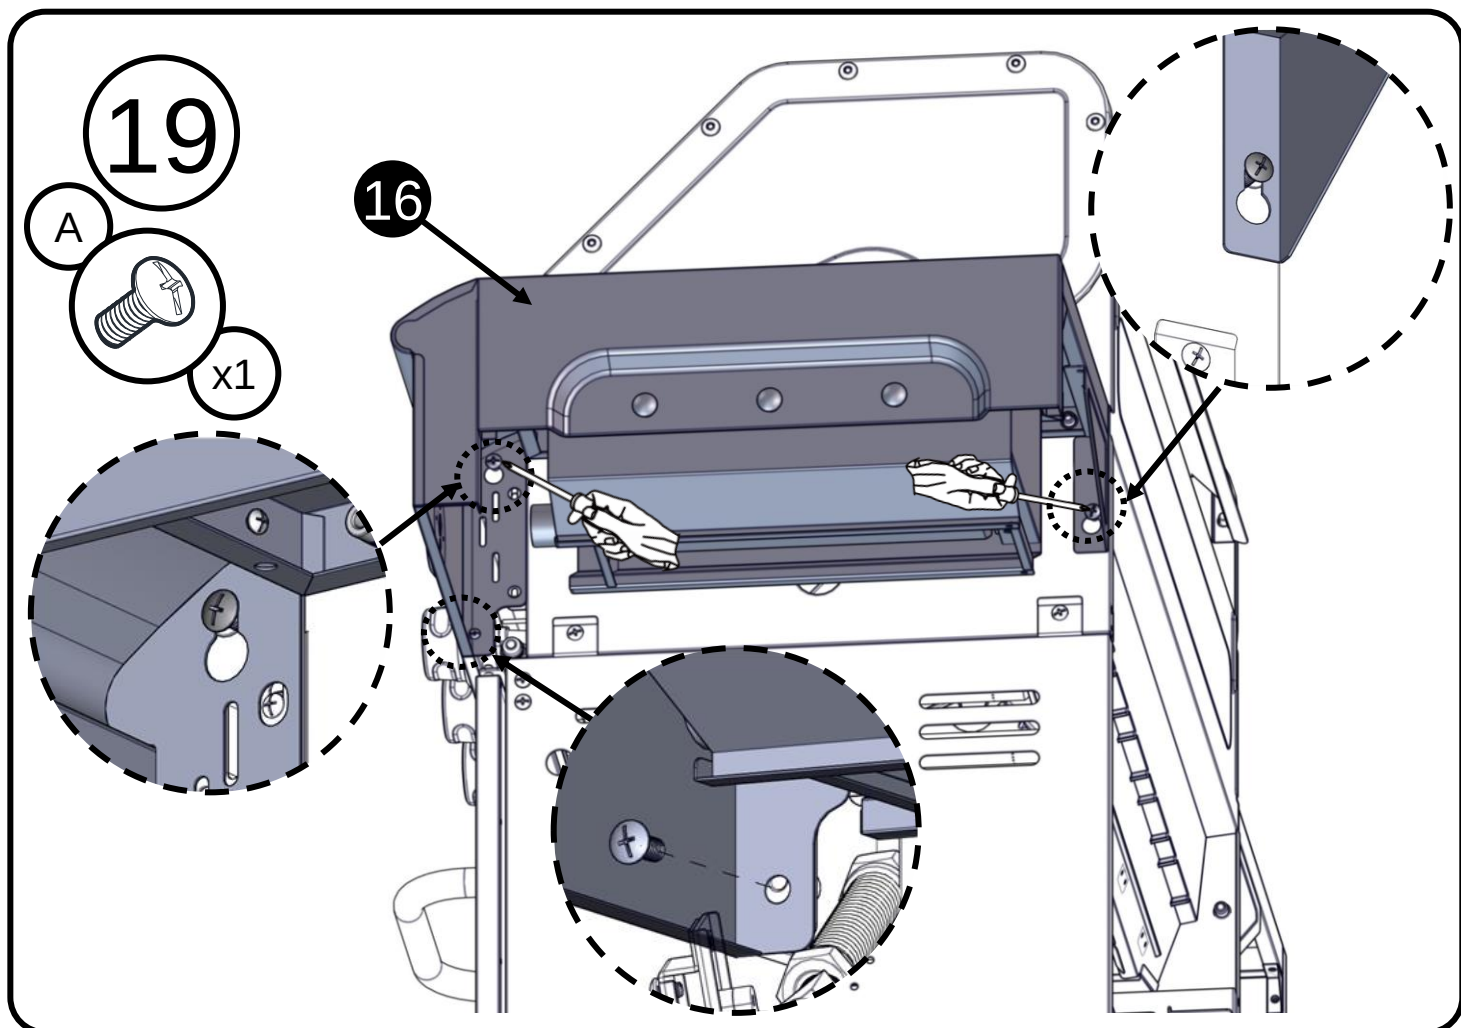  


21

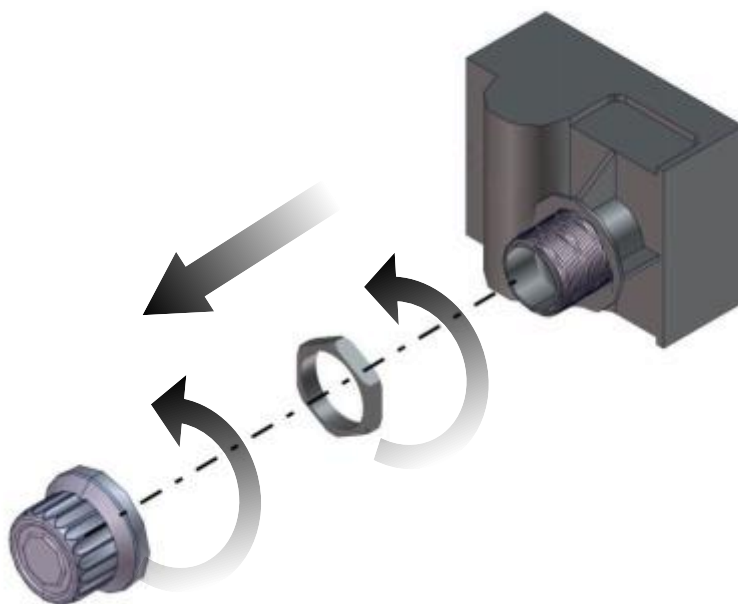 


22

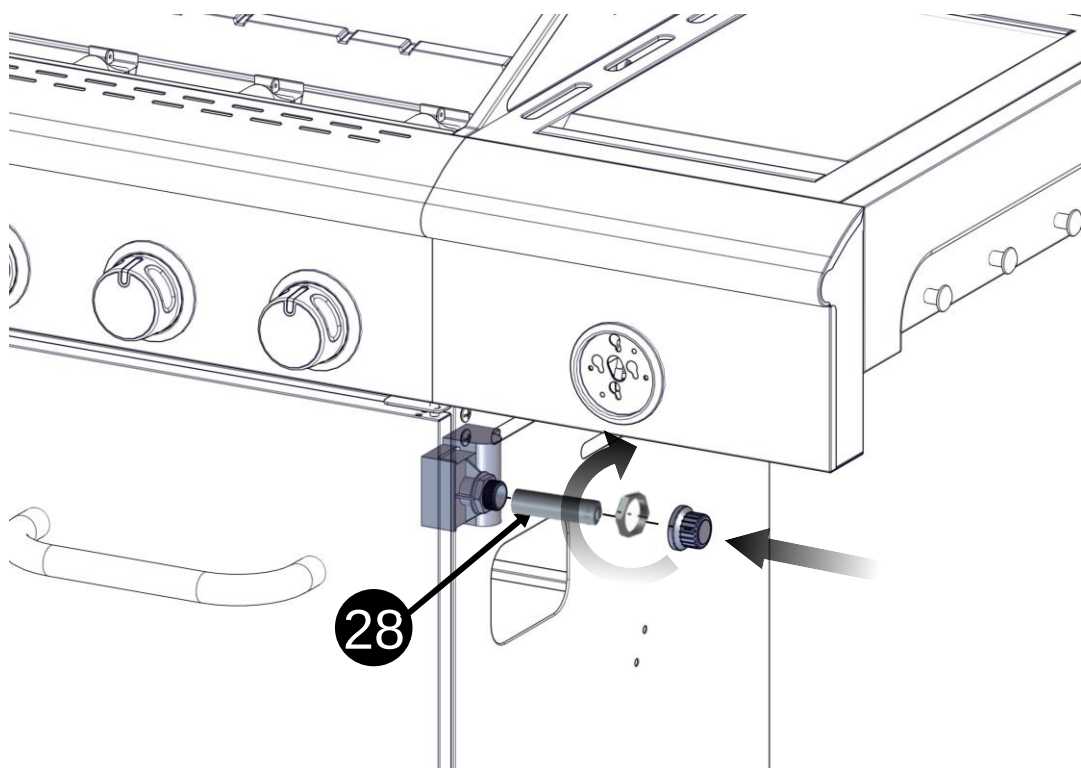 




23

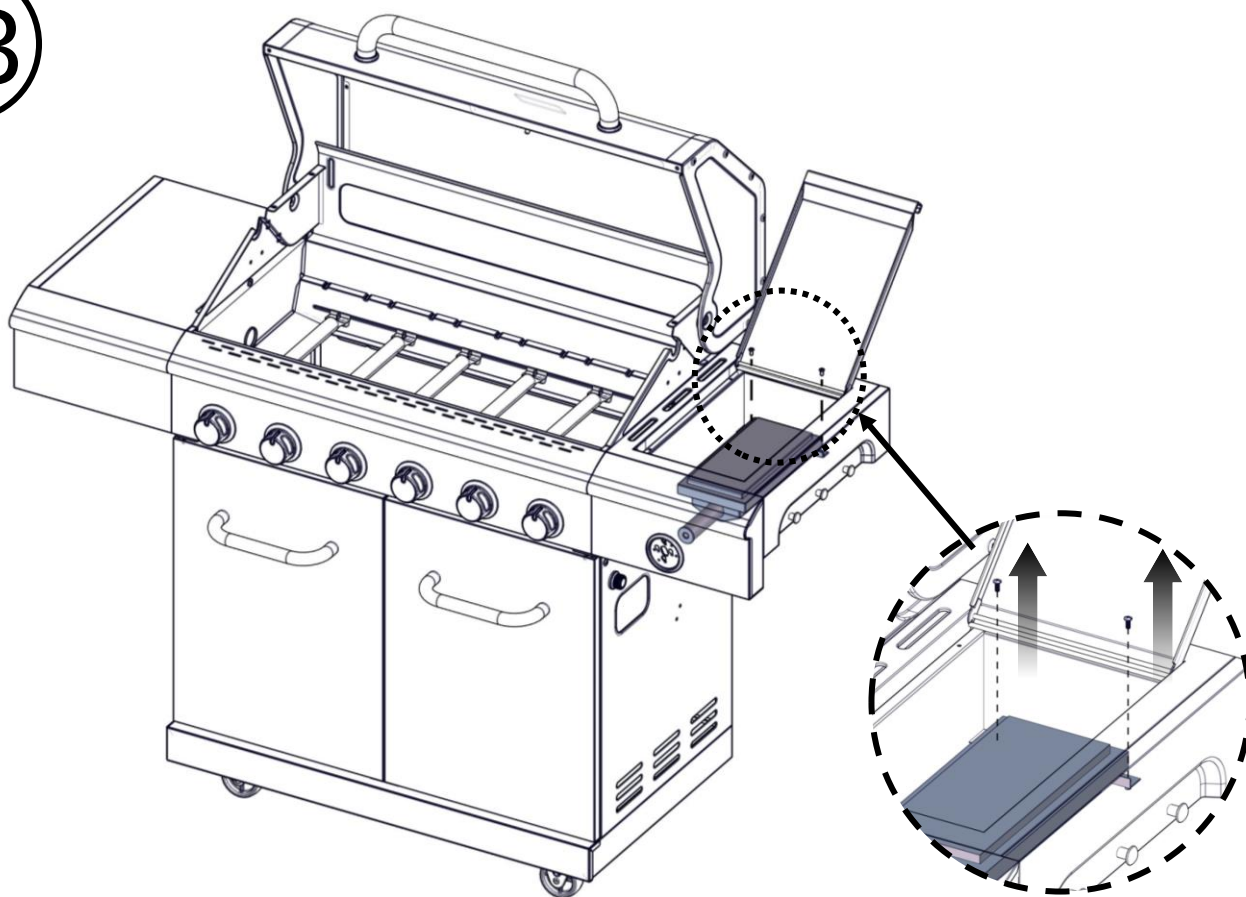 


24

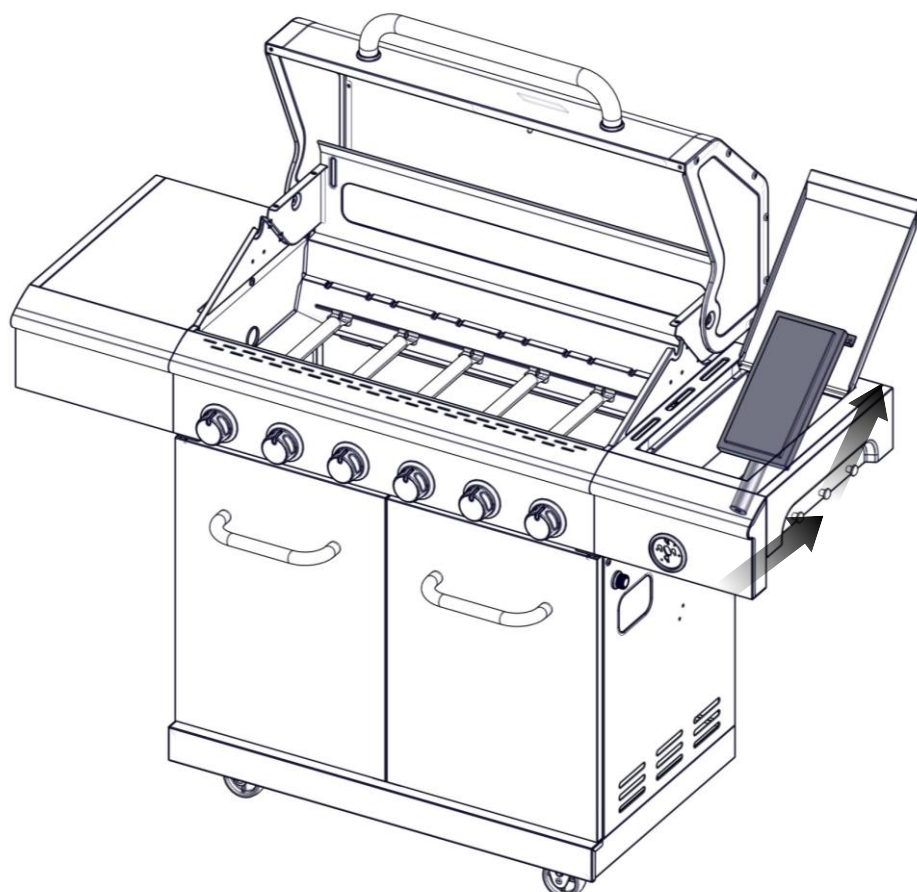 


25

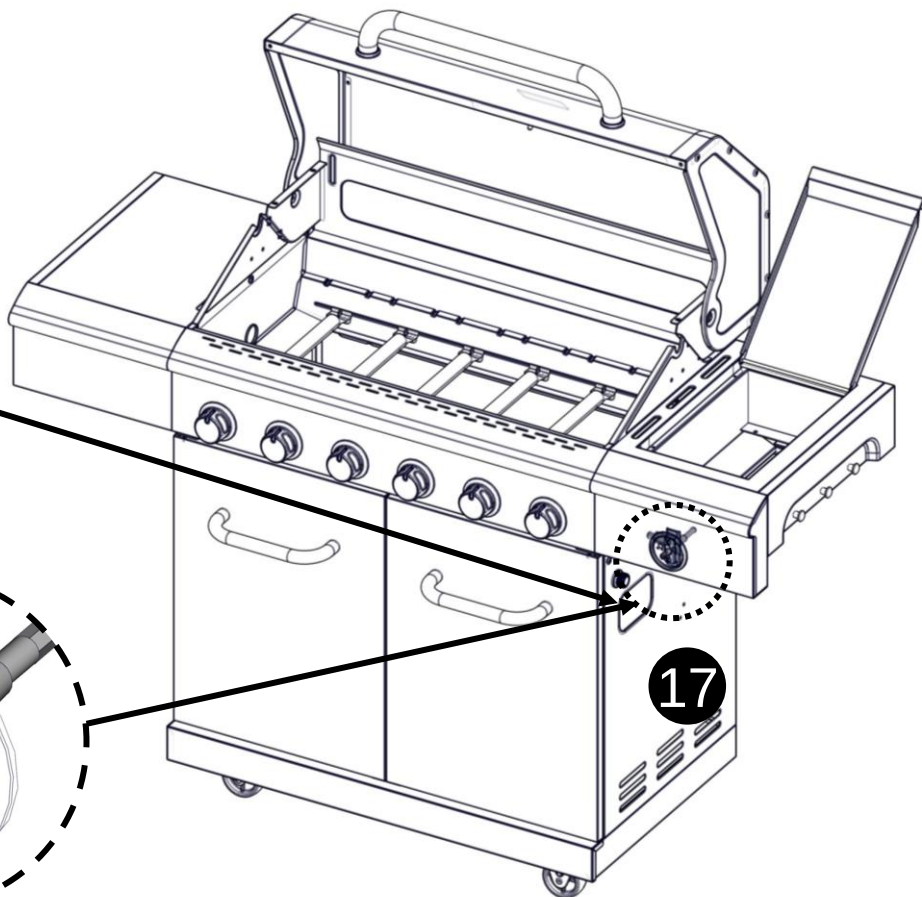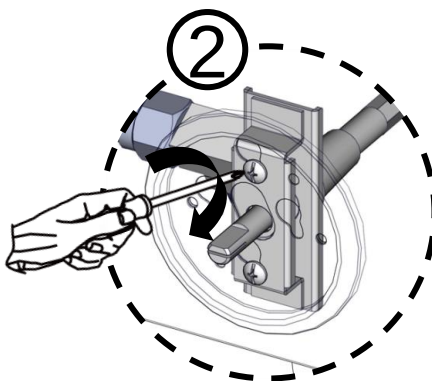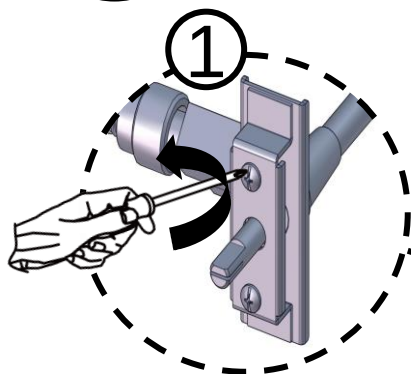   


26


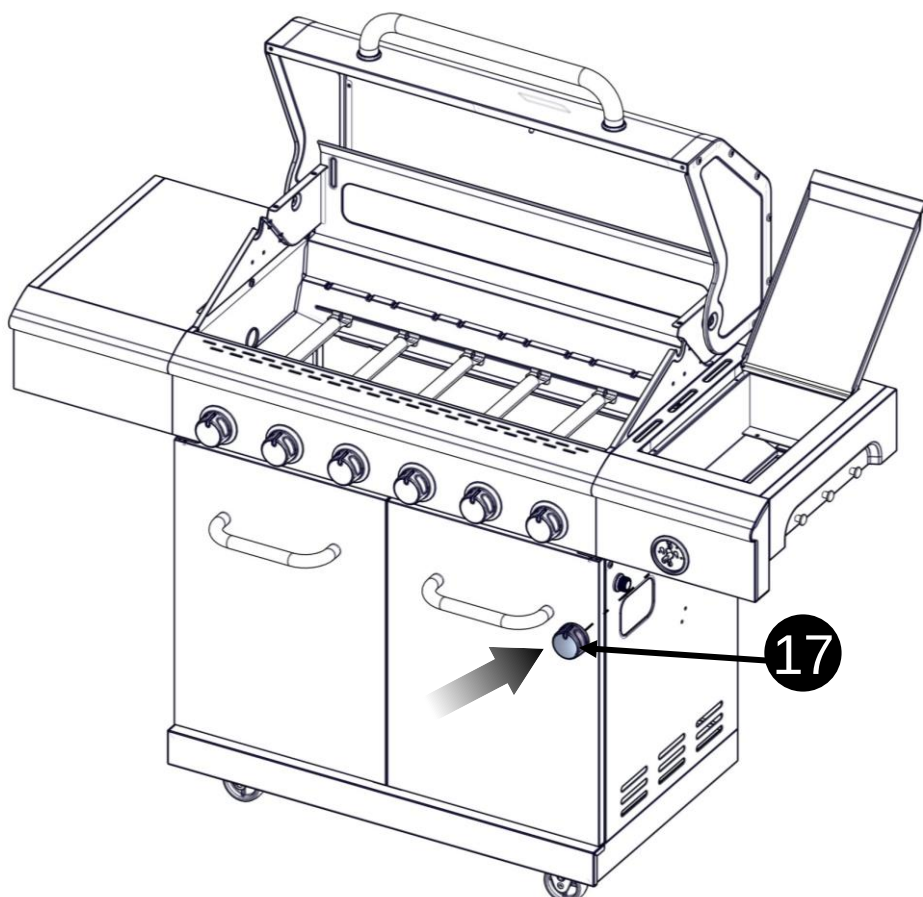 


27 !

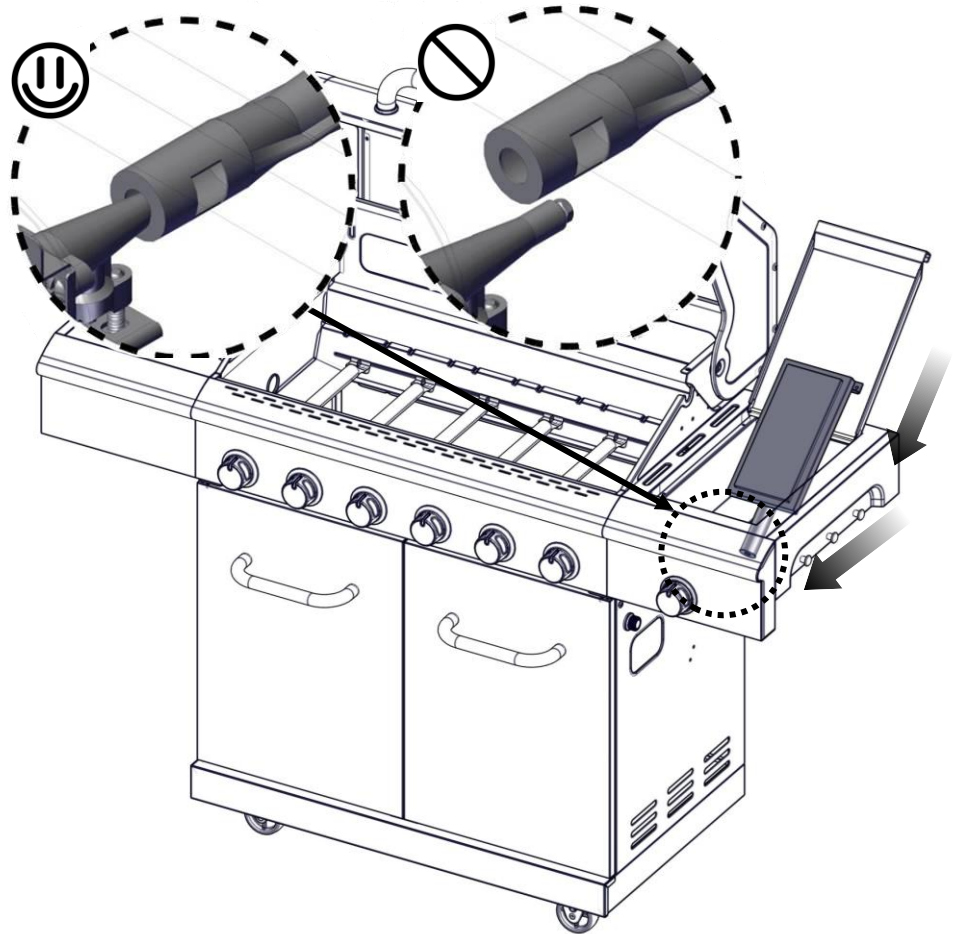 


28

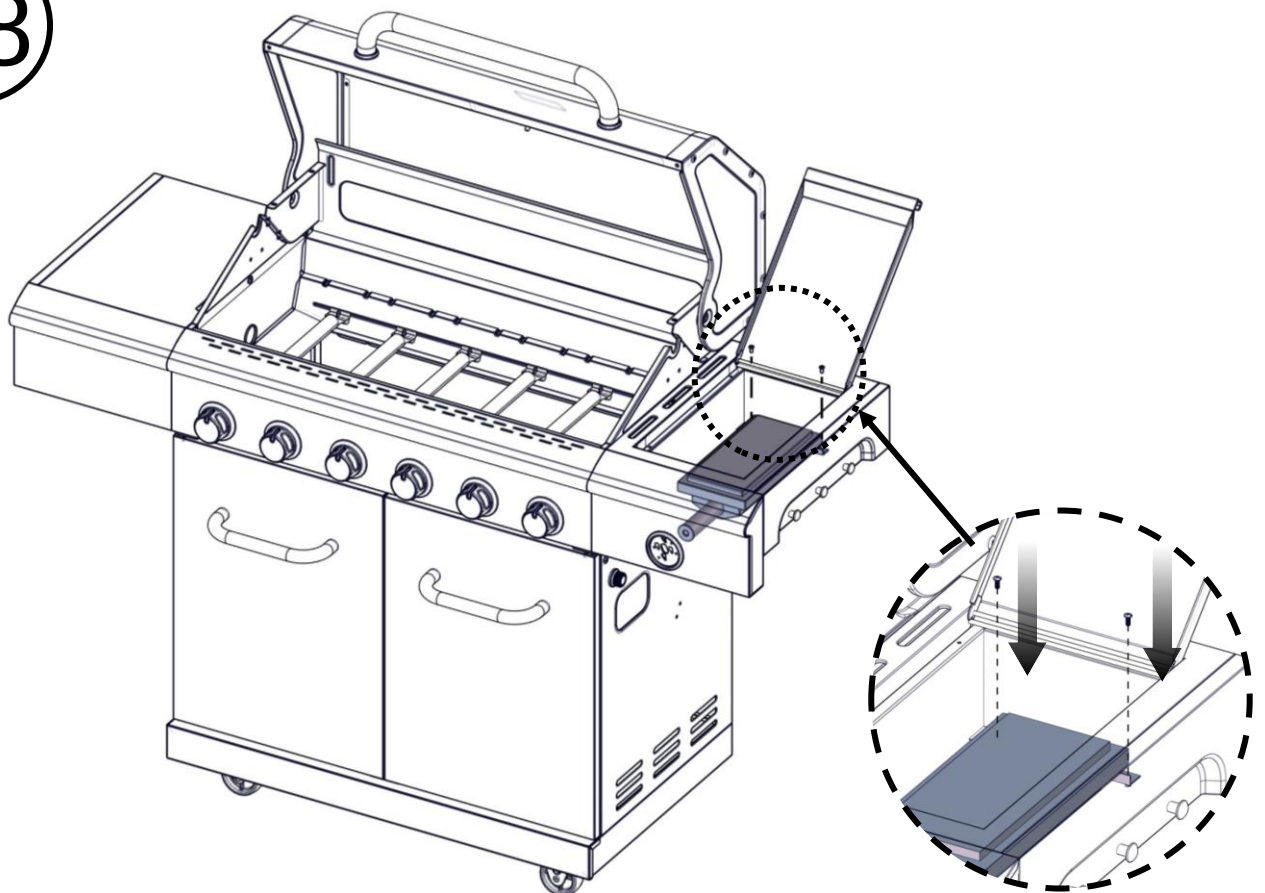 


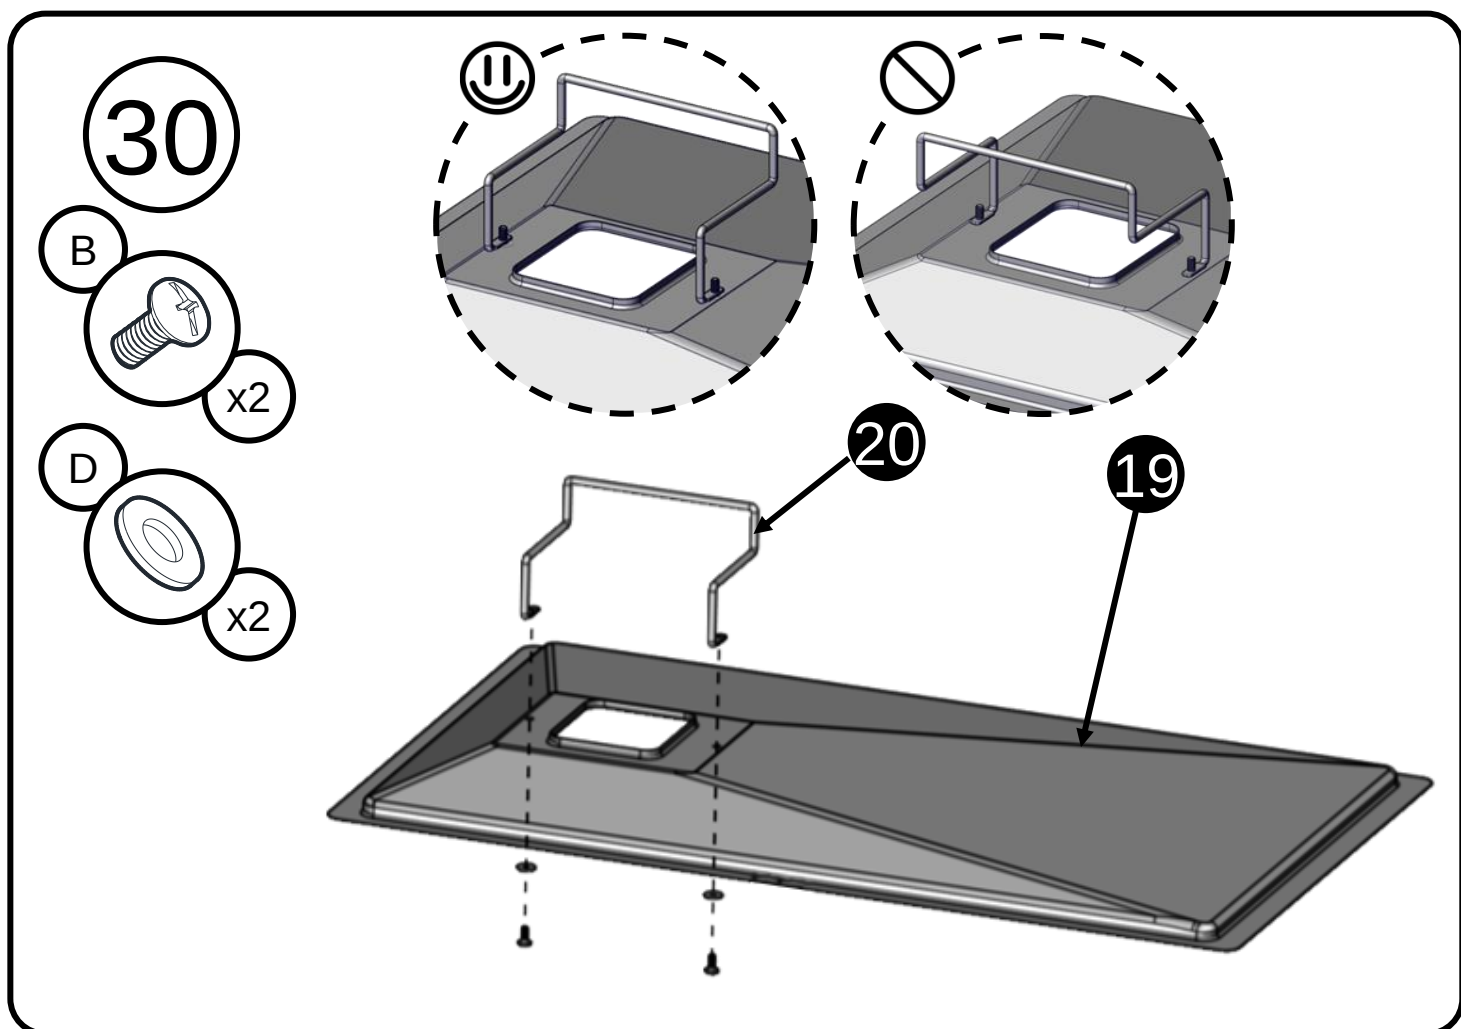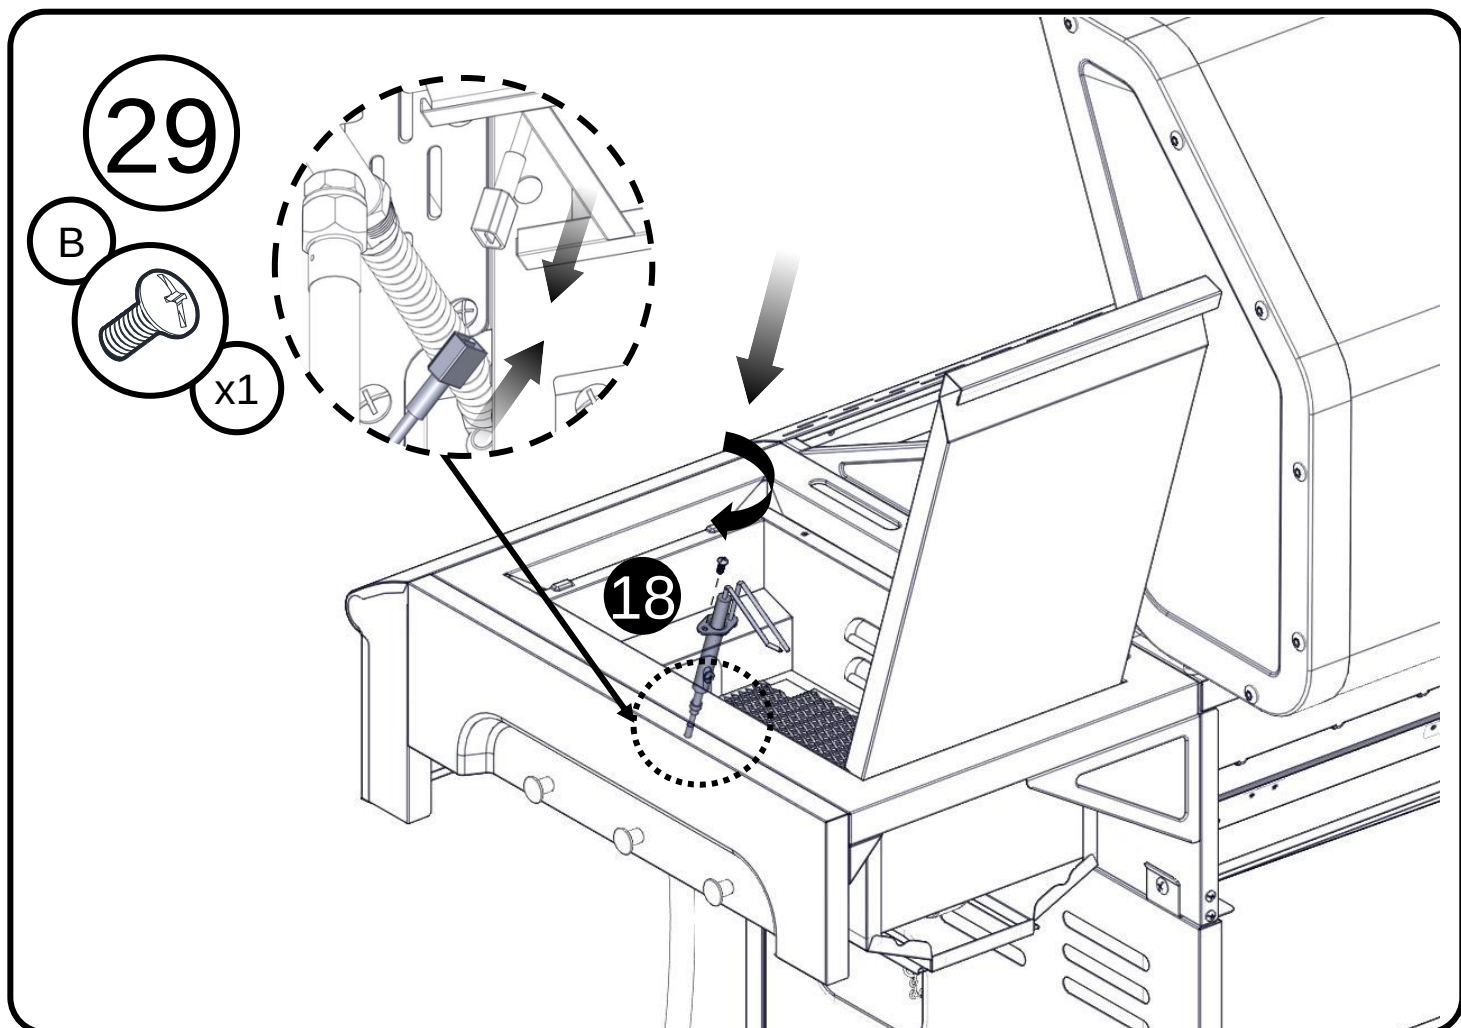  


31

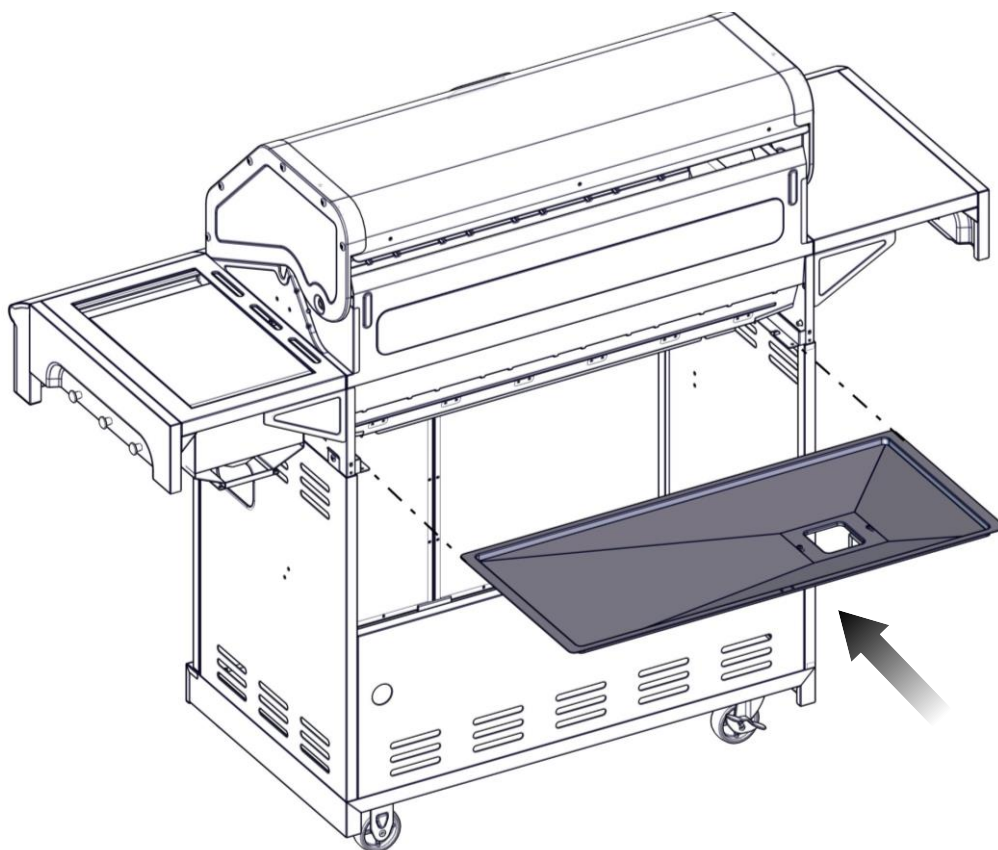 


32

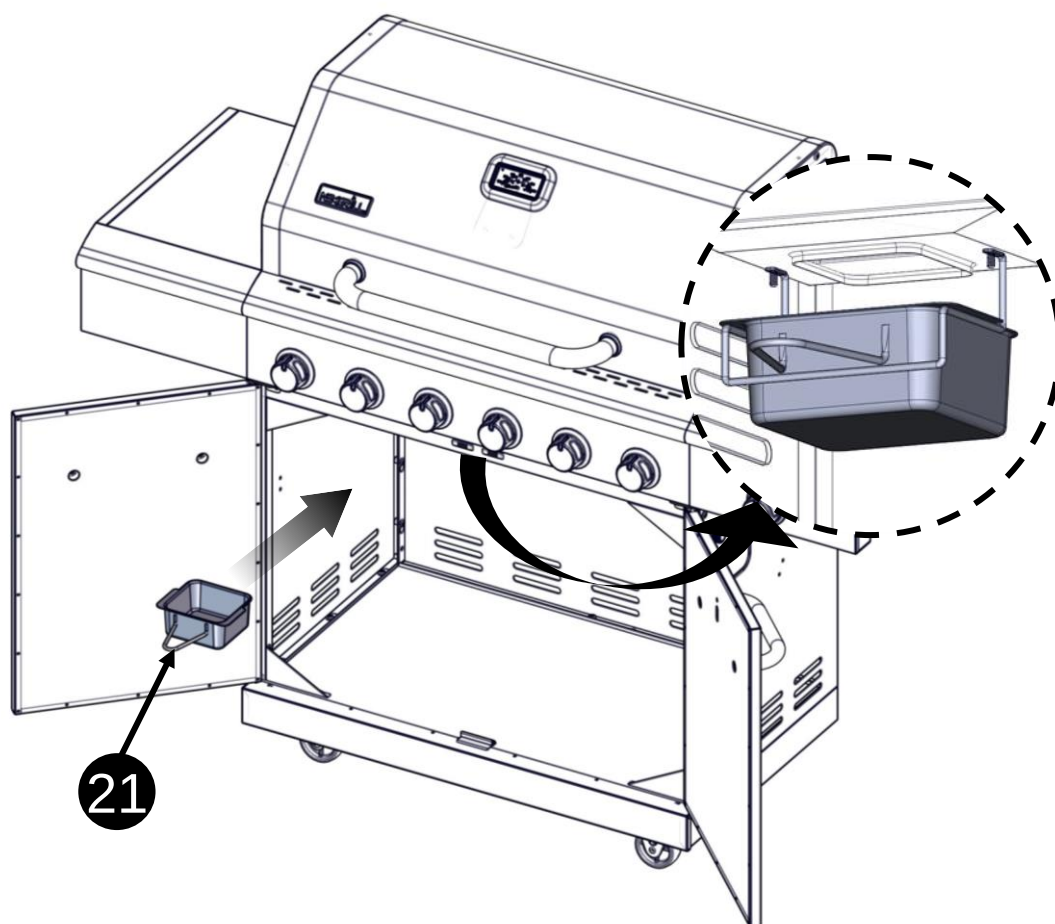 


33

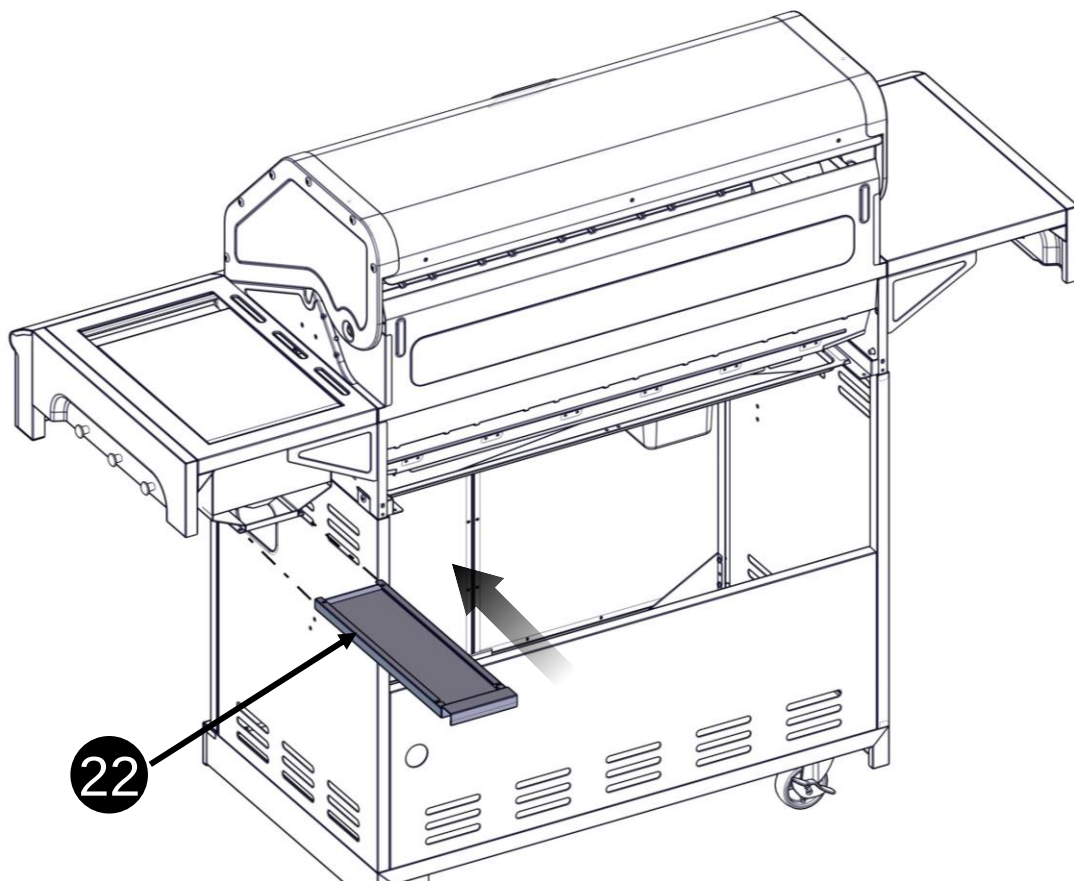 


34

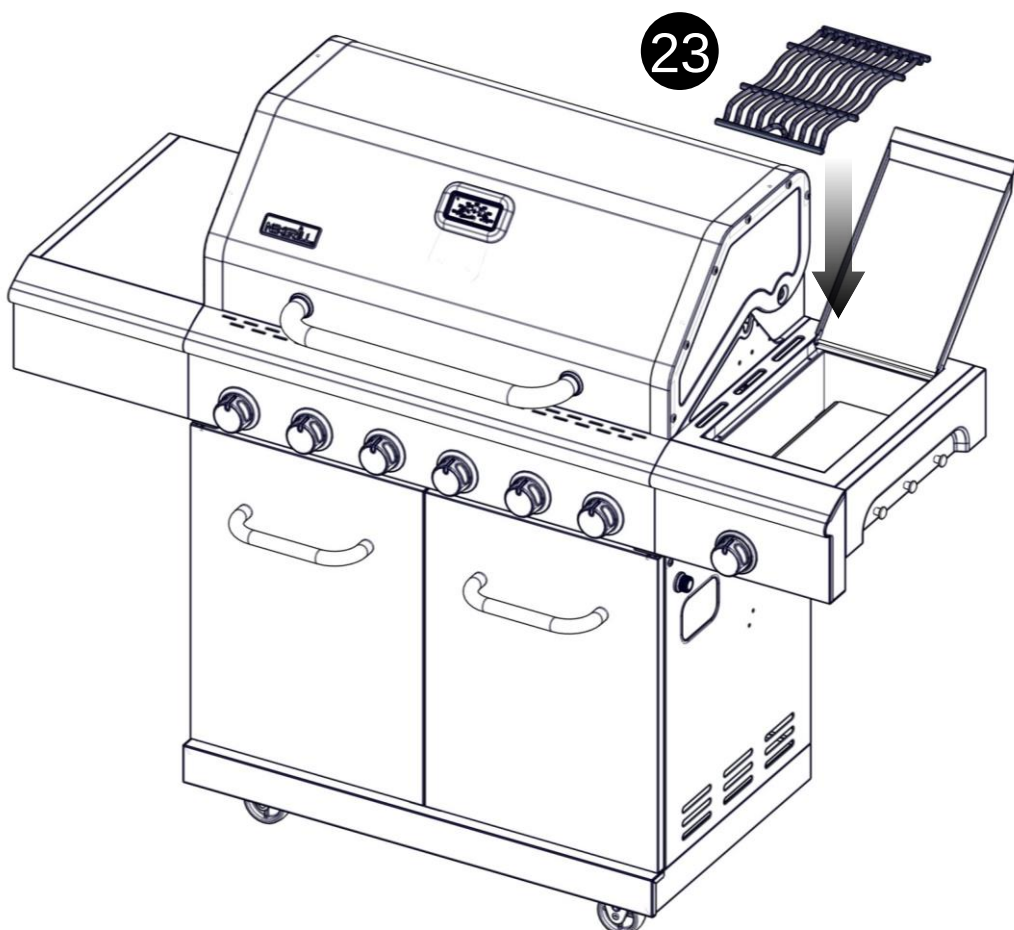 


35

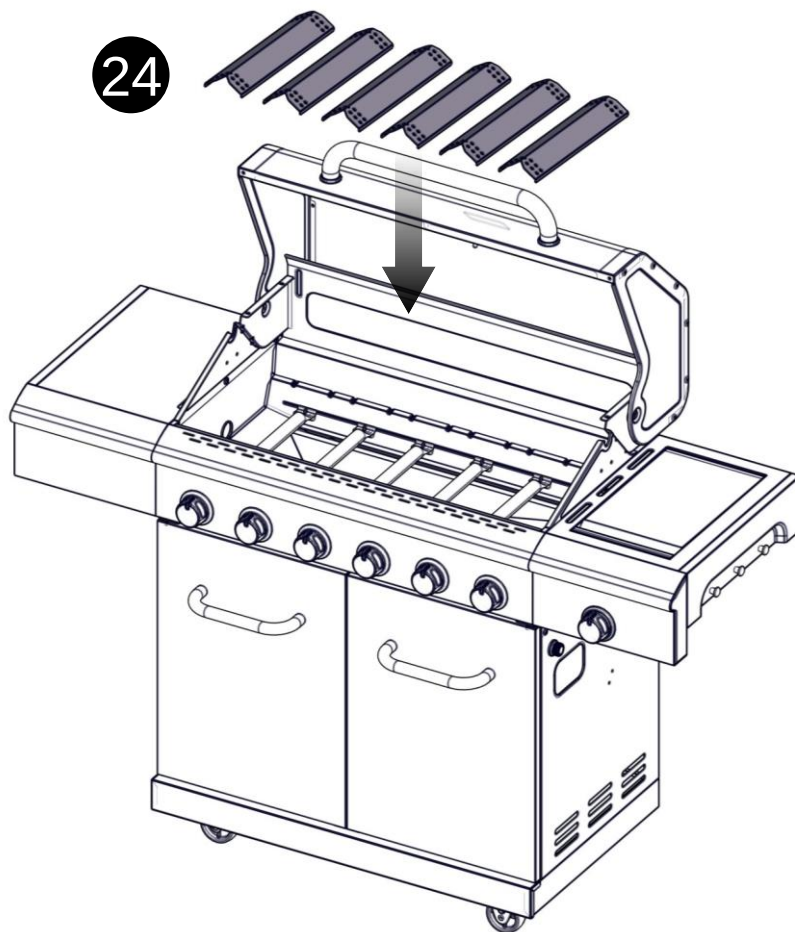 


36

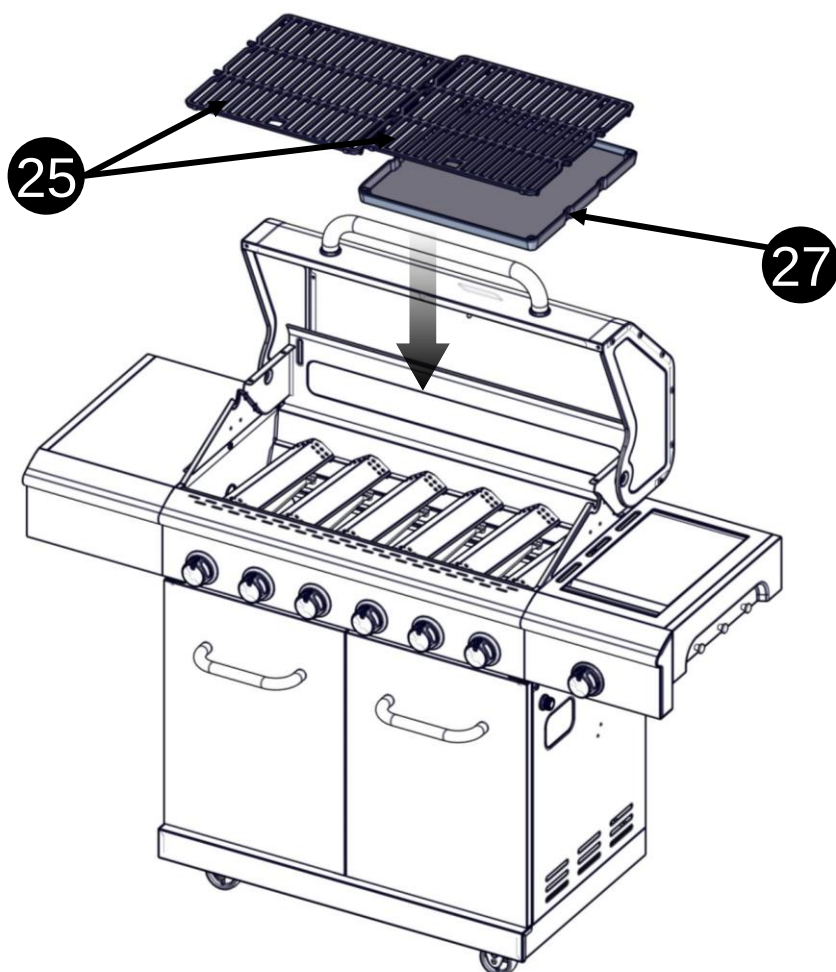 


37

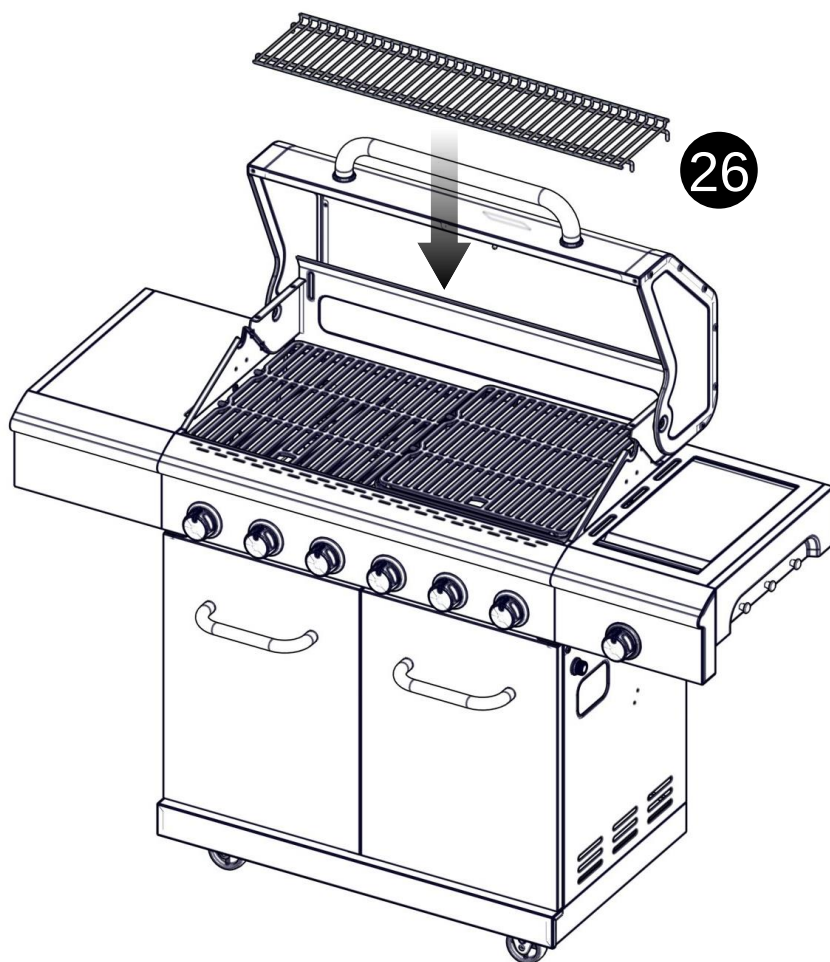 


38

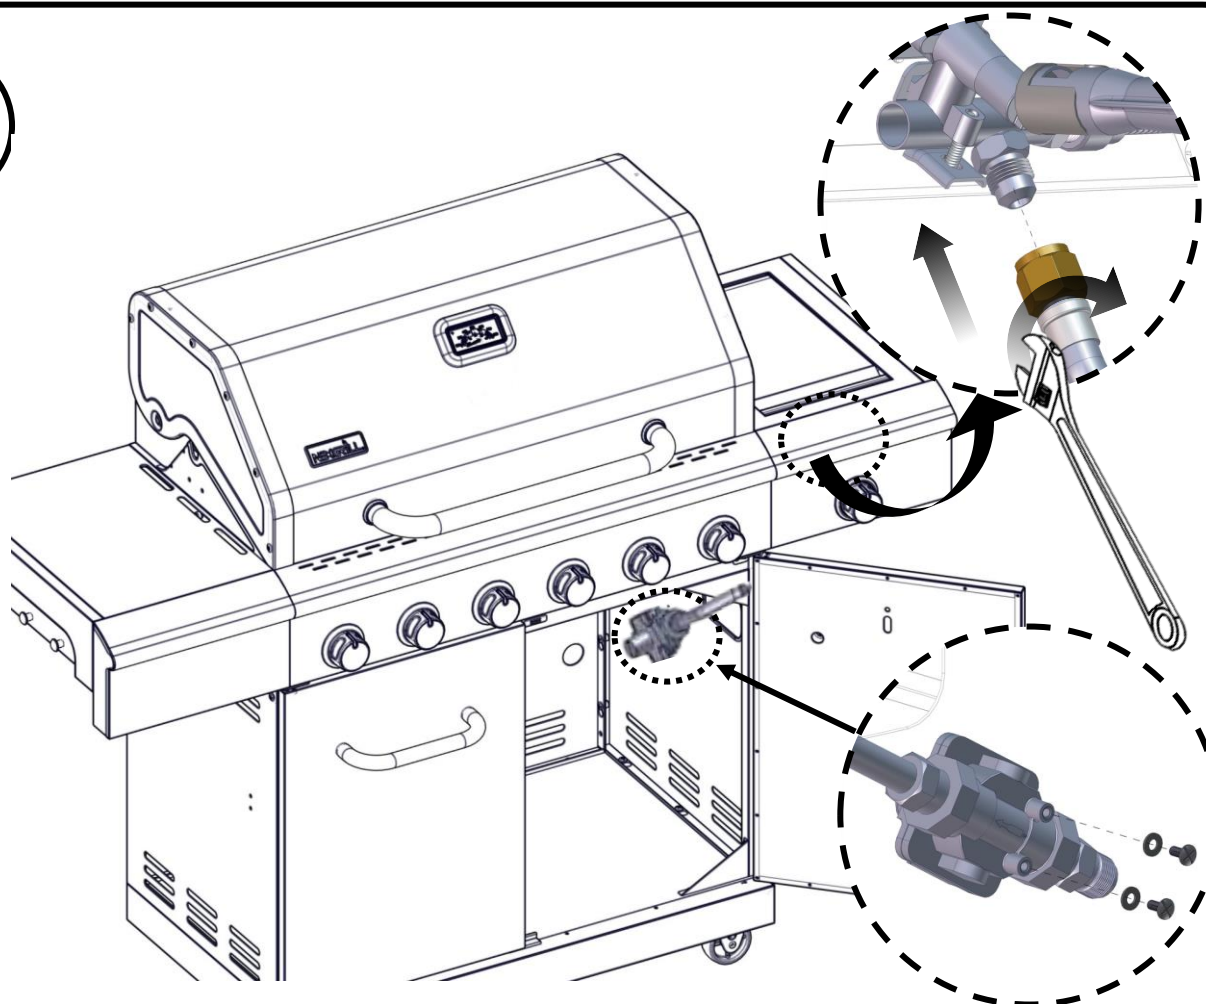 

39

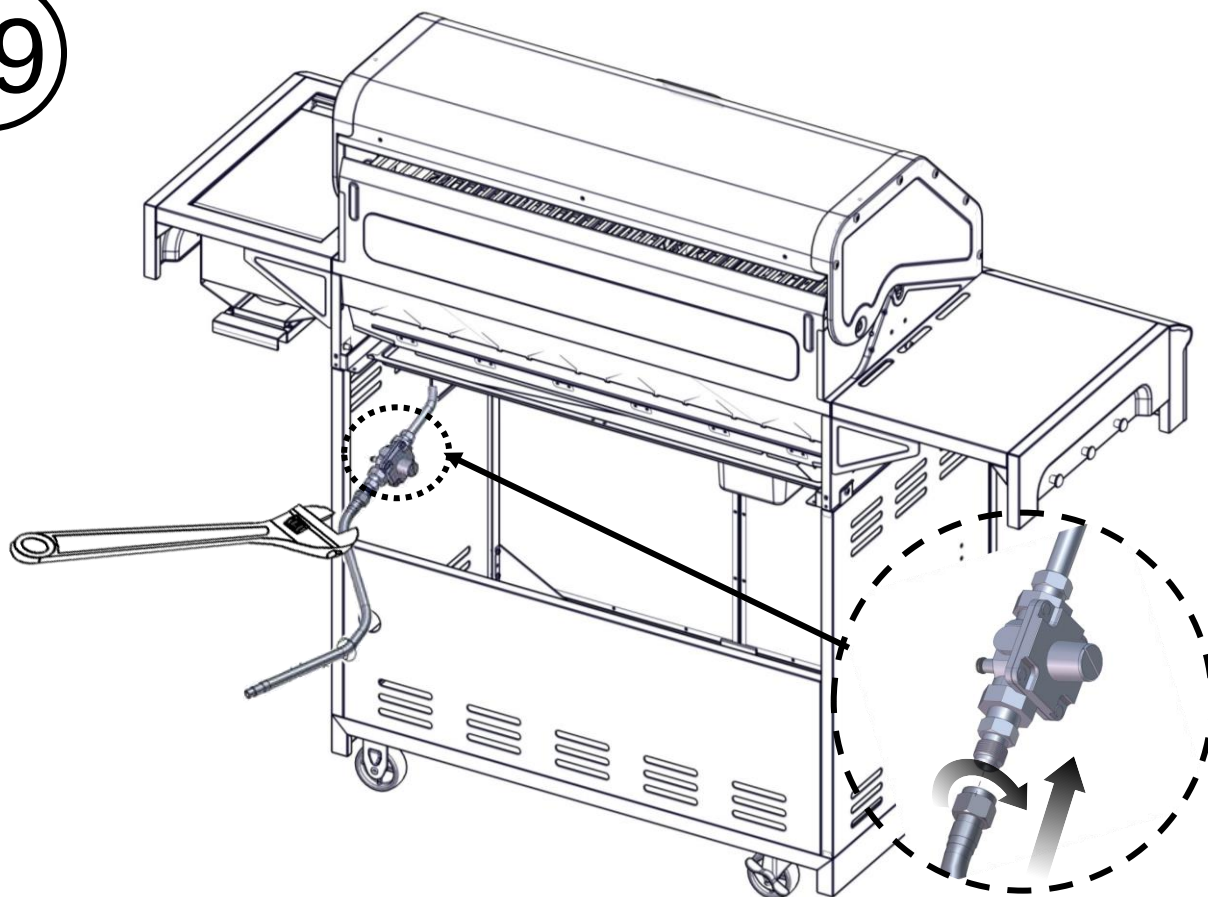 

40

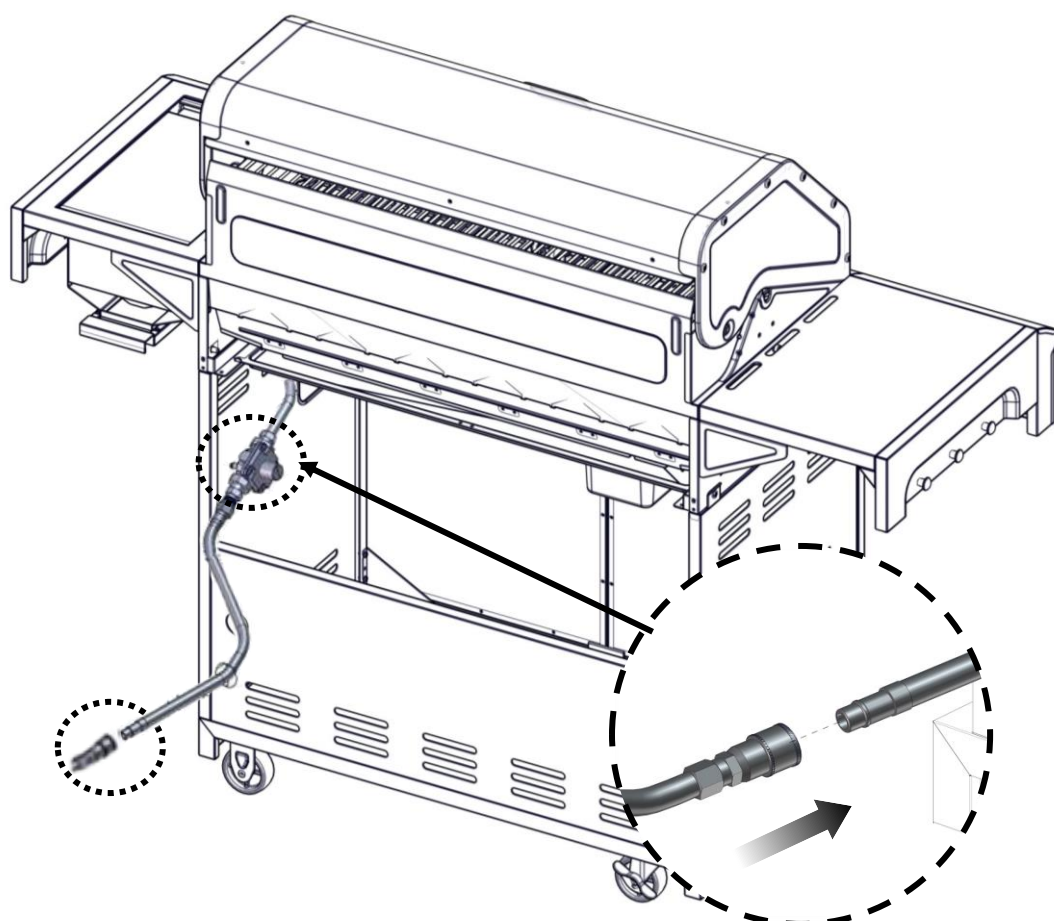 

41

