


# Crawl Space & Reversible Basement Ventilation Fans

Fan-powered ventilation improves indoor air quality, reduces moisture to help eliminate odors, reduces radon and protects both home and occupants.

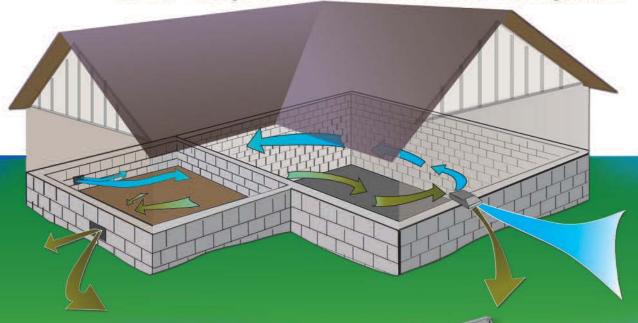





**Crawl Space Ventilators** 

- Excess moisture can cause mold, mildew and wood rot. UnderAire fans increase air circulation to fight condensation.
- Constant operation helps vent radon, treated wood off-gassing and odors that might otherwise migrate into living areas.



XCHANGEK Reversible Basement

Ventilation Fans

Many basements are stale, musty or smelly because of:

- Seasonal water issues, sump pits & floor drains.
- Off-gassing of molds that thrive when humidity is in excess of 60% RH.
- General lack of air exchange or ventilation.



# **UnderAire**<sup>™</sup>

### **Crawl Space Ventilators**



#### **Model V1**

One fan and small faceplate for ventilation openings through brick foundations. (Requires switch or dehumidistat to activate. Multiple ventilators may be controlled by a single switch or dehumidistat). Includes thermostat.



#### **Model V1D**

One fan and large faceplate sized for ventilation openings through block foundations. Includes thermostat, dehumidistat and pre-wired 6' power cord.





#### **Model V2D**

Two fans and large faceplate sized for ventilation openings through block foundations. Includes thermostat, dehumidistat and pre-wired 6' power cord.

#### **Easy to Install**

Ventilators are installed inside crawl space behind existing ventilation opening. Screws and masonry wall anchors are included.

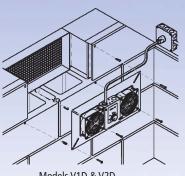

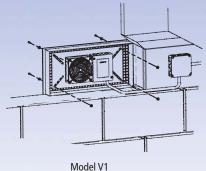

Models V1D & V2D


# UnderAire<sup>™</sup> Crawl Space Supply Fans (Models CS1 & CS2)

Pair with V-Series fans to boost the supply of outdoor air into crawl spaces with too few or undersized passive vents or stagnant areas around knee walls or corners. Mounting plate can be trimmed for smaller opening.





# Designed and Engineered for Years of Service

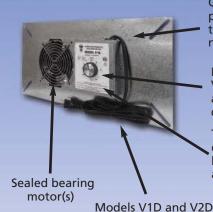

Galvanized face plate may be trimmed if necessary

Models V1D and V2D include adjustable dehumidistat

Thermostat deactivates fan below 40°F to avoid freeze-ups

Suitab

Suitable for Damp locations

# Facts to Know About Crawl Space Ventilation

have 6' grounded

power cord

From Mississippi State University Extension Service:

If soil is damp, as much as 20 gallons of water per 24 hours can evaporate into the air in a 1,400 sq. ft. crawl space.

Primary causes of excess moisture include:

- Surface runoff water
- Poor ventilation
- No or poor ground vapor barrier

Signs of excess moisture in crawl space:

- Soil is wet
- Surface organism growth on floor joists
- Wet insulation
- Musty odors in crawl space or living areas
- Excessive moisture in living areas tending to migrate towards windows

# XCHANGER"

### **Reversible Basement Ventilation Fans**

Fans use only 40 watts compared to over 1,000 watts for the typical dehumidifier. Save over \$100 per year in electrical costs.

 


#### Also use XchangeR Fans to:


- Comply with residential ventilation requirements
- Dehumidify and freshen non-ventilated crawl spaces
- Supply make-up air for stoves or fireplaces
- Ventilate hot garages, storage areas & workshops
- Keep closed up cabins or vacation homes fresh
- Dilute basement radon levels

#### **Three Air Flow Options**


Easily reverse the direction of the airflow to:



**Exhaust musty air** 

 

Supply fresh air

 

Or position one fan in each direction for balanced air exchange with no bypass from either air stream

#### To Reverse **Air Flow**

(Model X2D shown)



**Pull Fan Out** 



Rotate Fan 180°



**Push Fan Back In** 

#### **Simple Installation**

#### Model X2D

Use X2D in applications with rooms located along an exterior wall. Includes dehumidistat control and magnetic draft stops. Install X2D through a 12 1/4 x 5 1/4 inch opening in a basement rim joist or any outside wall. Plug the XchangeR fans into included dehumidistat control and plug the control into a standard outlet.



#### **Model X2R**

Use X2R in applications where outside hood must be ducted to the room X2R is installed in. Mount X2R below or between floor joists / trusses or secure to wall in any orientation for installation flexibility. Install hood through 13 3/4 x 6 1/2 inch oval opening. The X2R includes magnetic draft stops but does not include a dehumidistat control so that it can be paired with the control best suited for the



Between joist/truss mount



#### **Easy Maintenance**

Rugged outdoor hood with easy to remove and clean screen.



## **UnderAire**™ **Crawl Space Ventilators**


#### **Specifications**

Model	V1	V1D	V2D
Performance	110 CFM	110 CFM	220 CFM
Motor	115/1/60 0.30 amps	115/1/60 0.30 amps	2 @ 115/1/60 0.60 amps
Dehumidistat	Optional Model DH10 dehumidistat available separately	OFF/ON or 20-80% RH	OFF/ON or 20-80% RH
Thermostat	Opens at 40°F	Opens at 40°F	Opens at 40°F
Dimensions	14 3/8" x 6 7/8" x 2"	18" x 9" x 2"	18" x 9" x 2"
Trim Dimensions	9 3/8" x 5 3/8"	9 3/4" x 6"	14" x 6"

# How to determine the number of *UnderAire*™ Ventilators needed:

Calculate the cubic area of the crawl space by multiplying the length x width x height. Divide this number by 15 to determine the minimum CFM necessary to fully ventilate the space in 15 minutes. Example: 20' wide x 40' long x 3' high crawl space = 2,400 cubic ft. 2400 cubic ft. ÷ 15 minutes = 160 CFM of ventilation. Choose two V1 or V1D ventilators or one V2D ventilator.

### **XchangeR™ Ventilation Fans**

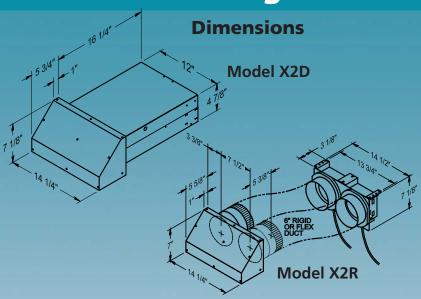

# **Specifications**Model X2D & X2R

1 Fan 2 Fans

Voltage	120	120
Watts	20	40
Amps	0.3	0.6
CFM	90	180

#### For Dehumidification

The X2D includes a Dehumidistat control to automatically cycle based on user set RH (Relative Humidity) level. The model X2R requires the DH2P plug-in Dehumidistat for automatic RH based operation.

# For Timer Based Air Exchange

.33 Air Change / Hour (ACH) recommended

Basement FT<sup>2</sup> XchangeR Run
(8 foot ceiling) Time/Hour

•		J.	
		<b>1 Fan</b> (90 CFM)	2 Fans (180 CFM
	500	15 min	7.5 min
	750	22 min	11 min
	1000	30 min	15 min
	1250	37 min	18.5 min

#### **Optional Accessories**

Add the SCP plug-in speed control for variable performance or use any plug-in timer to cycle as desired.

Model
SCP



If using the XchangeR in an enclosed utility room with chimneyvented heating equipment, use the optional DT2-6 6" duct take-off and G-6 diffusers to pull exhaust air from an adjacent room.





- SWR Switch-It Wireless 120v Outlet
- G-6 6" White Plastic Exhaust / Intake Grille
- BD-6 6" Spring Return Back Draft Damper (for use with X2R)

#### Model X2D Includes Automatic Dehumidistat Control



Turn either fan on or off and automatically operate your basement fan by adjusting the dehumidistat control to the level needed. Rotate the dial fully clockwise for constant operation. For X2R models, order optional DH2P Control.

#### **Available From:**

### TJERNLUND PRODUCTS, INC.

1601 Ninth Street White Bear Lake, MN 55110-6794 Phone: 651.426.2993 800.255.4208 Fax: 651.426.9547 Visit our web site: tjernlund.com Email: fanmail@tjfans.com

