



Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:


- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.
14625 Clark Ave. City of Industry, CA 91745
Tel: 800-330-0388
service@sunpentown.com
www.sunpentown.com



Electric Rice Warmer

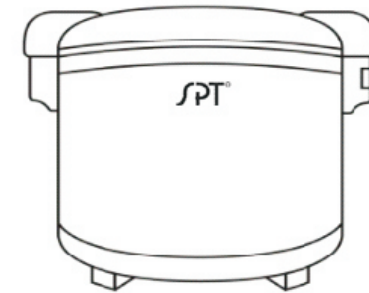

SCW-80M (80 cups)

SCW-81M (80 cups)

Thank you for your purchase. Please read this instruction manual prior to using and store it for future reference.



Danger of suffocation! Keep all packaging materials away from children.

Dispose of the packaging material in an appropriate way. Contact your local authorities about collection points or waste separation.

Care and Cleaning



Attention! Do not use alcohol, acetone, benzene, scouring cleaning agents, etc., to clean the rice warmer. Do not use hard brushes or metallic objects.

Attention! Before cleaning, disconnect the power plug from the socket and allow warmer to cool completely.

- Never clean the rice warmer when it is still hot.
- Clean the inner pot as soon as the warmer has cooled down, to prevent rice from drying on the non-stick surface.
- Do not let food remain in the rice warmer over an extended period of time to avoid bacteria growth.
- Never immerse the appliance or cord into water, or allow moisture to contact with the appliance.
- Wipe the exterior parts of appliance with a mild and damp cloth or cleaner, never use a corrosive cleaner.
- If water should accidentally enter the switch mechanism, power cord inlet socket, or spill onto the heating plate, allow to dry thoroughly before using the warmer again.
- Inner pot, steam tray and scoop may be washed in warm soapy water. Do not use abrasive cleaners or metal scouring pads. Scratching or denting the surface of the inner pot could result in poor contact with the heating plate.
- Remove the dew collector from the holder by gently pulling horizontally. Discard water, clean collector in warm soapy water, dry and replace.
- Keep ventilation openings on the bottom of warmer clean.
- Use fine sandpaper to remove cooked rice or any remaining food residue stuck to the heating plate. Polish the plate to ensure good contact between the heating plate and the bottom of inner pot.
- Store the warmer in a dry cool place away from direct sunlight, humidity and splash water. Preferably store in original packaging. **Keep children away from the appliance.**

WARMING RICE

- 1) Placed the inner pot into the cooker. Make sure the heating plate is clean and dry to ensure proper contact. Inner pot should be placed directly in contact with the heating plate.
- 2) Close the top lid until a “click” sound is heard.
- 3) Plug the warmer into the outlet.
- 4) Switch to on for preheating. Recommended preheat time is 30 mins.
- 5) After pre-heating, put PRE-COOKED hot rice into the inner pot and close the lid for warming.

NOTE: This warmer can only keep rice warm when the rice is already hot

- 6) DO NOT keep rice in warmer for more than 48 hours at a time.
- 7) When opening lid, be cautious of emitting steam. Make sure the lid opens away from your face. Use the supplied scoop. Do not use other tools as not to damage the non-stick surface of the inner pot. **Do not use metal tools.**


Note:

- Unplug the cord after each use.
- Do not operate the rice warmer without inner pot in place.
- Do not operate with an open lid.

Important Safety Precautions

1. Always switch off and unplug the appliance from the main electrical supply after each use and **BEFORE** any maintenance.
2. **NEVER IMMERSE THE APPLIANCE, POWER CORD OR PLUG IN WATER OR OTHER LIQUIDS.** Refer to section “Care and Cleaning”.
3. Close supervision is needed when operating appliance near children. Place the cord in such a way that accidental pulling or tripping over is impossible.
4. Do not let the cord hang over sharp edges and keep it away from hot objects and open flames. When disconnecting from the socket, always pull by the plug and not by the cord.
5. Always connect the power cord to the appliance **BEFORE** you plug in to the main electrical supply. To disconnect the appliance, switch off the main electrical supply before removing the plug from the appliance.
6. Do not operate the appliance with a damaged cord or plug. Any repairs should always be carried out by the Customer Service Centre or by an authorized service centre.
7. Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable materials.
8. Do not use outdoors or in damp area.
9. Do not use this appliance for any other purposes than its intended use.
10. Always place appliance on a flat sturdy surface. When moving appliance, always take precaution not to touch hot surfaces. Extreme caution must be used when moving an appliance containing hot liquids.
11. Use of accessories or equipment not supplied by the manufacturer may cause damage or result in the malfunctioning of your appliance or injuries.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or by those with a lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. The manufacturer is not responsible for damages caused by improper use or non-observance of this instruction manual.
14. Never leave the appliance unsupervised when in use.
15. When unit is not in good order, please use common sense to prevent further damage to surroundings.
16. All clean up is operator's responsibility.
17. Allow the appliance to cool down completely before cleaning.
18. Do not operate in the presence of flammable or explosive material.
19. Do not attempt to repair or disassemble the appliance. There are no user serviceable parts.
20. **Danger of scalding!** Do not touch hot surfaces. Open and close the rice cooker only by the handle.
21. This appliance is not intended to be operated by means of an external timer or separate remote-control system.

Accessories

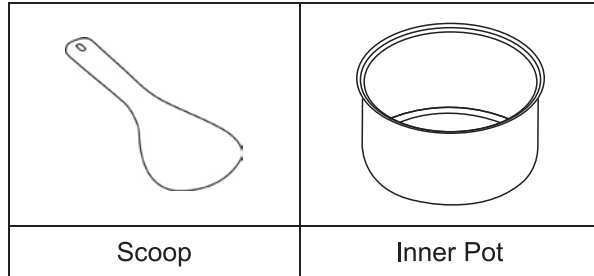

Specifications

MODEL	SCW-80M / SCW-81M
VOLTAGE	120V/60Hz
POWER	103W
CAPACITY	20L
WEIGHT	17 LBS
UNIT DIMENSION	19.2 x 15.2 x 15.1

Operating Instructions

BEFORE FIRST USE

- Clean the rice warmer thoroughly prior to first use. Wash inner pot, steam tray and scoop with warm soapy water and a soft cloth. Use a soft damp cloth to clean all other parts of the warmer.
- Choose a level, non-skid and clean surface that can withstand the weight of a fully filled rice warmer. Avoid placing the rice cooker on sinks drain boards or uneven surfaces.
- Be careful when setting the rice warmer on surfaces with delicate finishes such as wood or stone to avoid damages by hot steam or humidity produced during rice warmer operation.
- Ensure the voltage indicated on the rating plate corresponds to the mains supply.