INSTRUCTION GUIDE WASTE ARM



1	Measure and cut the waste arm to the desired length. Deburr the tube end.		
2	Install the	Install the waste arm onto the basket strainer or tailpiece.	
	a	For direct connection: Insert a flanged washer into the flange end of the waste arm. Slide the nut over the waste arm and secure to the outlet of the basket strainer.	
	b	For slip joint connection: Slide the nut then washer up the tailpiece. Install the slip joint of the waste arm over the tailpiece and secure.	
	C	For slip joint with direct connection: Install the tailpiece first by inserting the flanged washer into the flanged end of the tailpiece. Secure it to the basket strainer. Next, slide the remaining nut then washer up the tailpiece. Install the slip joint end over the tailpiece and secure.	
3	Connect the drain tubing.		
4	Tighten all connection points, being sure not to overtighten.		
5	Check for leaks. If leaks occur, tighten another 1/4 turn.		

©2023 Oatey SCS. All Rights Reserved. This information is based on data believed to be reliable but Oatey makes no warranties, express or implied, as to its accuracy and assumes no liability arising out of its use. The data listed falls within the normal range of product properties but should not be used to establish specification limits or used alone as the basis of design. Oatey's liability to purchasers is expressly limited to the terms and conditions of sale. Oatey is trademark of Oatey Co. All other trademarks can be found www.Oatey.com.