

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Support and E-Warranty Certificate www.vevor.com/support

JUICER

INSTRUCTION MANUAL

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

JUICER

MODEL: AMR530



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT ASSURANCE

WARNING: Before operating this device, please read this instruction manual completely and keep it handy for future reference. Always follow basic safety precautions when using these devices. These include:

This appliance may not be used by children. Store the appliance and its cord out of the reach of children.

The appliance may be used by persons with limited physical, sensory, or mental abilities or persons with no experience and knowledge if they remain under supervision or use the appliance safely per the user manual and understand the hazards.

Children may not play with the appliance.

Never use the juicer if the filter is damaged.

Clean all parts of the appliance in contact with food in accordance with the description in section CLEANING AND MAINTENANCE.

Switch off the appliance and unplug it before replacing accessories or coming into contact with moving parts of the appliance.

The appliance must always be used according to the recommended operating time. The maximum duration of continuous operation is 1 minute. After this time the appliance must be switched off for 2 minutes. After 3 cycles, before restarting it is recommended to stop using the appliance for 15-20 minutes until it cools down. The method adopted shall prolong the service life.

Do not use other accessories apart from those sold with the appliance.

WARNING: There is a risk of injury if the appliance is used contrary to its intended use. Care must be taken when handling the filter blades, emptying the filter and cleaning.

Always unplug the appliance when left unattended before assembly/disassembly and cleaning.

If the power supply cord is damaged, it must be replaced by the manufacturer, an authorized service, or qualified persons to avoid any hazard.

This appliance is intended for private indoor use only.

Before using it, always ensure that the supply voltage specified on the appliance label corresponds to the voltage in the power supply grid.

Do not use the unit if the appliance's power cord, plug, or other parts are damaged.

Do not immerse the drive base in water or other liquids. Do not wash it under running water. Clean the motor housing with a damp cloth only.

Observe the basic safety rules to avoid fire or electric shock risks when using electrical appliances, especially if children are present.

Do not immerse the plug, the power cord or the appliance in water or other liquids in order to avoid electric shock.

Do not hang the power cord over the edge of table or sink .

Do not use the appliance near flammable fabric (curtains, carpets); do not place it close to heat sources: gas cookers, electric cookers.

Do not cover the appliance during operation.

Do not put any items (cutlery, tools, etc.) inside the device during its operation.

Do not leave the appliance unattended while connected to the power supply.

Do not use the appliance if it is damaged or works incorrectly.

Do not use the appliance if it falls or has clear damage signs.

Do not attempt to open the body or disassemble any parts of the appliance.

Do not place the drive base on wet surfaces.

Never immerse the drive base in any liquid and prevent the liquid from penetrating the inside of the drive base housing.

Protect the appliance from moisture. Indoor use only.

If liquid enters the drive base housing, disconnect the appliance from the power supply and have it repaired by a service center.

Do not hold the appliance, the power cord, or the plug with wet hands.

Do not exceed the maximum appliance operation time.

Do not combine with elements or parts of other manufacturers.

Before inserting the plug into a wall socket, assemble the appliance in accordance with the manual.

Please cut off the power before dismantling, assembling or tuning any parts of the product.

If repairs are required during operation, please contact our customer service department or an authorised service centre. Never try to repair the juicer on your own.

Before starting the juicer, ensure the accessories, e.g., filter and lid, are correctly installed.

In operation, putting your hands or sharp objects into the feed port and any objects instead of the push rod is forbidden. In case of any accidents, please keep your eyes away from the feed port.

To avoid any personal injury or product damage, keeping your body or other complex objects away from the filter or motor wheel when starting up the product is required.

If the appliance stops working when in operation, it may be caused by the motor overheat protection. In such a case, before starting the appliance again, it is necessary to unplug it and wait for 20-30 minutes until the appliance cools down.

To prevent any damage caused by thermal strain, it is forbidden to disinfect the parts of the product with hot-water and microwave oven more than 80°C. Parts contacting the food are clean, sanitary and reliable, and have passed the necessary certificate.

The juicer body shall not be washed in water or other liquid (soft cloth available).

The product shall not be cleaned with the steel wool, abrasive cleaners or corrosive fluids (e.g. gasoline or acetone) .

Before processing, fruits, and vegetables with kernels, hard seeds, thick skin, or hard shells shall be removed.

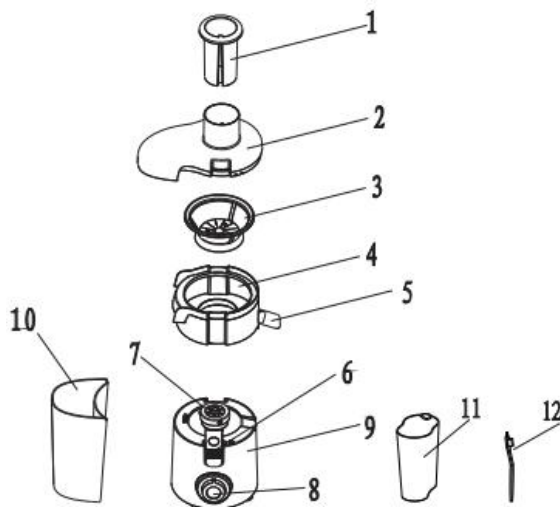
This appliance is intended for home use only and may not be used for professional purposes . Any other use is considered to be inappropriate, and therefore, dangerous .

The manufacturer is not responsible for any damage resulting from improper use of the appliance.

This juicer is intended for squeezing citrus fruits such as orange, grapefruit, mandarin, lemon, and lime.

SAVE THESE INSTRUCTIONS

PARTS



Parts list

- 1.Pusher
2. Lid
3. Filter
4. Central ring
5. Juicer spout
6. Safety clamp
7. Motor wheel
8. Operating knob
9. Body
10. Pulp container
11. Juice jug
12. Filter cleaning brush

SPECIFICATIONS

Model: AMR530

Power Supply Voltage: 120V~ 60Hz

Power: 350 W

Operating time: 1 minute operation/2 minute break

Material: PP, stainless steel

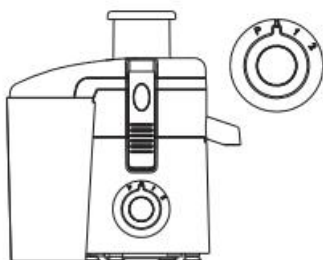
CONTENTS OF PACKAGING

After unpacking, make sure all of the listed items are present in the packaging .
After unpacking the appliance, make sure that it works properly.

Part of the electric citrus juicer: 1 x body 1 x inner body 1 x filter 1 x lid 1 x pusher 1 x pulp container 1 x juice jug 1 x cleaning brush	1 x user manual
---	-----------------

OPERATION INSTRUCTIONS

NOTE: Before using the appliance for the first time, clean it according to the instruction specified in Chapter CLEANING AND MAINTENANCE.



Speed:

Speed "P": Pulse mode

Speed "0": shut off and stop

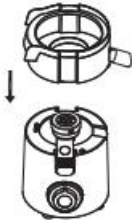
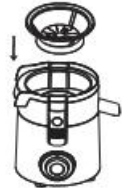
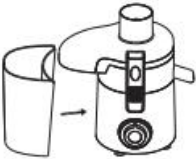
Speed "1": low speed, applicable to process soft fruits and vegetables, such as water melon, tomato, cucumber and strawberry.

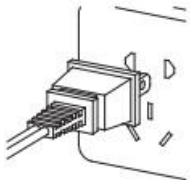
Speed "2": high speed, applicable to process all fruits and vegetables .

Using the appliance

This product is equipped with dual security system and it will not start working before all the parts and component are in correct installation status.

Please install and use the product as follows

	1	Put central ring on the body.
	2	Put the filter into the central ring and make sure it is in the right place on the motor wheel. (Before using, check if the filter is not damaged. If any damage is detected, stop using the appliance and immediately contact our customer service department nearby).
	3	Install the lid on the juicer body in the right place – as shown in the figure.
	4	Snap the safety clamps on the lid and lock them down. The assembly has been done correctly if you hear a “click” sound.
	5	Put the pulp container under the body, as shown in the figure.
	6	Put the juice jug under the juicer spout.

	7	Put the pusher into the opening of the feeding tube in the lid.
	8	The appliance is ready for use and may be plugged into an easily accessible socket. Before plugging the appliance, ensure the operating knob is set to the "0" position.
	9	Wash fruit and vegetables, and slice them into pieces. If the fruit has hard skin, it must be peeled. Remove hard pips.
	10	Start the appliance. The time of the product operation should not be longer than 1 minute. After 1 minute, wait 1 minute before the appliance is switched on again.
	11	Feed fruits and vegetables prepared into the feed port.
	12	Turn on the appliance by setting the operating knob to position 1 or 2 or P (pulse mode) and gently push the fruit with the pusher. Note! When the juicer is in operation, always keep your hands and other objects away from the opening on the lid.

	13	Once you finished extracting the juice and the juice no longer flows out of the spout, turn off the appliance by setting the operating knob to the “0” position. Unplug the appliance. You may remove the juice jug when the motor and the filter stops. (Drink the juice when it is fresh, as its taste and nutritional value may be affected by prolonged exposure to the air.)
--	----	---

Once you finished using the appliance, dismantle it (reverse as with assembly) and clean all food contact parts as described in section **CLEANING AND MAINTENANCE**

Selection of fruit and vegetables:

1. Select fresh fruits and vegetables: containing much juice; suitable fruits conclude: pineapple, beetroot, celery stick, apple, cucumber, spinach, melon, tomato, mandarin orange, grape, etc.
2. Fruit and vegetables with thin skin are not required to peel, but those with thick ones, such as mandarin orange, pineapple, and raw beetroot, must be peeled. Citrus fruit seeds must be removed, which may give the juice a bitter taste.
3. In the case of apple juice, its concentration depends on the type of apple chosen. Clear juice can also be squeezed out from apples with much juice. You can select the type of apple to be squeezed according to your needs.
4. The freshly-squeezed apple juice may quickly turn brown. A few drops of lemon juice can be added to slow down the process of discoloring.
5. Leaves and steams (such as lettuce) can be put into food processor for juicing.
6. Fruits containing starch, such as banana, papaya, avocado, figs, and mango, are not suitable for a food processor to make juice.
7. Nutrition constituent of common fruits and vegetables and the gear selection is shown as follows:

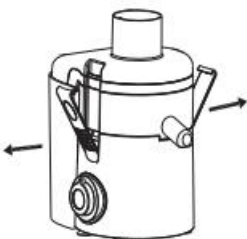
Fruits/vegetables	Vitamin/mineral substance	KJ/calorie	Speed
Apple	Vitamin C	200 g = 150 kJ (72 calories)	2

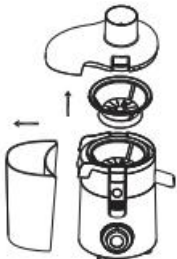
Apricot	Rich in DF, containing potassium	30 g = 85 kJ (20 calories)	1
Beet	Source of folic acid, DF, vitamin C and potassium .	160 g = 190 kJ (45 calories)	2
Blueberry	Vitamin C	125 g = 295 kJ (70 calories)	1
Brussels sprouts	Vitamin C, B, B6, E, folic acid and DF	100 g = 110 kJ (26 calories)	1
Cabbage	Vitamin C, folic acid, potassium, B6 and DF	100 g = 110 kJ (26 calories)	2
Carrot	Vitamin A, C, B6, E and DF	120 g = 125 kJ (30 calories)	2
Celery	Vitamin C and potassium	80 g = 55 kJ (7 calories)	2
Cucumber	Vitamin C	280 g = 120 kJ (29 calories)	1
Fennel	Vitamin C and DF	300 g = 145 kJ (35 calories)	1
Grape	Vitamin C, B6, and DF	125 g = 355 kJ (85 calories)	1
K iwi fruit	Vitamin C and potassium	100 g = 100 kJ (40 calories)	1
Melon	Vitamin C, folic acid, DF and vitamin A	200 g = 210 kJ (50 calories)	1
Nectarine	Vitamin C, B3, potassium and DF	180 g = 355 kJ (85 calories)	2
Peach	Vitamin C, B3, potassium and DF	150 g = 205 kJ (49 calories)	2
Pear	DF	150 g = 250 kJ (60 calories)	2
Pineapple	Vitamin C	150 g = 245 kJ (59 calories)	2

Raspberry	Vitamin C, iron, potassium and magnesium	125 g = 130 kJ (31 calories)	1
Potato	Vitamin C, DF, vitamin E, folic acid and vitamin A	100 g = 90 kJ (22 calories)	1

CLEAN AND MAINTENANCE

1	Before cleaning, it is required to shut off and unplug the appliance.
2	Timely cleaning is necessary after using the product.
3	A wet cloth can be used to clean the outside part of the machine body, which shall not be placed or washed in water or other liquids.
4	The product should be placed in dry place and away from ultraviolet rays.
5	The product shall be clean and dry before storage.
6	Each dismountable part can be cleaned according to the following steps:

	1	Remove the push rod and open the buckle.
---	---	--

	2	Take off the lid, filter, pulp container and central ring in proper order.
--	---	--

Any disassembled parts in contact with food must be washed under running water using washing-up liquid.

After cleaning, allow all the parts to dry completely before reassembling the appliance. The filter may be cleaned with the cleaning brush attached.

TROUBLESHOOTING

If any irregularities are found during operation of the appliance, read the table below to identify the cause and to find a solution to the problem .

Problem	Possible cause	Solution
The appliance does not turn on .	1. Incorrect installation of the central ring . 2 . Head cover installed in wrong place.	1. Install the central ring in a proper place. 2 . Install head cover in place . 3 . Replace the lid .
During the first start of the appliance, unpleasant smell may be released .	It is normal.	Please send the product to our company's maintenance point nearby if the product still gives off unpleasant smell after repeated use.

The product stops while in operation.	1. Under voltage 2. Excessive ingredients 3. Push the rod with excessive force 4. Motor thermal control protection	1. Check if under voltage 2. Disconnect power, take out the surplus ingredients . 3. Push the rod gently. 4. Restart it after stopping 20-30 minutes .
The juice contains a lot of pulp .	1. Juice extraction net damaged . 2. Too much pomace in the central ring .	1. Replace the net . 2. Clean the central ring .
Abnormal vibration or big noise .	1. Improper installation of juice extraction net and poor running balance. 2. Unstable placement of product or come off of foot pad . 3. Over voltage 4. Excessive ingredients	1. Install juice extraction net in proper place. 2. Place product stably or install the foot pad in proper place . 3. Check if any over voltage . 4. Disconnect power, take out the surplus ingredients .
Small amount of juice.	1. Much pomace in the central ring . 2. Press the push rod with excessive force.	1. Clean central ring . 2. Press the push rod with proper force.
Filter	Filter is clogged.	Unplug the appliance and remove any clogging pieces of food material from the filter.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

<https://www.vevor.com/support>

Made In china