


3


Installation & Trial Operation

1. Remove the seat from existing toilet body.


Release the nuts, and then remove the seat and cover from it. Keep the removed seat, cover and nuts in a proper place in case you need to use them again. Turn off the water.

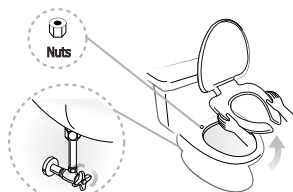

2. Remove the water hose and then install T-valve.

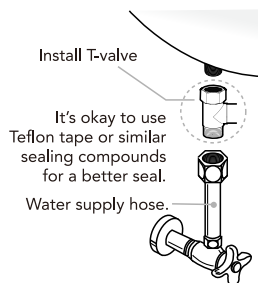

3. Fix the bracket onto the toilet first.

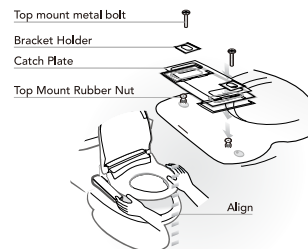


Adjust the seat and the front part of toilet back and forth so that they correspond before fastening the nuts.

4. Push the main body toward the bracket completely.




Push it back until you hear a click. When the product is not installed well, the seat may come apart.

5. After installing the T-valve, connect the hose to the bidet body and turn on the water.

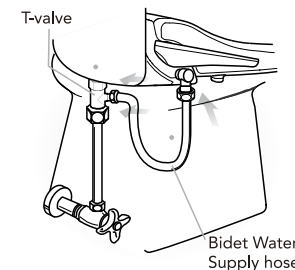

6. Turn on the water and check for leaks.

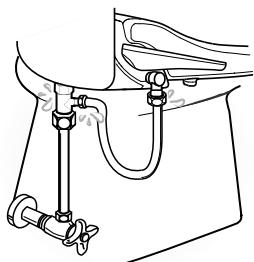

7. Be sure that the nozzle comes out and retracts when powered on.


Don't plug the power cord in with wet hands. Risk of electric shock.



How to Use

1. Sit on the toilet seat

Be sure to sit on the seat sensor. If the sensor is not occupied, all functions will not operate.

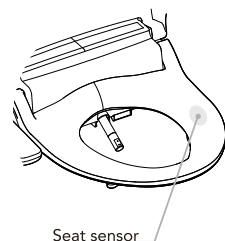


2. Wash, Bidet, Power Wash

Selected function can be used as described. When pressing the selected function again, nozzle will move back and forth to wash a wider range. Press the button once again to stop Massage function. Specialized water spray when in the Power Wash mode helps relieve constipation and fecal stasis.



3. Dry temperature control

Dryer operates for 3 minutes. Dryer temperature is adjustable by pressing power ctrl buttons. (5 levels).

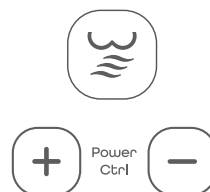

4. Pulse


When pressing the Pulse button during the operation of Wash, Bidet, and Power wash, water pressure will repeat high and low for smooth pulsating wash. Pulse function will not operate during the operation of Sitz bath.

*See how to use section 5-13 for Sitz bath.



5. Nozzle position control

Nozzle position is adjustable. (5 levels)

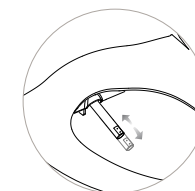

4

How to Use Continued

 
6. Water pressure control

Water pressure is adjustable. (5 levels)
If the water or screen filters become blocked, it may cause low water pressure. Regularly check the screen filter.



7. Stop

All operations will stop. When pressing the Stop button for 3 sec., the unit will be in sleep mode. Press Stop, Wash, Bidet or Power Wash to turn on. When pressing the Stop button for 5 sec. consecutively, the unit will be turned off and on automatically and initialized. All presets will be deleted.



8. Child Function


When Selecting Child function, settings* will be adjusted for children. 1 min Bidet - 30 sec Bidet oscillating - 30 sec Bidet Pulse - 2 min Dry work consecutively.



9. Seat/Water Temperature Control

Seat/Water temperature is adjustable. (4 levels) (Off - Low - Middle - High)

To reduce the chance of low temperature burns, the seat has a seat heater auto adjustment function which turns to low temperature (35 C, 95 F) when seat is occupied for more than 15 minutes consecutively. If the seat is set lower than middle level, the seat remain at off or low level.

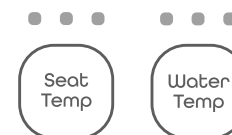

10. Energy Saving Function

Automatic energy saving mode:

This mode will be activated by pressing the Energy Saving button until yellow LED lamp lights on. (Seat and water temperature will be kept at 32° C)

Powerful energy saving mode:

This mode will be activated by pressing the Energy Saving button until green LED lamp lights on. (Seat and water heater will be kept off)

Release of energy saving mode:

Press the Energy Saving button until LED lamp turns off.

When the unit is occupied, it adjusts to the preset temperature and it returns to the saving mode when seat is unoccupied.

If the seat and water temperature are off, they will remain off.

11. Nozzle Cleaning

When selecting Nozzle Cleaning while not seated, the nozzle cleans itself 3 times. Then nozzle extends and stops for the manual cleaning process.

Clean the nozzle with a brush and press STOP button after completion of manual cleaning. Then nozzle cleans itself 3 times and retracts.

Nozzle Cleaning will not operate if the seat sensor is activated.



12. Automatic tank draining 13. Sitz Bath

To protect water contamination, the water tank will be drained (replaced) for 2 minutes if the seat is not used for 48 consecutive hours.

This feature is deactivated from the factory. To activate this feature, press Stop and Water Temp buttons for 3 sec.

Press for more than 3 sec.



Wash or Bidet is switched to Wash Sitz Bath or Bidet Sitz Bath if Nozzle Cleaning button is selected during Wash or Bidet operation.

Water Pressure is switched to 1st level regardless of preset water pressure setting and Sitz Bath operates for 5 minutes.

LED of Nozzle Cleaning turns on during the operation of Sitz Bath.

Select the Nozzle Cleaning again to switch to normal Wash or Bidet.



14. Seat Sensor Release

The seat sensor can be activated and deactivated by pressing the Pulse button for 3 sec.

If the seat sensor is deactivated, the unit works without occupying the seat and features* cannot be controlled.

*Features

Silent mode, Nozzle cleaning.

