

Energizer®

**RECHARGEABLE
LANTERN**

Never get caught in the dark with the **Energizer Digital Power Indicator Lantern!** The easy-to-use power indicator display gives consumers comfort, confidence & flexibility as they know how much run time they have left AND can adjust the brightness to maximize the run time!

DIMMABLE



DIGITAL DISPLAY

BATTERY POWER
INDICATOR



ADJUST THE BRIGHTNESS
TO EXTEND RUN TIME



CHARGE WITH INCLUDED USB



CHARGES OTHER DEVICES



CABLE STORAGE



HANGER HOOK



ADJUSTABLE HANDLE



OPERATING INSTRUCTIONS

HOW TO USE:

Press button for 1 second to turn on display at any time (on or off) to see battery charge status.

Quick press to turn on/off.

Press once for nightlight, again to turn on white area light.

When white area light is on, press and hold longer than 2 seconds to increase or decrease brightness. The battery display will change, showing the expected run time based on brightness. Light will flash at brightest and dimmest. Release button to set light level.

When light is on, quick press will turn light off, a 1 second press will turn the display back on and display run time left and battery charge level. A longer 2 second press while on will enter the light back into the dimming mode.

Illuminated on/off switch and display will turn off automatically.

Once the run time has been met, the light will enter a dimmed mode. Display will indicate this with a dimmed orange screen displaying a low battery. Once battery is fully depleted the dimmed display will flash red every minute. Recharging is required.

HOW TO CHARGE:

Rechargeable battery is not user replaceable.

To charge use included USB cord and plug light into any USB charging port.

Light may be used while charging, performance may vary.

Light may be used to charge another USB device. Light will operate in nightlight or lowest white brightness setting during charge out.

Light cannot be recharging and charge out at the same time. Recharging the light will take priority to charging devices.

BATTERY CHARGE INDICATOR:

Rechargeable Lantern display will show battery status. Press on/off button for 1 second to turn on display at any time to see battery charge status.

ADJUSTABLE HANDLE:

Adjustable Handle for easy carrying or loop onto bag.

HANGER HOOK:

Flip up attachment at the bottom allows for hanging from a hook overhead.

CABLE STORAGE:

Twist flipped up attachment to the left to access cable storage.

