CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
Α	TOP		1X
В	SIDE BOARD		2X
С	BASE		1X
D	SHELF		2X
Е	DOOR		2X
F	POST		1X
G	BACK BOARD		2X
Н	ALLEN BOLT & WASHER		8X(45mm)
I	PHILPS SCREW DRIVER		1x
J	SCREW	Januar	28X
K	SHELF HOLDER		8x
L	ALLEN KEY		1x



Model# AMH6570

Product Dimensions: 37.8"W x 11.4"D x 40.2"H




PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key & Phlips Screw Driver

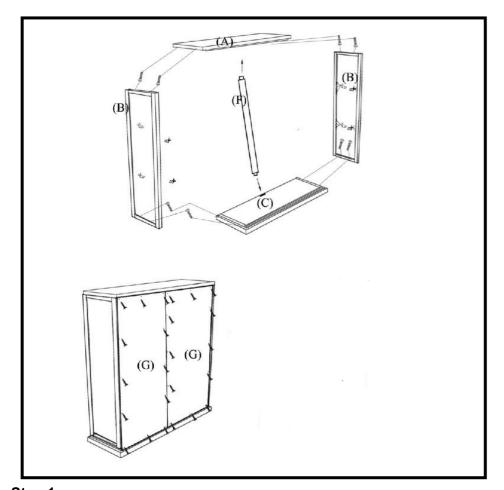

Step 1Combine the Top (A), Side Board (B), and Post(F) with the Base (C), use Allen Key to tighten all the bolts.

Then put the Back Board (G) into the frame, use Phlips Screw Driver to tighten all the screws.

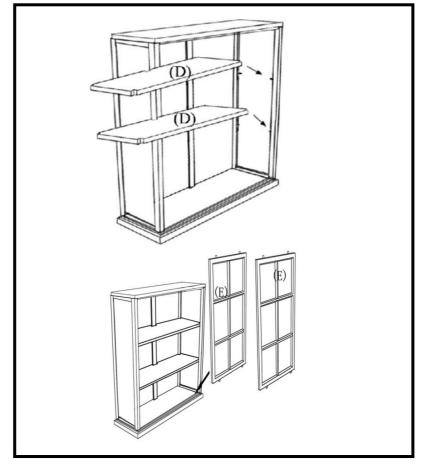

Step 2
Put the Shelf Holder (K) into the holes of Side Board, then put the Shelves (D) on it. Then match up the Doors (E) to the glide of bookcase.