

CAUTION!

The corkscrew within the Ozeri Electric Wine Opener is sharp. Please handle carefully. Keep your hands and utensils away from the opening of the wine opener while operating to prevent personal injury and/or damage to the product or property.

**THIS UNIT IS FOR HOUSEHOLD USE ONLY.
SAVE THESE INSTRUCTIONS.**

Thank you for purchasing an Ozeri Maestro Electric Wine Opener. Before you use this product for the first time, please take a few moments to read these instructions and keep it for future reference. Pay particular attention to the Safety Instructions provided. Please review the product service and warranty statements.

LEARNING ABOUT YOUR ELECTRIC WINE OPENER



BEFORE USING YOUR ELECTRIC WINE OPENER

For your convenience, record the model number and the date you purchased the product. Keep your purchase receipt together with the warranty information in the event that warranty service is required. Retain this manual for future reference.

OPERATING INSTRUCTIONS

CONNECTION AND USE

We recommend that you charge your electric wine opener for at least 8 hours before using it for the first time. Please follow instructions for recharging below:

RECHARGING YOUR ELECTRIC WINE OPENER

Connect the "Jack" of the adaptor to the charging stand (Fig. 1), then plug the adaptor into a compatible electrical outlet. Place the electric wine opener onto the charging stand. Ensure that it is firmly in position and that it is fully engaged with the recharging connection on the charging stand.



Fig. 1

The LED charging light indicator and room temperature lights will appear on the built-in LCD. The LED charging indicator will flash from 1 Bar to 4 Bars when charging. (Fig. 2)



Fig. 2

When the flashing stops and all 4 Bars remain on the LCD, the electric wine opener is fully charged. The maximum charging time is 12 hours. When removed from the charging stand, the electric wine opener will automatically turn off the LCD after approximately 20 seconds to conserve battery life. To activate the LCD to view the battery status and/or the temperature reading, gently press either the extract or release button. Please note that when removed from the charging stand, the 4th Bar of the battery capacity indicator will blink when the battery requires charging.

OPERATING YOUR ELECTRIC WINE OPENER

The electric wine opener is operated by a single up/down button. The button has two functions. With the Ozeri Electric Wine Opener securely placed on top of an unopened wine bottle, press the lower part of the button (down button) to remove the cork from the bottle. Pressing the upper part of the button will release the cork from the Ozeri Electric Wine Opener after you have removed it from the bottle.



1) First remove the foil cutter from the charging stand and place it on top of a wine bottle. Then press inward on the foil cutter and twist to cut and remove seal from the wine bottle. (Fig. 3)



Fig. 3

2) Place the electric wine opener on top of the wine bottle making sure that it remains as upright as possible at all times. If you hold the electric wine opener at an angle to the bottle, it will not remove the cork properly.

Hold the electric wine opener firmly and press the lower part of the button. The corkscrew spiral will turn in a clockwise direction and enter the cork, then gradually remove it from the bottle. When the electric wine opener's motor has stopped, the cork has been fully removed from the bottle. (Fig. 4)



Fig. 4

3) Lift the electric wine opener away from the bottle. To remove the cork, simply depress the upper part of the button. The spiral will turn in a counterclockwise direction and release the cork.

4) Return the electric wine opener to the recharging unit when not in use. The recharging unit will help prevent the wine opener from accidentally tipping over. While the electric wine opener can be partially recharged after each use, periodically discharging the battery by using the wine opener until the motor slows down will maximize battery performance.

NOTE 1: When removed from the charging station, the electric wine opener will automatically turn off the LCD after approximately 20 seconds to conserve battery life. To activate the LCD to view the battery status and/or the temperature reading, gently press either the extract or release button, or reattach the electric wine opener to the charging base.

Note, when the battery charge is very low, the battery capacity indicator will decrease to 1 Bar on the LCD and may flicker. Please recharge immediately. It is recommended that the electric wine opener is always returned to the charging stand when not in use.

NOTE 2: The electric wine opener may experience problems with a small percentage of plastic/synthetic and undersized corks. If this is the case, the cork should be removed manually.

WINE BOTTLE TEMPERATURE MEASUREMENT

For the most accurate measurement, please make sure the outside surface of the wine bottle is completely free from dust and dry. The same applies to the lens of the infrared sensor on the electric wine opener.

- Aim the lens of the infrared sensor at the center of the wine bottle or glass, and place the wine bottle as close to the lens as possible, but without making contact. Wait for 2 to 3 seconds and the temperature will be displayed on the LCD for about ten seconds. For maximum accuracy, repeat this process 3 or 4 times and calculate the average. Note, when taking the temperature of a wine bottle while the electric wine opener is removed from the charging base, you may have to gently press the extract or release button to refresh the LCD. This will force the LCD to display the updated temperature.



Infrared Sensor

- When the lens of the infrared sensor is not in close proximity to an object, the electric wine opener will display the room temperature.
- Available range for room temperature: -10°C (14°F) — +45°C (113°F)
- Available range for wine temperature: -10°C (14°F) — +35°C (95°F)
- The infrared sensor does NOT measure body temperature and does not substitute for a medical thermometer.
- A temperature reading of "EE" indicates the temperature of the object is lower than the available range.
- A temperature reading of "EEE" means the temperature of the object is higher than the available range.
- To avoid damage to the sensor, do not expose the lens to extreme temperatures.

Ozeri

• ELECTRIC •
WINE OPENER

USER WARRANTY

1-Year Limited Warranty
Read all instructions before using.
Use only as directed.



Distributed by:

Ozeri

MODEL: OZ3A

WARRANTY INFORMATION

Your "Ozeri Electric Wine Opener" is warranted to the original owner for 1 year from the date of purchase against defects in material and workmanship under normal use and service. Should your Electric Wine Opener prove defective within 1 year from the date of purchase, return the defective part or unit, freight prepaid along with an explanation of the claim to "Ozeri Electric Wine Opener." Please pack your Electric Wine Opener carefully to avoid damage in transit. Under the warranty, Ozeri will repair or replace any parts found to be defective due to manufacturer's defect. This warranty extends only to personal use and does not extend to any product that has been used for commercial use, rental use, or use which is not intended. There are no warranties other than that expressly set forth herein. This warranty is not transferable. Ozeri is not responsible in any way for damages, losses or inconveniences caused by equipment failure or by user negligence, abuse, or use not in accordance with the "User Guide" or any additional safety, use, or warnings included in the product materials. Further, Ozeri is not liable for incidental or consequential damages of any nature resulting from the use of this product and any liability shall not exceed the purchase price of the product.

THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING:

- Damage due to accident, misuse, abuse, alterations or vandalism.
- Improper or inadequate maintenance.
- Unauthorized modification or commercial use.
- Damage in return transit
- Unsupervised use by children under 18 years of age

Ozeri Electric Wine Opener
Customer Service: 1-877-299-1296 or
Email: support@ozeri.com

(Ozeri™ and its subsidiaries assume no liability for damage caused by the use of the Ozeri Scale other than for its intended use or as instructed above and in the User Manual.)

Ozeri

• ELECTRIC •
WINE OPENER

USER WARRANTY

Important Safety Information Inside!
Read all instructions before using.
Use only as directed.



Distributed by:

Ozeri

MODEL: OZ3A

IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USE

- This product is not a toy. Keep out of reach of children.
- Do not operate electric wine opener with a damaged cord or plug, after the appliance malfunctions or if it is dropped or damaged in any manner. Return appliance to the nearest authorized service center for examination and repair.
- To protect against risk of electrical shock, do not put the electric wine opener in water or any other liquid. This may cause personal injury and/or flammable fumes.
- To protect against fire, do not operate the unit in the presence of hazardous materials and/or extreme temperatures.
- This product is intended for normal domestic household use only. Do not use the electric wine opener for other than its intended use.
- When using or recharging the electric wine opener keep your workspace clean and free from potential hazards.
- For indoor use only. Do not expose the electric wine opener or charging unit to rain or other extreme conditions.
- Never force the electric wine opener onto a bottle or attempt to speed up the motor. The electric wine opener will work best when it is operated at its intended speed.
- Do not touch or adjust the electric wine opener's motor or the corkscrew spiral. Only hold the electric wine opener by its outer housing and its indicated grip.
- Do not attempt to open bottles if the up/down button is not working.
- Do not attempt to disassemble the electric wine opener or the recharging unit. It has no serviceable parts. Your electric wine opener is guaranteed for one year. In the event of the malfunction during your warranty period, please contact our customer service department.
- Only recharge the electric wine opener using the recharging unit supplied.
- Always unplug the charger if you do not intend to use your corkscrew for a long period. To disconnect from the power supply, grip the transformer and pull from the power socket.
- Never remove the plug from socket by pulling the power cord.

CAUTION: The corkscrew is sharp. Handle carefully. Keep hands and utensils away from the corkscrew while operating to prevent the possibility of severe personal injury and/or damage to the product and/or personal property. The electric wine opener is for adult use only. Store in a child-safe location.