



### Unpacking the Unit

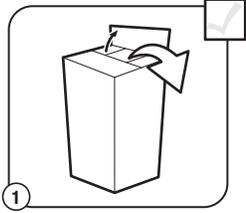


1 Remove all contents from the carton.


### Assembling the Unit

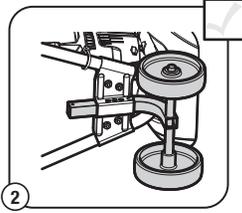

2 Set the unit on its side. Insert the wheel assembly into the wheel bracket.

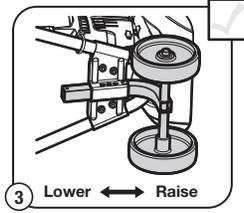


3 Lower ← Raise  
Adjust the height by moving the wheel assembly along the wheel bracket.  
**NOTE:** Moving the wheel assembly down will raise the wheel height. Moving the wheel assembly up will lower the wheel height.

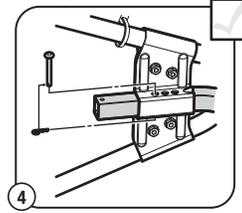


4 Insert the clevis pin through the wheel bracket and assembly and lock it in place with the cotter pin.

### NO ASSEMBLY TOOLS REQUIRED

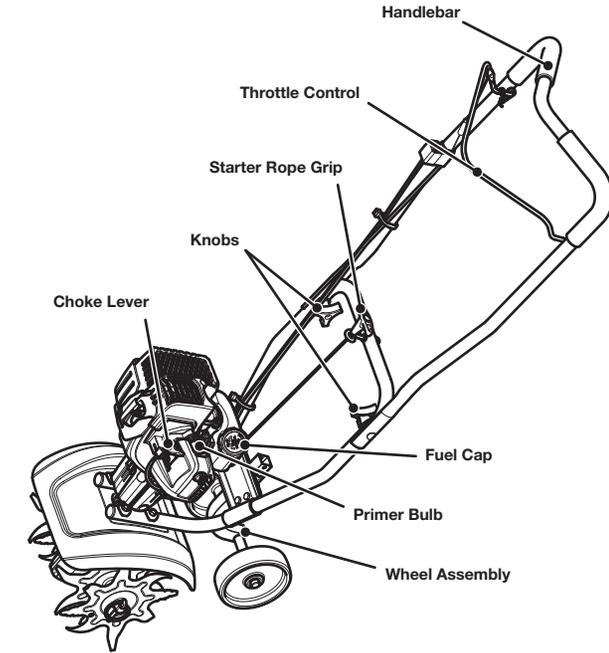


Need Help?  
Call 1-800-828-5500

### Assembling the Unit

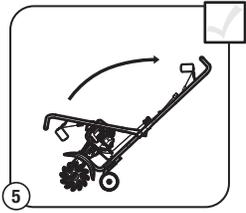


5 Set the unit upright. Loosen the knobs. Swing the handlebar up into the operating position.

**NOTE:** Take care not to pinch the cables when positioning the handlebar.

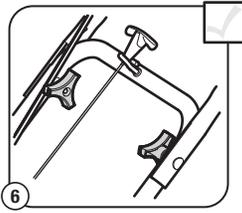


6 Tighten the knobs securely. Readjust the cables so they are smooth and tight against the handlebar.

**NOTE:** Do not over tighten the knobs.

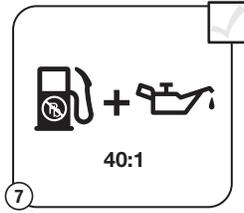


7 Mix thoroughly in a separate fuel can:  
- 3.2 fl. oz. of 2-cycle engine oil  
- 1 gallon of fresh unleaded gasoline (**less than 30 days old**)  
**NOTE:** Do not mix directly in the unit fuel tank.

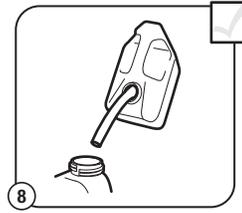


8 Position the unit with the fuel cap facing up. Slowly remove the fuel cap. Fill the fuel tank. Reinstall the fuel cap. Move the unit at least 30 ft. (9.1 m) from the fuel container and the fueling site before starting the engine.


### Starting the Unit

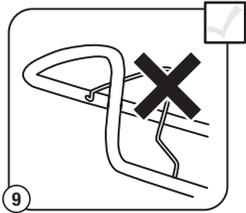


9 **DO NOT** squeeze the throttle control until step 14.

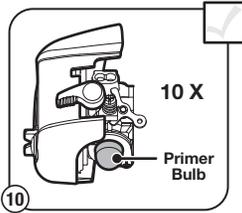


10 Slowly press and release the primer bulb **10 X**.

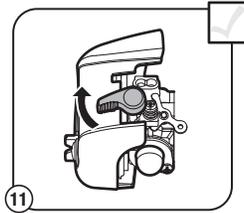


11 Flip the choke lever clockwise until it clicks.

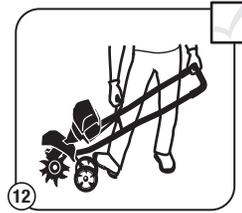

12 Stand in the starting position. Hold the handlebar firmly with one hand. Hold the starter rope with the other hand. Use one foot to hold the wheels in place. Tilt the unit back slightly to bring the tines off the ground.

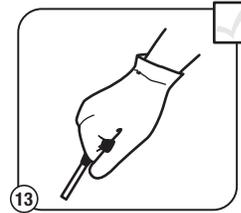

13 Pull the starter rope with a controlled and steady motion until the unit starts.  
Idle the engine for 30 seconds.

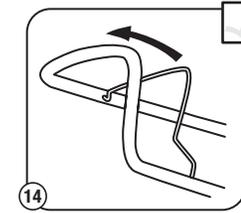

14 Squeeze the throttle control as needed for operation.

### DIDN'T START?

Repeat the starting instructions.

If the unit still fails to start, refer to the operator's manual for additional starting and troubleshooting information.

