


USE AND CARE GUIDE

CANE DRESSER

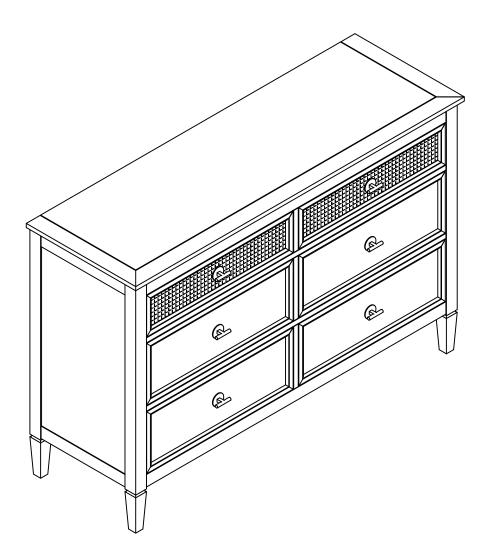

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

Table of Contents

Table of Contents2	Tools required	3
Safety Information2	Hardware Included	3
Warranty2	Package Contents	4
What is Covered2	Assembly	5
What is not Covered2		
Pre-Assembly3	Care and Cleaning	14
Planning Assembly3		
9	S .	

Safety Information



- Keep small parts away from children during assembly.
- □ Read and follow instructions carefully.

WARNING

- Read these instructions carefully and keep in a safe place.
- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.



CAUTION

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.). Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT UŠE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.
- Assembly requires two people; assembly alone may cause injury.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for three years.

WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-Assembly

PLANNING ASSEMBLY

- Use a soft cloth between these parts and the floor.
 Identify the parts which make up your piece of furniture.
 Gather the hardware parts and count them.
 Have the necessary tools ready.
 Keep Allen Key & Wrench as the Bolts & Nuts may need to be tightened in the future.


TOOLS REQUIRED



HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

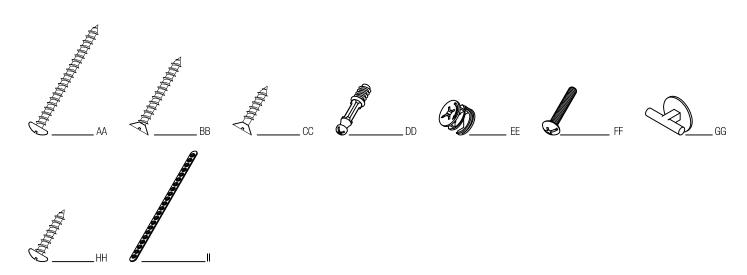

Part	Description	Quantity
AA	Round Head Screw	1+1
BB	Flat Head Screw (Long)	82+1
CC	Flat Head Screw (Short)	36+1
DD	Cam Lock Bolt	46+1
EE	Cam Lock	46+1
FF	Handle Bolt	6
GG	Handle	6
HH	Tipping Screw	4+1
II	Tipping Restraint	2

Pre-Assembly (continued)

PACKAGE CONTENTS

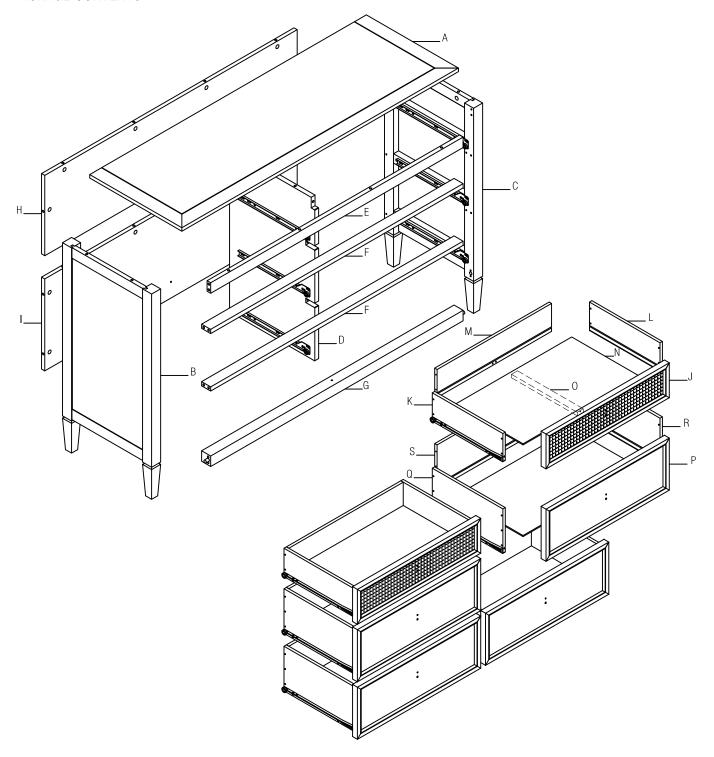


Part	Description	Quantity
А	Top Panel	1
В	Left Assembly	1
С	Right Assembly	1
D	Divider	1
E	Front Top Rail	1
F	Front Rail	2
G	Front Bottom Rail	1
Н	Small Back Panel	1
I	Large Back Panel	1
J	Small Drawer Front	2

Part	Description	Quantity
K	Small Drawer Left	2
L	Small Drawer Right	2
М	Small Drawer Back	2
N	Drawer Base	6
0	Drawer Support	6
Р	Large Drawer Front	4
Q	Large Drawer Left	4
R	Large Drawer Right	4
S	Large Drawer Back	4


1 Attaching Cam Lock Bolts.

— Attach Cam Lock Bolts (DD) to Top Panel (A), Left & Right Assemblies (B) & (C), Front Top & Front Rails (E) & (F), Small & Large Back Panels (H) & (I).

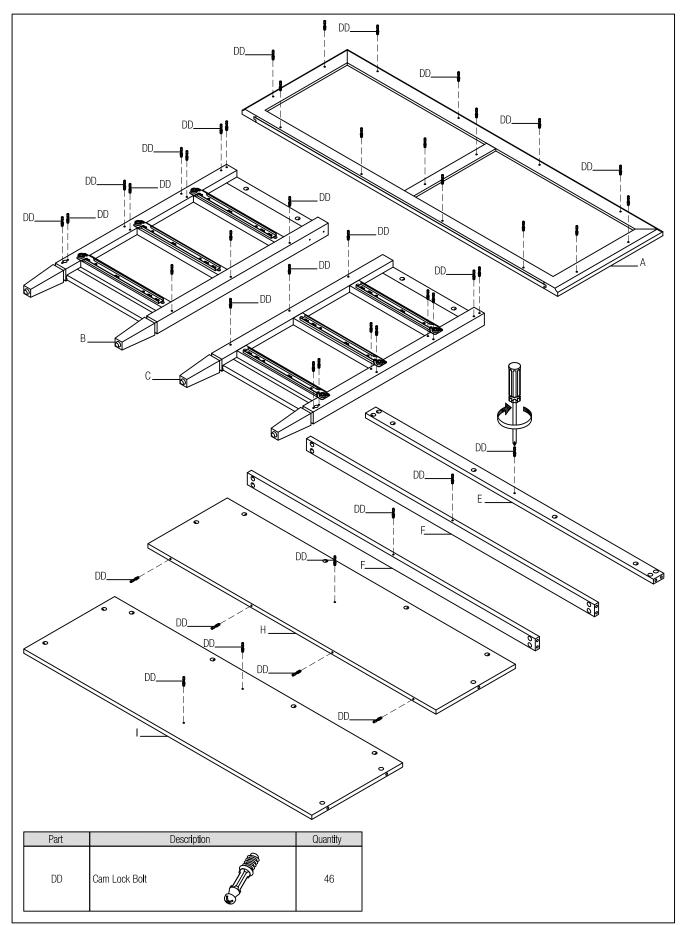


2 Join the Back Panels.

□ Attach Small Back Panel (H) to Large Back Panel (I) using Cam Locks (EE).

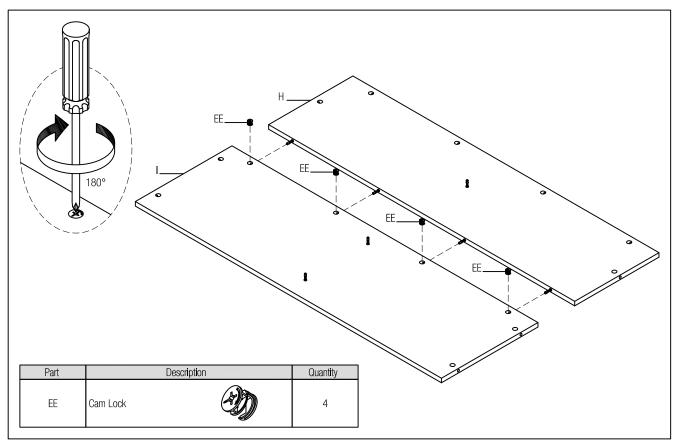


3 Attaching the Divider.

□ Attach Divider (D) to Small & Large Back Panels (H) & (I) using Cam Locks (EE).

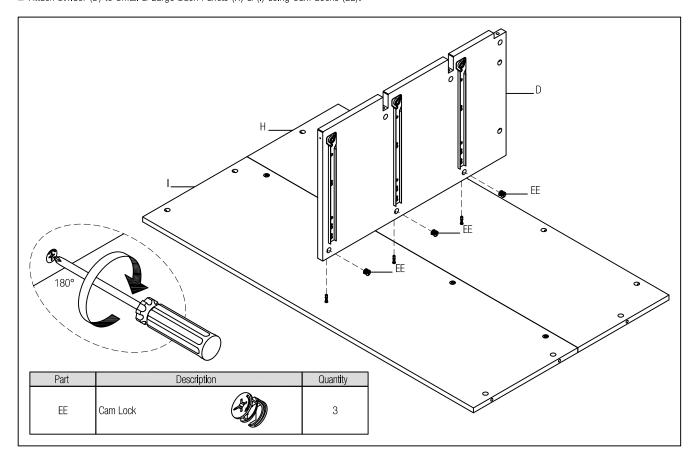


4 Attaching the Rails to Divider.

Attach Front Top & Front Rails (E) & (F) to Divider (D) using Cam Locks (EE) & Front Bottom Rail (G) to Divider (D) using Round Head Screw (AA).

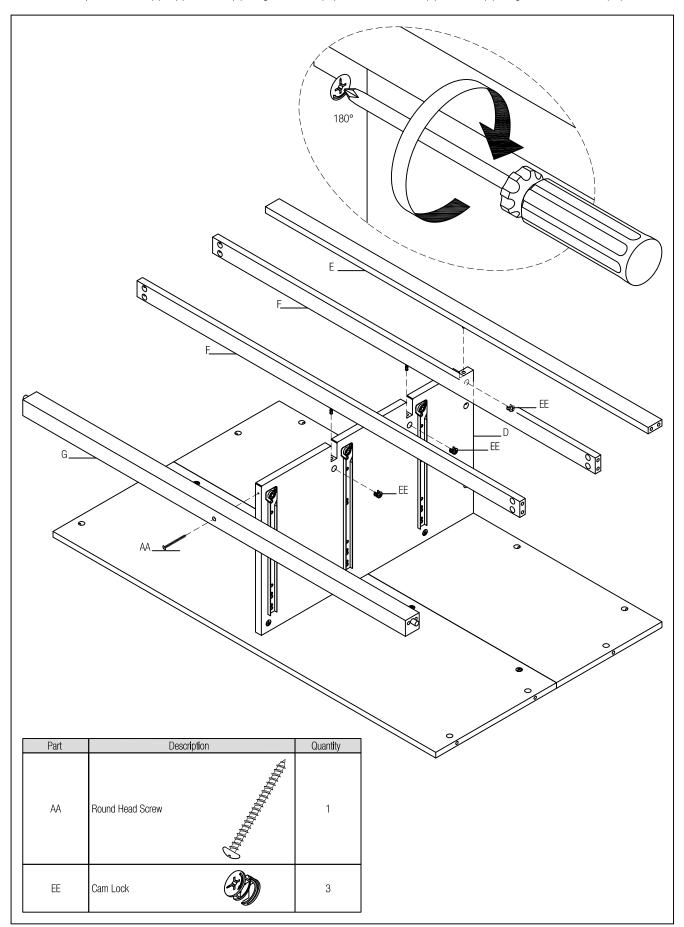


- 5 Attaching Left & Right Assemblies to unit.

 Attach Left & Right Assemblies (B) & (C) to unit using Cam Locks (EE).

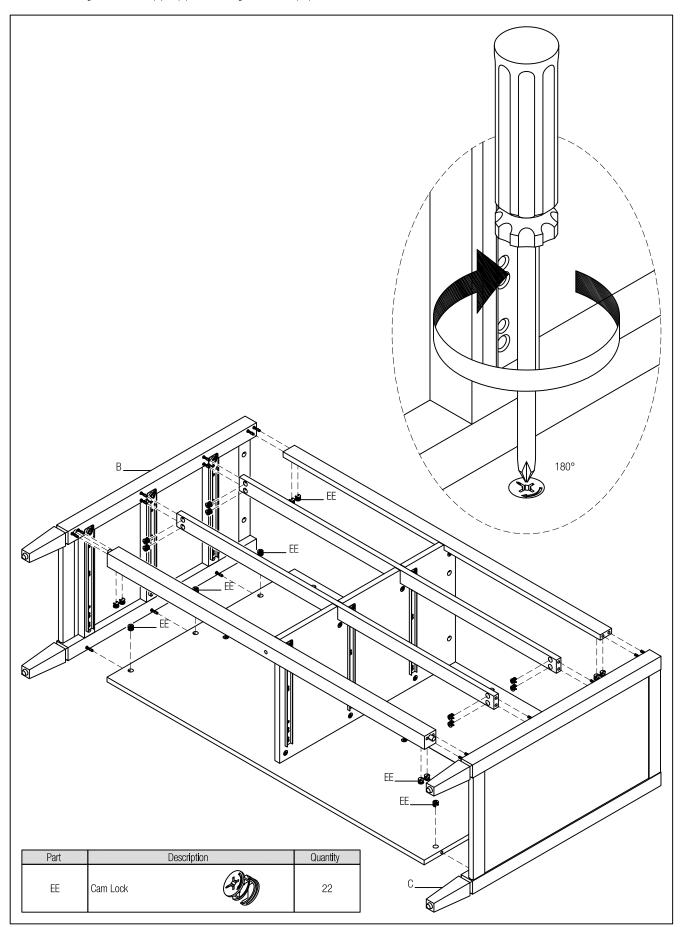


6 Attaching Top Panel to unit. — Attach Top Panel (A) to unit using Cam Locks (EE).

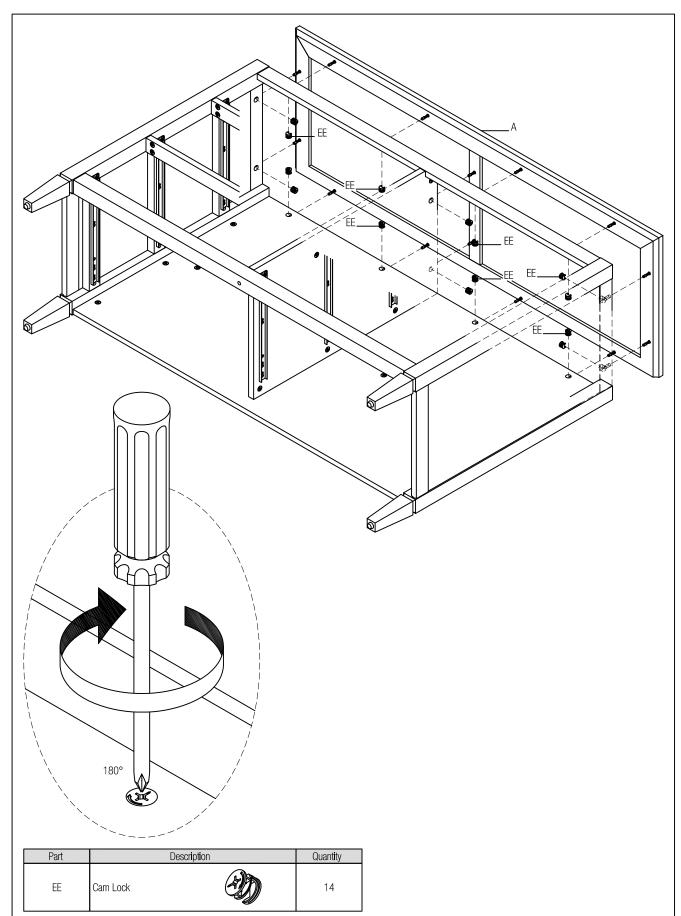

- 7 Prevent the tipping over.

 Attach Tipping Restraints (II) to unit using Tipping Screws (HH).

 Attach the unit to the wall using Screws & Fischers (Not provided).

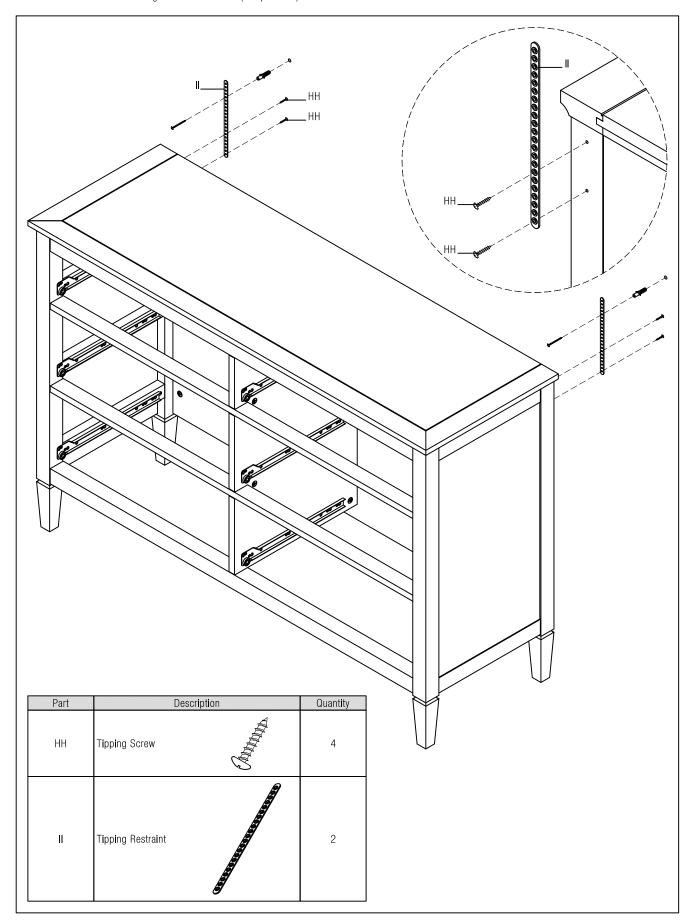

- 8 Assembly the Small Drawers.

 Attach Small Drawer Left & Right (K) & (L) to Small Drawer Back (M) using Flat Head Screws (Long) (BB).


 Insert Drawer Base (N) into groove.

 Attach Small Drawer Front (J) to Small Drawer Left & Right (K) & (L) using Flat Head Screws (Long) (BB).

 Attach Drawer Support (O) to unit using Flat Head Screws (Long) (BB).

 Attach Handles (GG) to Small Drawer Front (J) using Handle Bolts (FF).


 Do the same step to the next drawer.

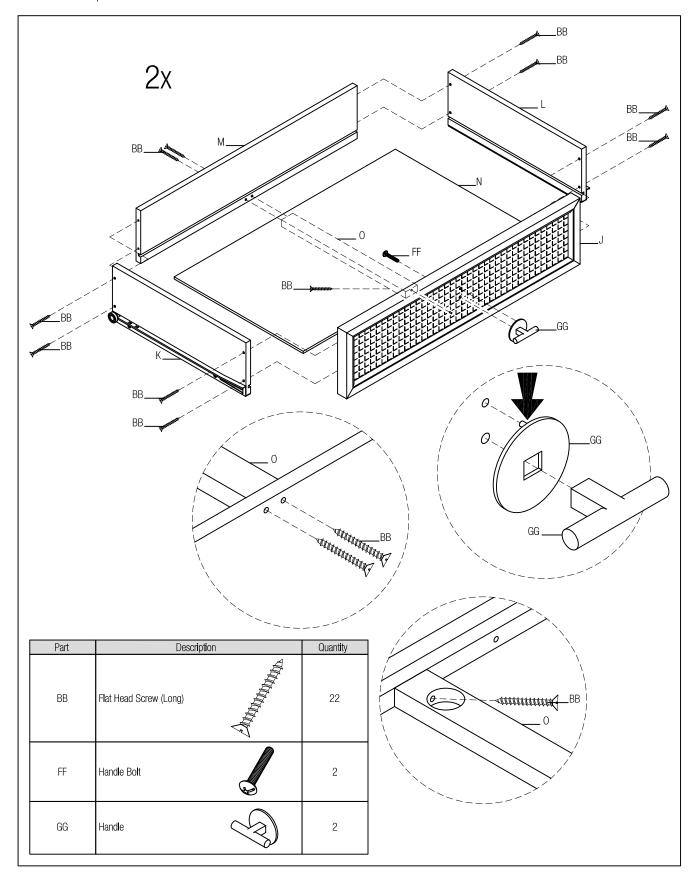

9 Assembly the Large Drawers.


- □ Attach Large Drawer Left & Right (Q) & (R) to Large Drawer Back (S) using Flat Head Screws (Long) (BB).
 □ Insert Drawer Base (N) into groove.
 □ Attach Large Drawer Front (P) to Large Drawer Left & Right (Q) & (R) using Flat Head Screws (Long) (BB).
 □ Attach Drawer Support (O) to unit using Flat Head Screws (Long) (BB).
 □ Attach Handle (GG) to Large Drawer Front (P) using Handle Bolt (FF).

- □ Do the same step to the next drawers.
- ☐ Slide drawers into unit.

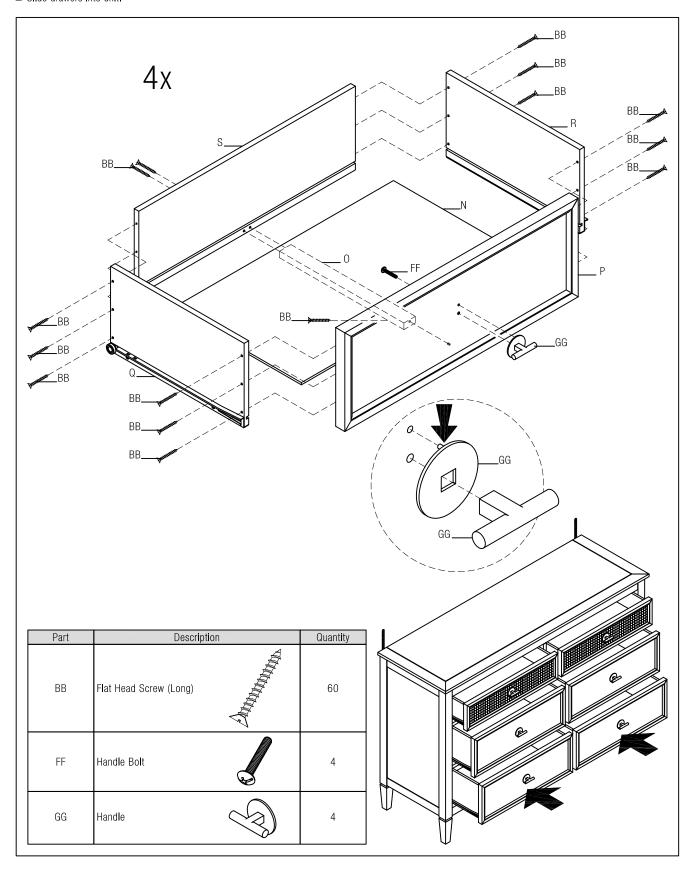

10 Adjusting the Drawers.

- Loosen slightly screws pre-installed on back of Small & Large Drawer Fronts (J) & (P). (10.1)
 Insert drawer into unit, then adjust drawer front panel left or right & up or down until drawer gaps look proportional. (10.2)
 Pull drawer open slowly, then retighten screws loosened in Step 10.1. (10.3)
 Make sure drawer front panels do not move & lock drawer front panel into position using Flat Head Screws (Short) (CC). (10.4)

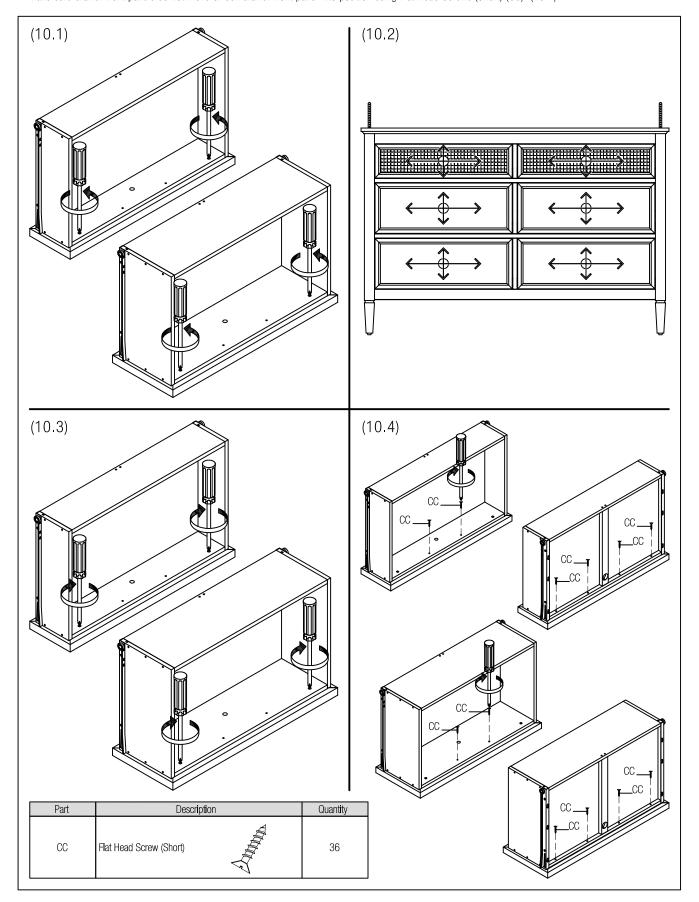

Maintenance

NEVER

- Allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.
 Use glass cleaner on finished furniture. Ammonia chemically attacks the finish.

- Place in direct sunlight to prevent fading.
 Write directly on surface to prevent marking.
 Place hot objects on surface to prevent finish damage.
 Use rubber based placemats to prevent discoloring.
 Use commercial waxes and polishes to prevent yellowing.


Care and Cleaning

Clean with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.

Troubleshooting

If the Unit is Not Even With Floor.

Level unit by adjusting the adjustable levelers on bottom of legs.

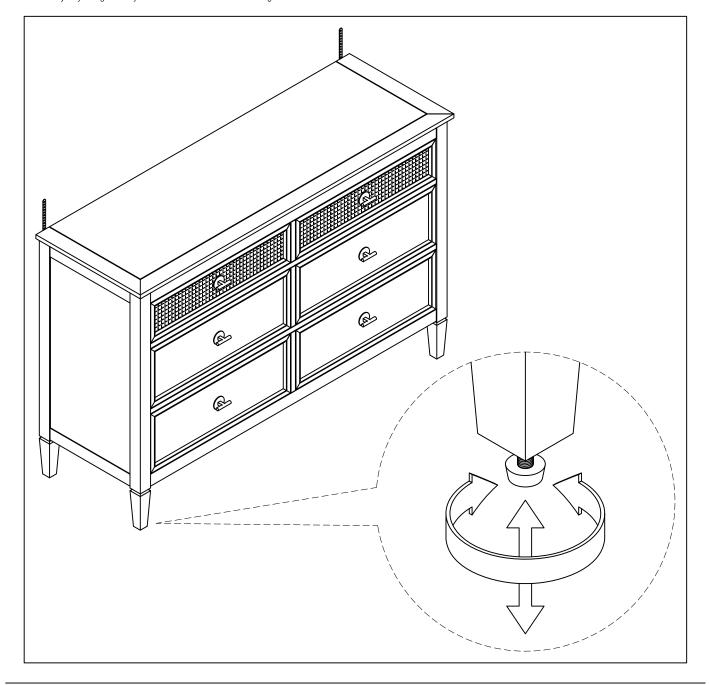



Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use