




Item # 1001 414 506
Model # FCS70357RL

USE AND CARE GUIDE

STATESVILLE DOUBLE GLIDER

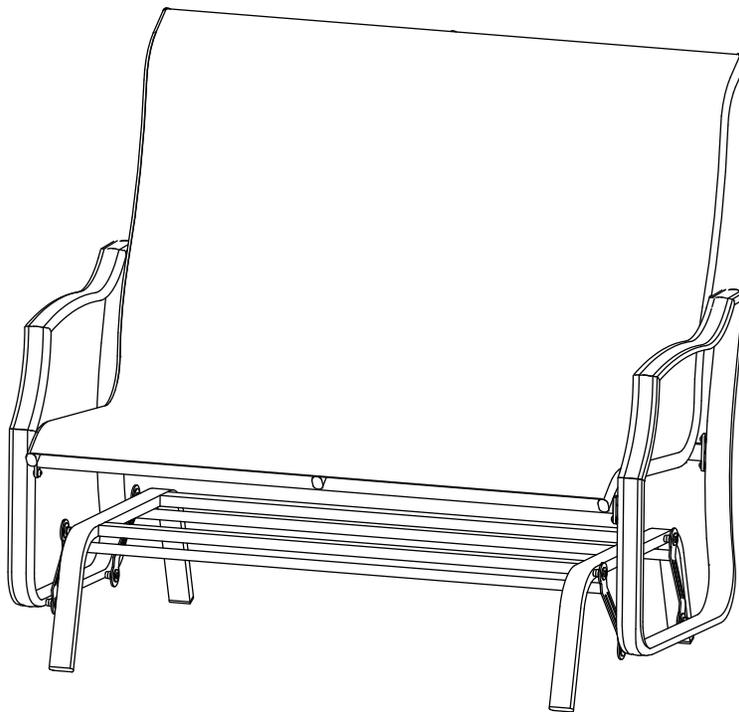

Questions, problems, missing parts? Before returning to the store
call Hampton Bay Customer Service.
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this glider. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents.....	2	Pre-Assembly	3
Safety Information	2	Planning Assembly	3
Product Caution	2	Hardware Included	3
Safety Warnings	2	Package Contents	4
Warranty	2	Assembly	5
What is Covered	2	Care and Cleaning.....	8
What is Not Covered	2		

Safety Information

PRODUCT CAUTION

This glider was made for the explicit purpose of providing outdoor functions and is not to be used as a toy. This product is intended for normal outdoor use; however, the manufacturer recommends storing and / or covering this glider when any formidable / severe weather is approaching. Do not locate the product near open flames. Do not use the product as a support. Do not shake, lean or climb on the product. Children under the age of 10 near the product, should be supervised by a competent adult at all times. This product is NOT intended for commercial use and will void the warranty.

SAFETY WARNINGS



WARNING: Weight limit for the glider is 250 lbs (113.39 kg) for each seat.



CAUTION: Do not locate the product near any heat source.



WARNING: This glider unit is heavy, and may require two adults for safe assembly.



CAUTION: When not in use, secure the product in a cool and covered location.

Warranty

2 YEAR FRAME AND 2 YEAR FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for two years, and a two year limited warranty for the fabric.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.HamptonBay.com.

Pre-Assembly

PLANNING ASSEMBLY

Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



 


NOTE: More than one person may be required to assemble this product.

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

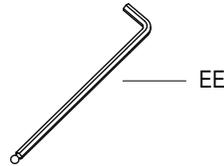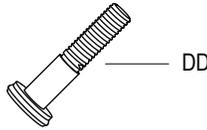

Part	Description	Quantity
AA	M6x15 combination bolt	6+1
BB	M6x30 combination bolt	2+1
CC	Plastic washer	4+1
DD	M6x18 countersunk bolt	4+1
EE	Hex wrench	1

Pre-Assembly (continued)

PACKAGE CONTENTS

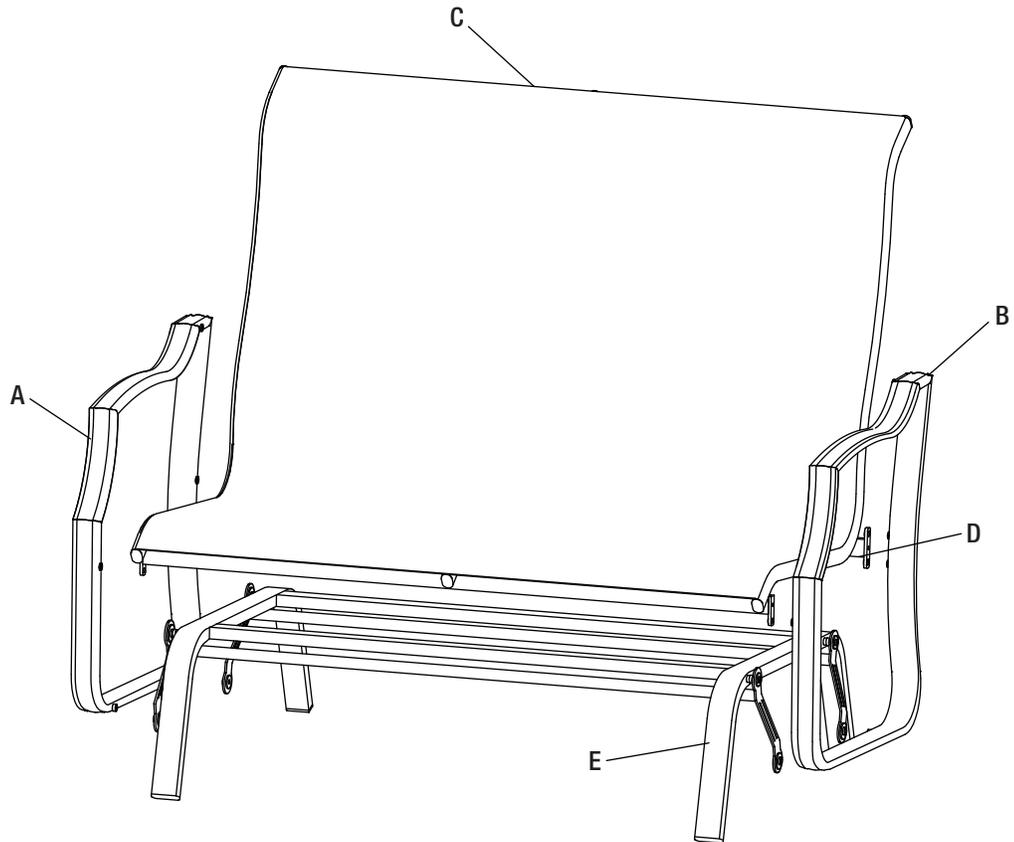

Part	Description	Quantity
A	Right arm	1
B	Left arm	1
C	Glider bucket	1
D	Back bar	1
E	Glider base	1


Assembly

1 Connecting the right arm to the glider bucket and the back bar

- Attach the right arm (A) to the front of the glider bucket (C) using one M6x15 combination bolt (AA).
- Attach the top of the right arm (A) to the back of the glider bucket (C) using one M6x30 combination bolt (BB).
- Attach the back bar (D) to the right arm (A) using two M6x15 combination bolts (AA).



NOTE: Loosely tighten all bolts using the hex wrench (EE).

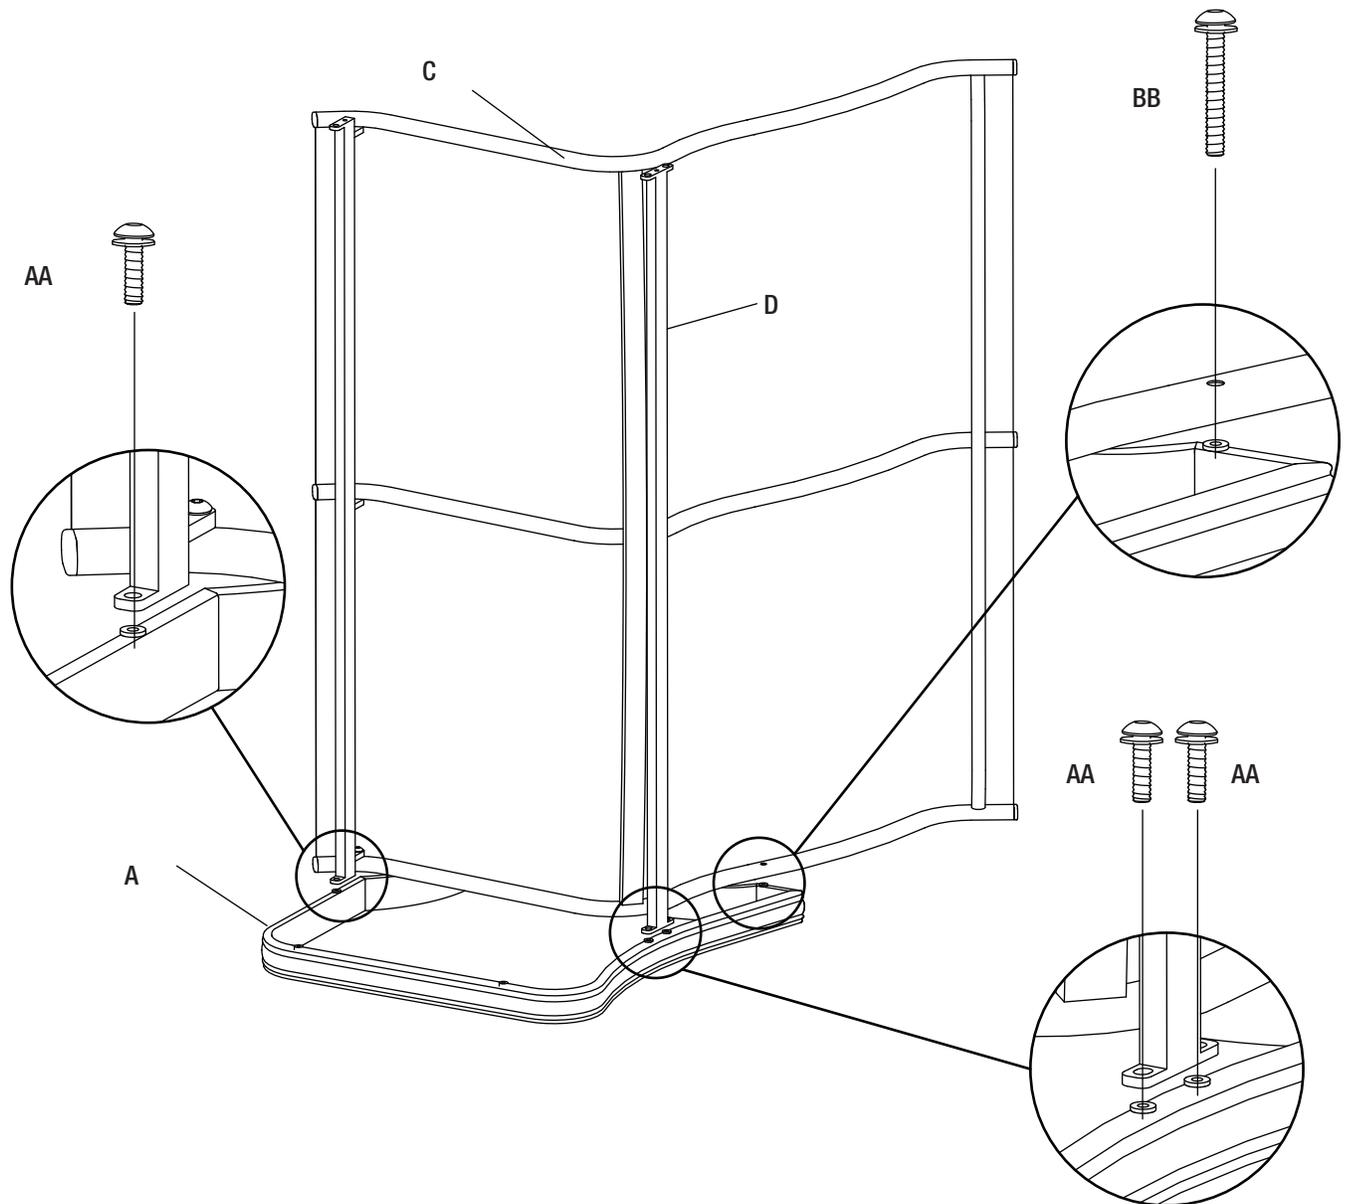


Assembly (continued)

2 Connecting the left arm to the glider bucket and the back bar

- Attach the left arm (B) to the front of glider bucket (C) using one M6x15 combination bolt (AA).
- Attach the top of the left arm (B) to the back of the glider bucket (C) using one M6x30 combination bolt (BB).
- Attach the back bar (D) to the left arm (B) using two M6x15 combination bolts (AA).



NOTE: Loosely tighten all bolts using the hex wrench (EE).

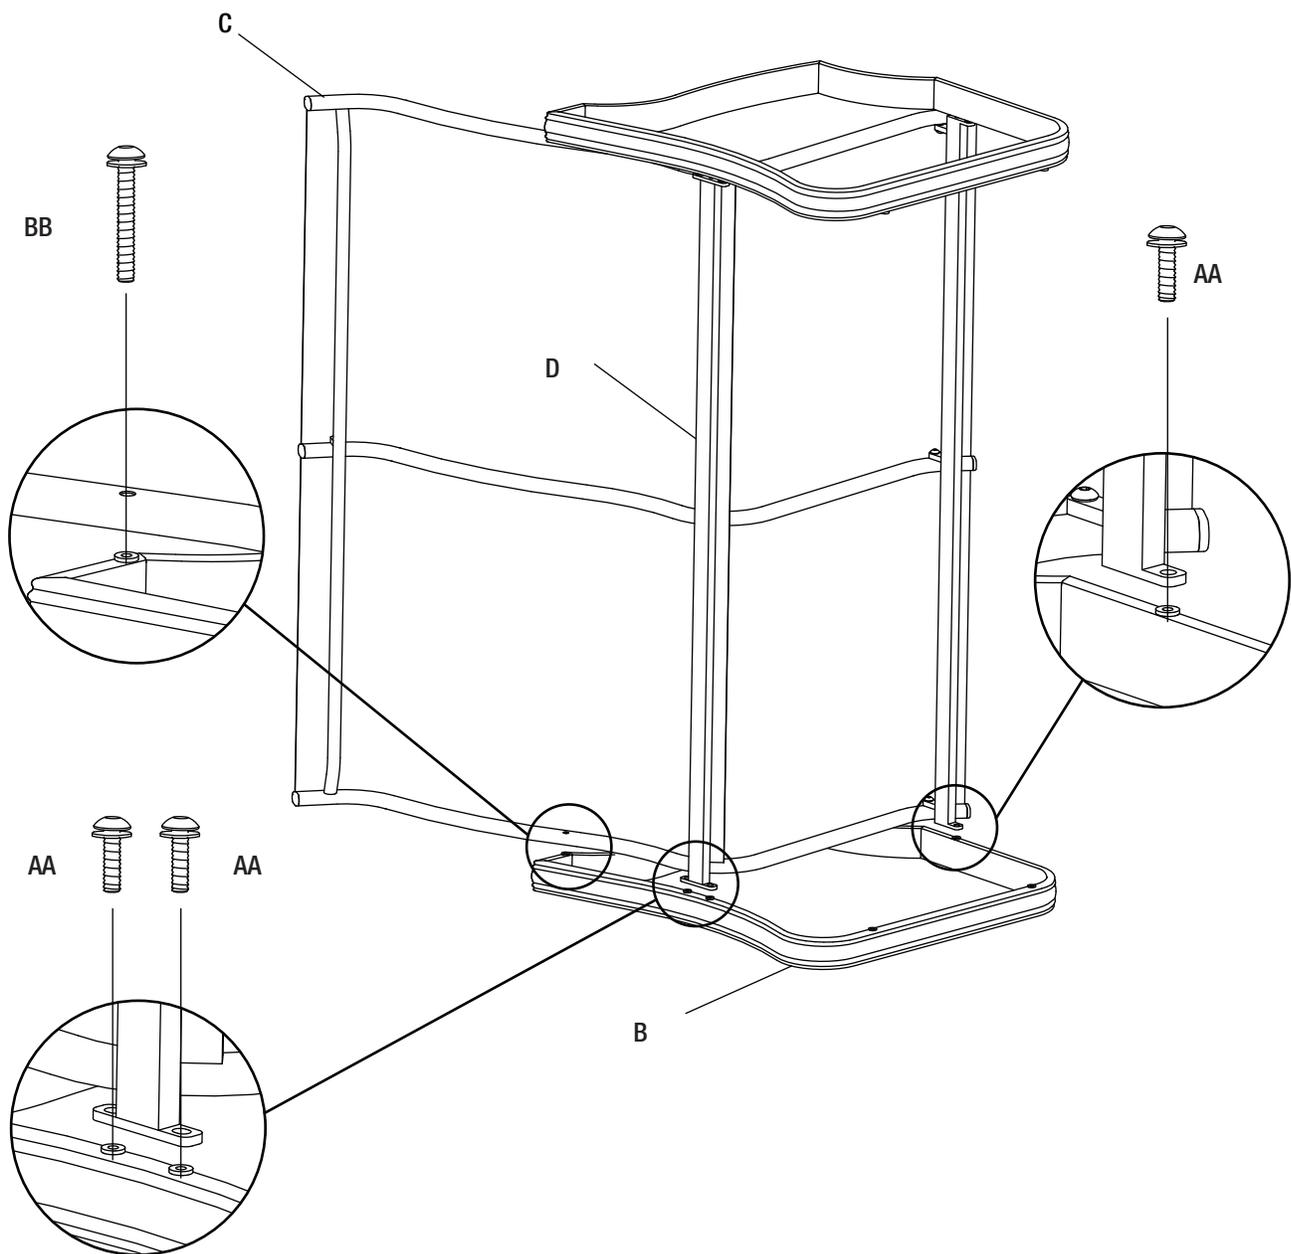


Assembly (continued)

3 Connecting the arms to the glider base

- Attach the glider base (E) to the arms (A and B) using four M6x18 countersunk bolts (DD) and plastic washers (CC).
- Glider base can install in any direction.




NOTE: Loosely tighten all bolts using the hex wrench (EE).

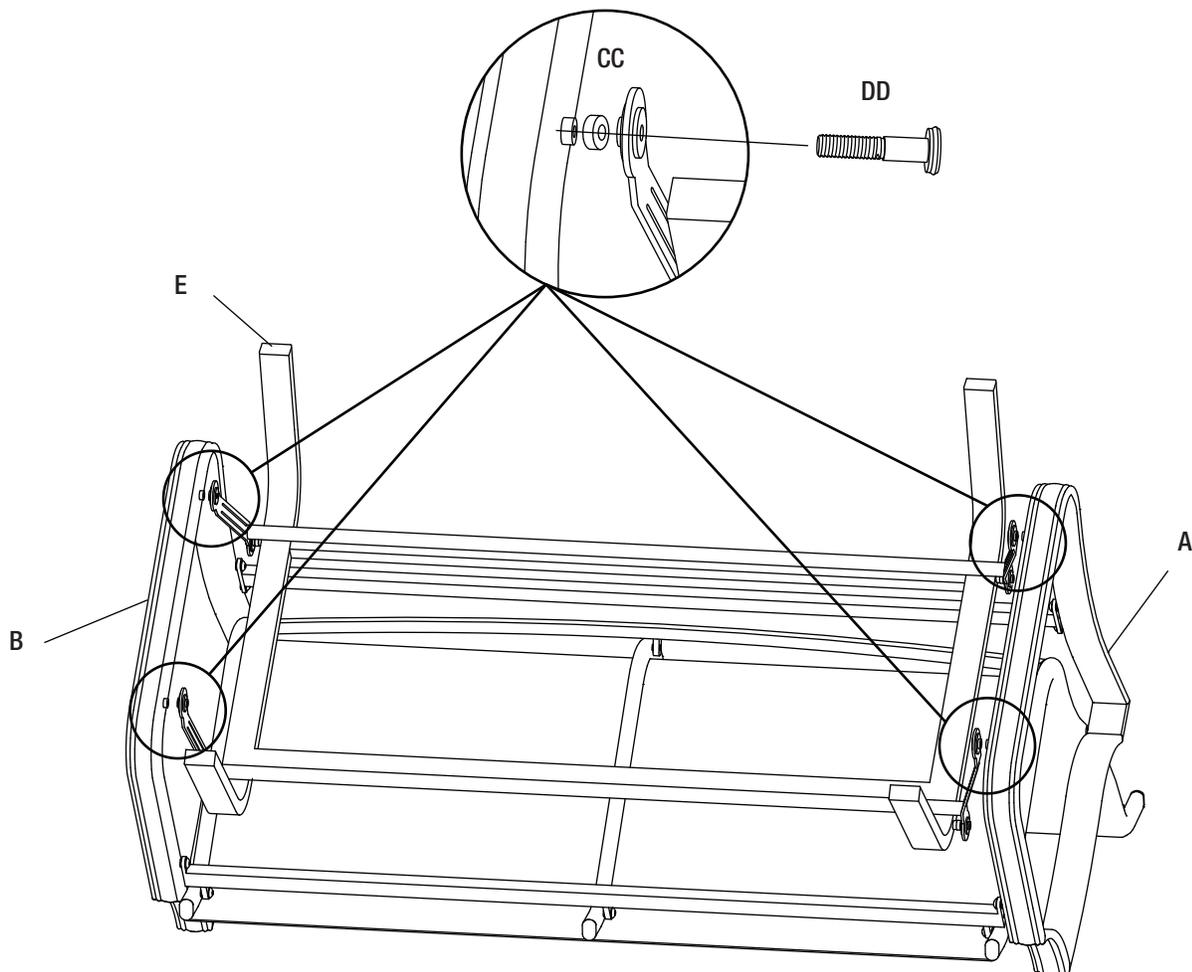

Assembly (continued)

4 Tightening all bolts

- Turn the glider right side up.
- Once all bolts are in place, fully tighten all bolts.
- Ensure all connections are secure before use.

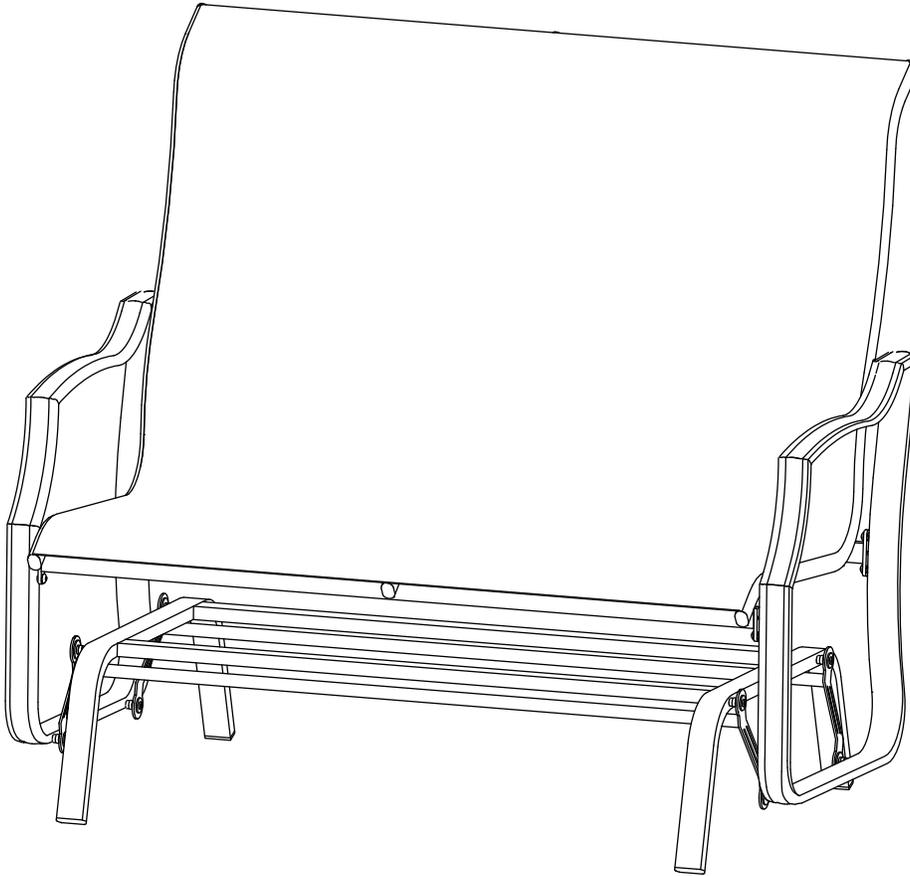

Care and Cleaning

- For best results, clean the glider with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- Do not clean with abrasive materials, bleach, or solvents.
- Store the glider in a dry, sheltered place when not in use.
- Keep the glider away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.



Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service.
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.