



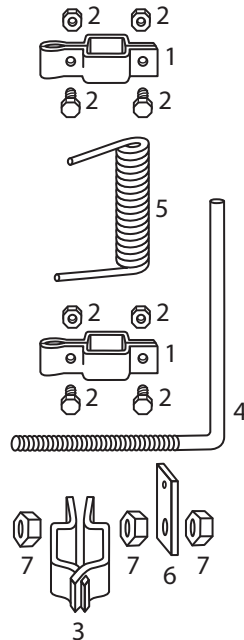

## GATE HARDWARE ASSEMBLY INSTRUCTIONS FOR SPRING CLOSURE / REGULAR GATE HARDWARE

**NUVO IRON™**  
A New Era in Fencing

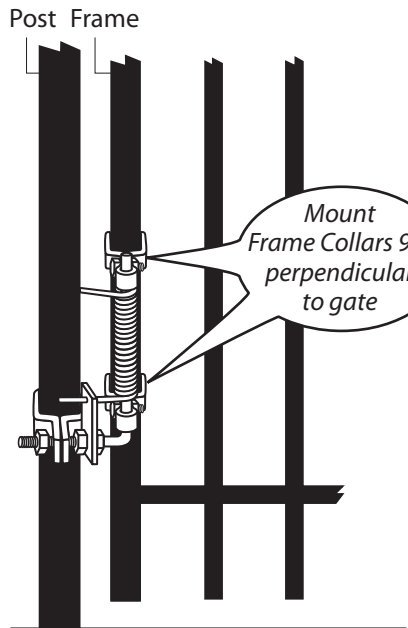


### PARTS:

1. 2-Piece Frame Collar
2. Nuts and Bolts for Frame Collar
3. 2-Piece Post Collar
4. Hinge Bolt
5. Spring - used for spring closure application
6. Spring Tension Plate - used for spring closure application
7. Nuts for Hinge Bolt

*Note - During installation should the paint get scratched please call Nuvo Iron™ for the matching touch up paint.*

- Step 1:** Bolt two nuts (7) onto hinge bolt (4) with tension plate (6) between them.
- Step 2:** Place post collar (3) on main post and fasten assembled hinge bolt from step #1 with a nut (7).
- Step 3:** Assemble bottom frame collar (1) on gate frame with nuts and bolts (2) and place on hinge bolt (4).
- Step 4:** Place spring (5) on hinge bolt (4) and set bottom spring prong through hole in spring tension plate (6) and behind post; and set top spring prong in front of gate frame.
- Step 5:** Assemble top frame collar (1) on gate frame with nuts and bolts (2) and place on hinge bolt (4).
- Step 6:** Adjust the spring tension by moving spring tension plate (6).
- Step 7:** Align gate and tighten all nuts and bolts.
- Step 8:** Install 1" Finial inserts on top of the gate frame if applicable (Diamond & Sapphire styles only).

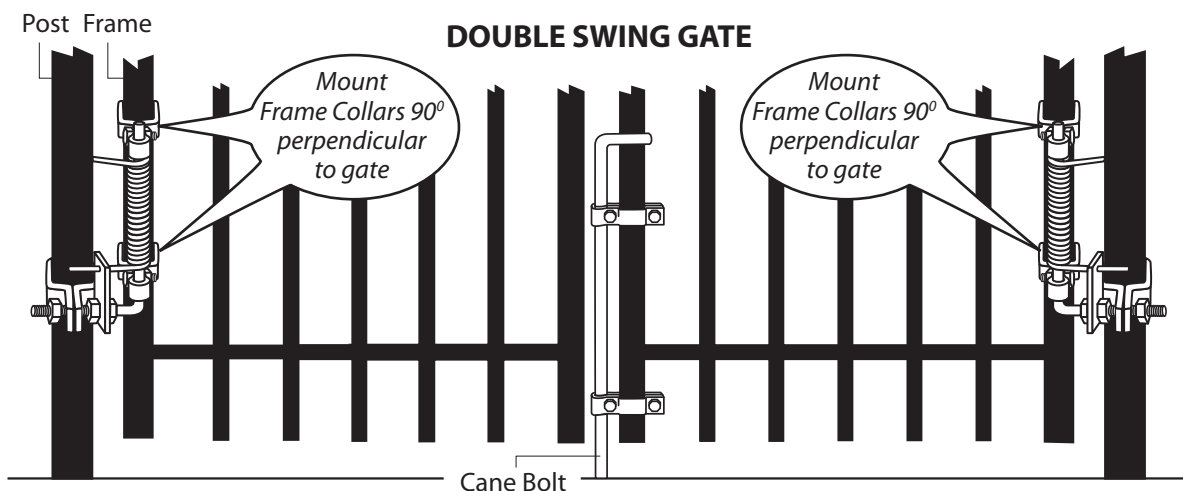

Nuvo Iron™, its advertising agency and delegates have made every effort to ensure the accuracy of all measurements and other details in these instructions and we anticipate no problems to arise. However, we cannot be responsible for errors beyond that effort. Therefore, always double-check details before beginning your project. Nuvo Iron™, its advertising agency and delegates shall not be held responsible for injury, damage or any other loss, however caused, resulting from the information contained in these instructions.