

CARE AND MAINTENANCE



Surface dust may be removed with gentle brush, feather duster, or clean, dry cloth.



Vacuuming with a soft brush attachment will help lift dust and fibers from hard to reach places.





Spot clean with a detergent and water solution. Always spot test in a small, inconspicuous area before cleaning.

ADJUSTING THE ROLLER SHADE:

1. Pull down the shade approximately 5".
2. Slide off the left bracket cover.
3. Lift the left side of the roller shade (together with the round bracket insert).
4. Rotate the shade (together with the round bracket insert) for 1 – 2 rotations in the direction specified below:
 - Clockwise to make shade stop higher
 - Counterclockwise to make shade stop lower
5. Insert the ring back into the bracket slot.
6. Test the shade's operation and repeat step 3 – 5 until the desired result is achieved.
7. Slide on the left bracket cover.

Caution: over-winding may result in permanent damage.

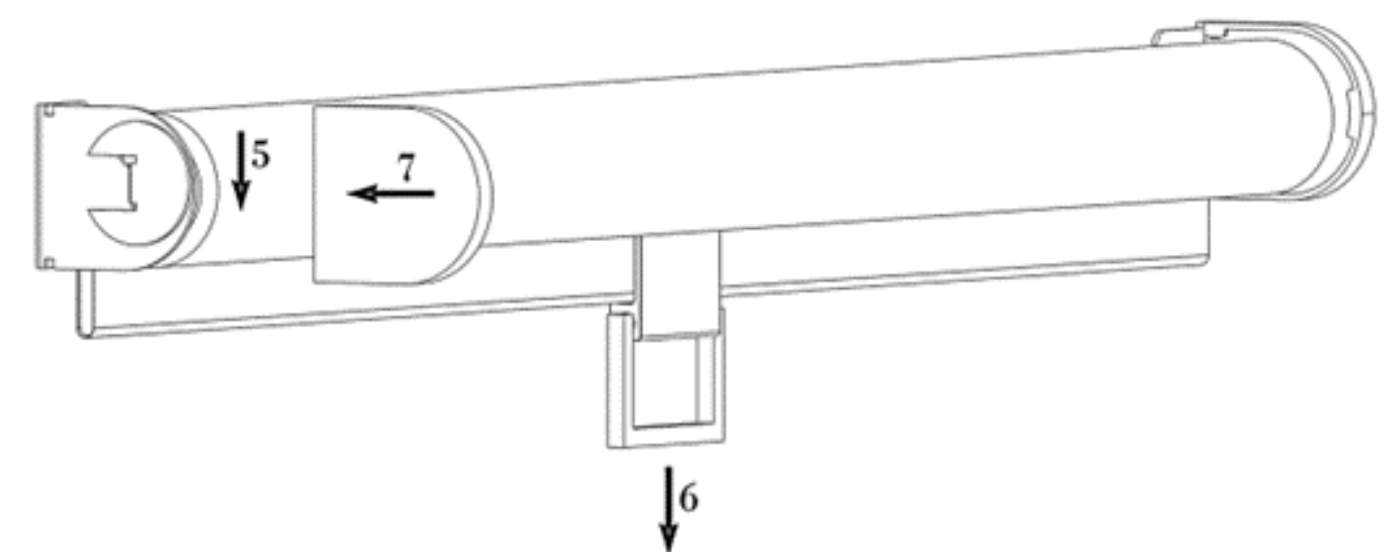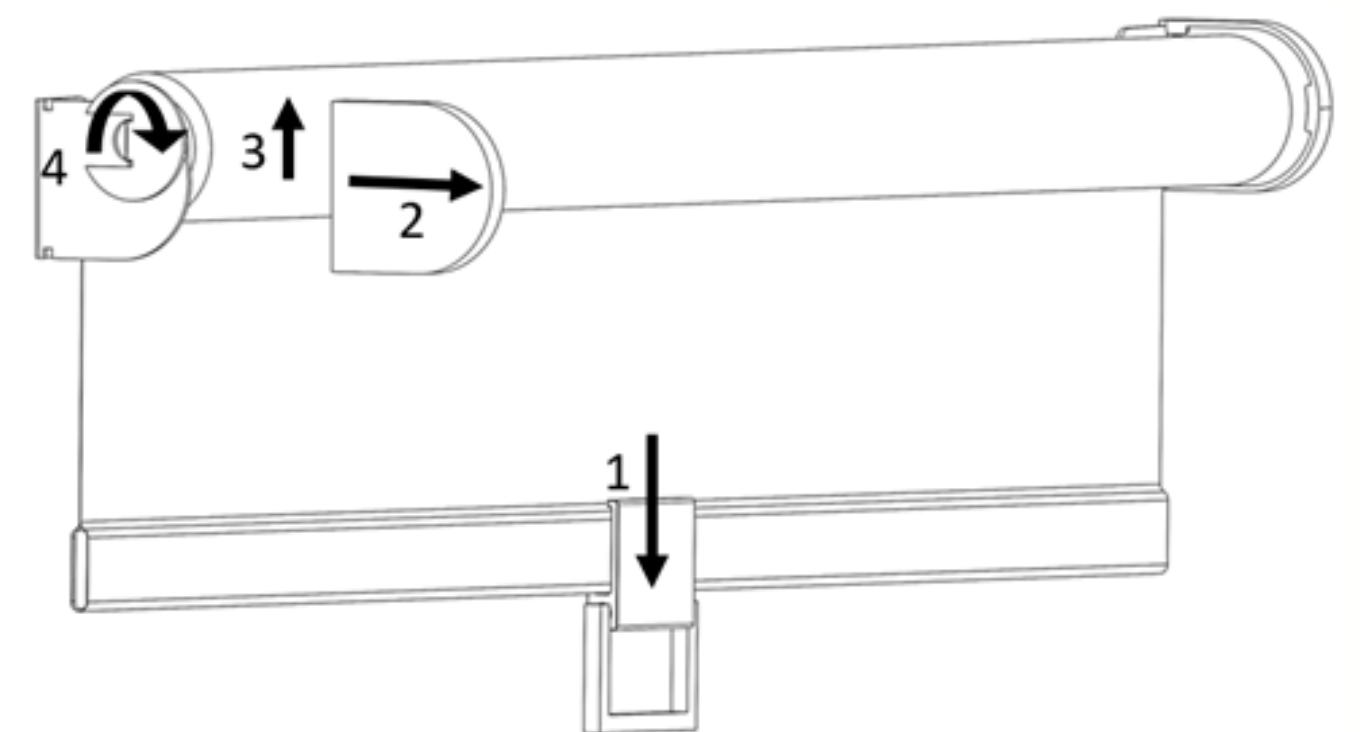

iFitTM CORDLESS ROLLER SHADE