

ARCTIC AIR

FREEDOM TOUCH

WEARABLE PERSONAL AIR COOLER



INSTRUCTION MANUAL

READ ENTIRE MANUAL BEFORE USE

Congratulations! You're officially cooler for buying the Arctic Air Freedom® Touch!

 
If you have any questions or encounter any issues, please visit:

www.AAFreedomTouchFeedback.com
or scan the code for troubleshooting tips.

If you can't find the answer, feel free to
email our customer service team at:
AAFreedomTouch@rephelpdesk.com



WHAT'S INCLUDED:

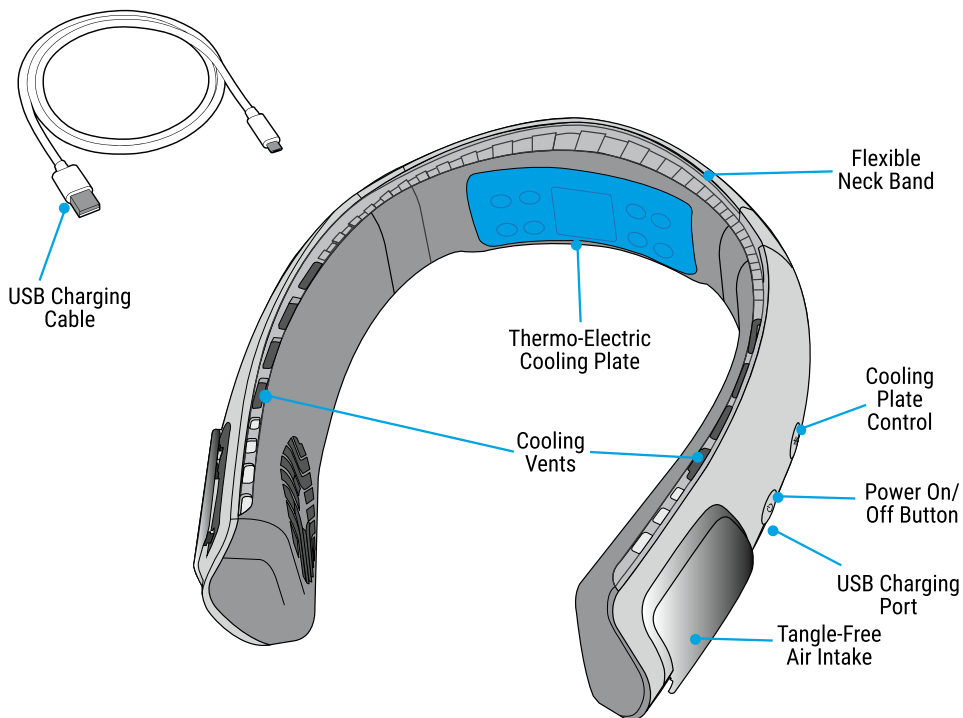


CHARGING THE BATTERY:


Arctic Air Freedom® Touch comes partially charged – For Best Results, fully charge battery before first use.

NOTE: When fully charged, you can expect runtime of 3-6 hours depending on fan speed.

 
1. Using included USB cable, plug small end into charging port located on side of unit.

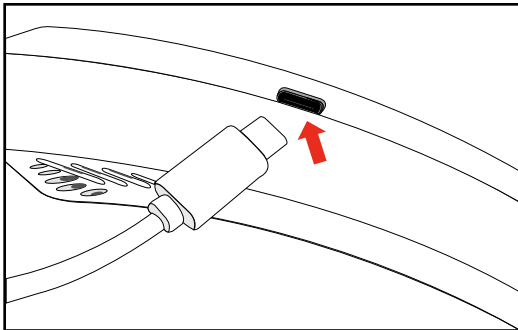

 2. Plug large end of USB cable into a USB-Power adapter, laptop, or other device (not included).



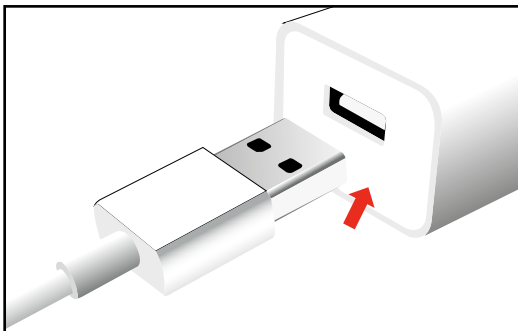


 3. Power Button will begin blinking to indicate unit is charging. When light remains solid, Arctic Air Freedom® Touch is fully charged.

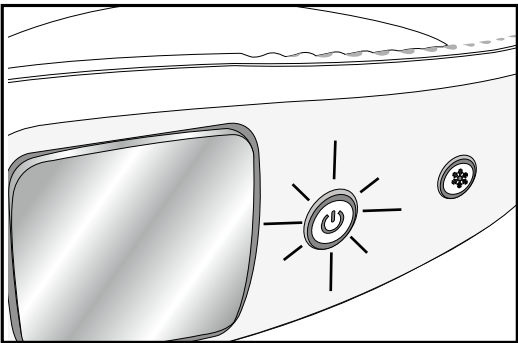

USE:

   1. Place Arctic Air Freedom® Touch around your neck, with Air Vents facing up towards your face. See Fig.1
2. Press the power button located on the side to turn on – light will glow to indicate unit has power.
NOTE: Fan speed will default to HIGH. Press button again to change to MEDIUM, and again to change to LOW. See Fig. 2
3. Cooling plate will default to on. If you would like to extend runtime of the fans, or use without cooling plate, press the Cooling Plate Control to turn off. See Fig. 3
4. When done, press power button until unit turns off. Store in a cool, dry location until next use.

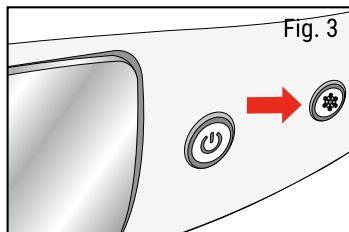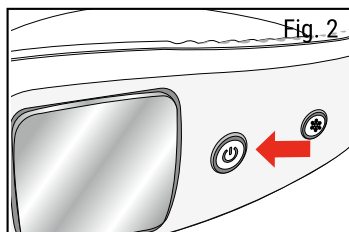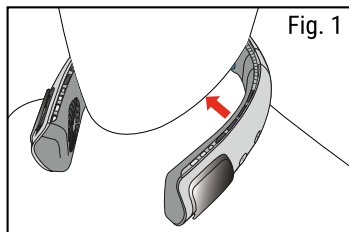

WARNINGS:

- DO NOT allow any liquid to get inside Arctic Air Freedom® Touch. Do not submerge in any liquid.
- DO NOT expose Arctic Air Freedom® Touch to wet or damp area. Use only in a dry locations.
- DO NOT attempt to remove or replace the included battery.
- DO NOT place near open flames or fire sources.
- DO NOT use solvents or alcohols for cleaning Arctic Air Freedom® Touch.
- Only use the original power cord supplied in package.
- DO NOT allow any foreign objects inside Arctic Air Freedom® Touch.

WARNINGS (CONT.):

- Arctic Air Freedom® Touch is intended for household use.
- The manufacturer does not bear any responsibility for any damage from failure to comply with this product guide.

ONTEL® ASSUMES NO RESPONSIBILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF THE PRODUCT. IN PURCHASING AND USING THIS PRODUCT, YOU ASSUME ALL RESPONSIBILITY FOR CLEANING THE PRODUCT AND MONITORING THE PRODUCT FOR MOLD. ADDITIONALLY, ONTEL® SPECIFICALLY DISCLAIMS ALL EXPRESSED WARRANTIES NOT OTHERWISE SET FORTH HEREIN AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION OF THE FACE HEREOF.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

FOR HOUSEHOLD USE ONLY



©2024 Ontel Products Corp.
Fairfield, NJ 07004
All Rights Reserved.

Made In China
Patents Pending.
AAFRT-IM-01-1124-300

Model Number: **18009**
DC 5V~1A
3.7V, 2000mAh

ARCTIC AIR

Enjoy Cool, Chilled Air... Anywhere!



For Questions or Customer Service, please visit:

www.AAFreedomTouchFeedback.com

Email: AAFreedomTouch@rephelpdesk.com