


USE AND CARE GUIDE

DESK WITH 2-DRAWER

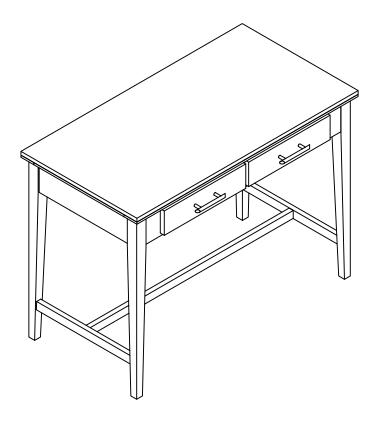

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service.

8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-998-7021

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

Table of Contents

Table of Contents	2
Safety Information	
Warranty	
3 Year Warranty	
What is Covered	
What is Not Covered	2
Pre-assembly	3
Planning Assembly	
Tools Required	

Hardware Included	3
Pre-assembly (continued)	4
Package Contents	
Assembly	5

Safety Information



DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



WARNING

- Read these instructions carefully and keep in a safe place.
- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- □ Small parts may present choking hazard prior to assembly.
- Do not place heavy objects on the glass top.
- □ Some assembly may involve attaching glass or mirrors.
- Be very careful handling the glass or mirrors, as severe injury may result if the glass or mirror breaks.
- □ Never handle large pieces of glass or mirrors by yourself.



CAUTION

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.).
 Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for three years.

WHAT IS NOT COVERED

 
This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-assembly


PLANNING ASSEMBLY

Keep children and pets away from build area. Make sure your area is large enough to unpack, sort and assemble the unit.

TOOLS REQUIRED



HARDWARE INCLUDED

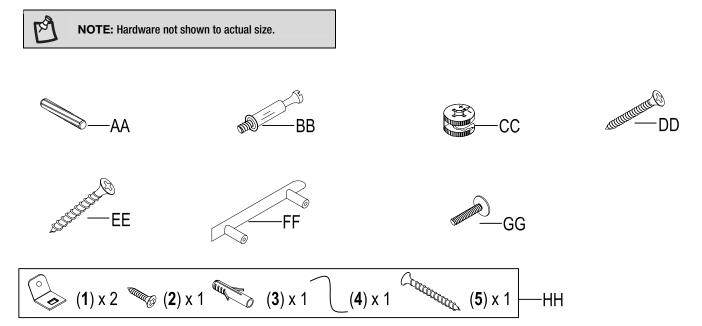


Part	Description	Quantity
AA	Wood dowel	22
BB	Cam lock bolt	30
CC	Cam lock	30
DD	1 in. Flat head screw	22
EE	1-1/2 in. Flat head screw	2
FF	Handle	2
GG	Handle bolt	4
НН	Anti-tipping hardware package	1

Please contact 1-800-998-7021 for further assistance.

Pre-assembly (continued)

PACKAGE CONTENTS

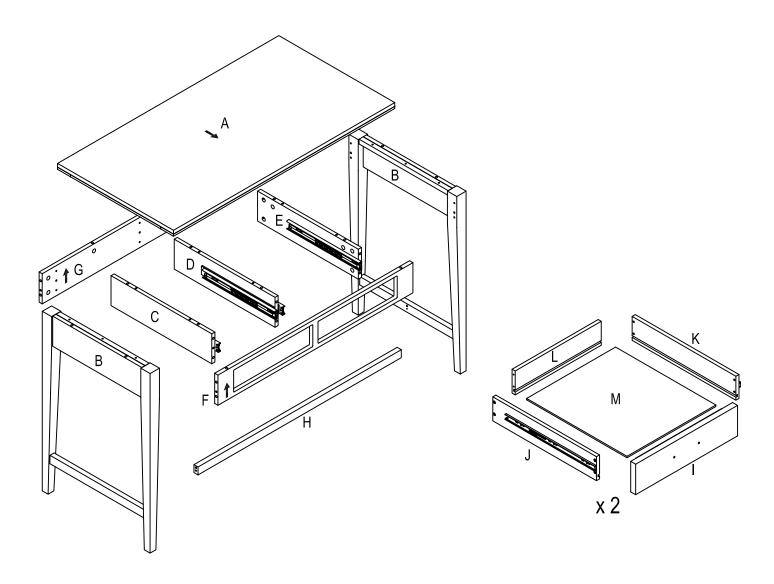


Part	Description	Quantity
Α	Top panel	1
В	Side frame	2
С	Left partition	1
D	Middle partition	1
E	Right partition	1
F	Front panel	1
G	Back panel	1

Part	Description	Quantity
Н	Crossbar	1
ı	Drawer front panel	2
J	Drawer left side panel	2
K	Drawer right side panel	2
L	Drawer back panel	2
M	Drawer bottom panel	2


Assembly

Attaching the partition to the front panel


a) Install dowel (AA) and bolt (BB) into panel (F).

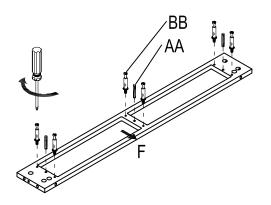


□ c) Join partitions (C), (D) and (E) to the panel (F) with dowel (AA).

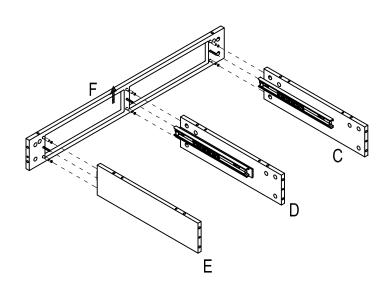

□ b) Insert lock (CC) into partitions (C), (D) and (E).

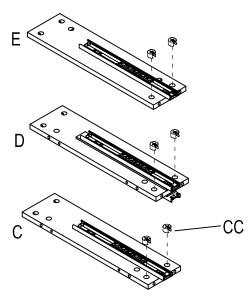

□ d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

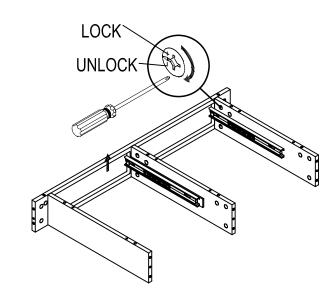

Wood dowel Cam lock bolt Cam lock Small head Large head





 
(CC) x 6













2 Attaching the back panel


a) Install dowel (AA) and bolt (BB) into panel (G).

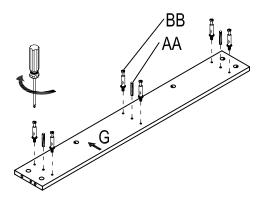


□ c) Join panel (G) to the assembled body with dowel (AA).

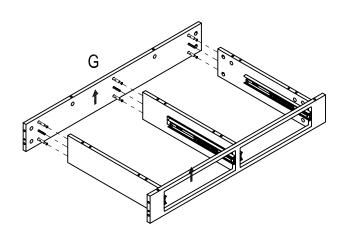

□ b) Insert lock (CC) into partitions (C), (D) and (E).

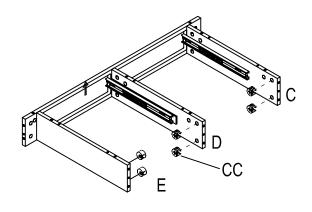

□ d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

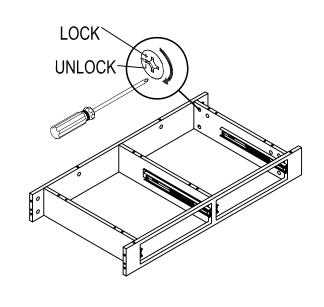

Wood dowel Cam lock bolt Cam lock Small head





(CC) x 6













Large head

$oldsymbol{3}$ Attaching the side frame


a) Install dowel (AA) and bolt (BB) into frame (B).

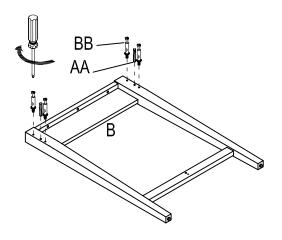


 \Box c) Join frame (B) to the assembled body with dowel (AA).

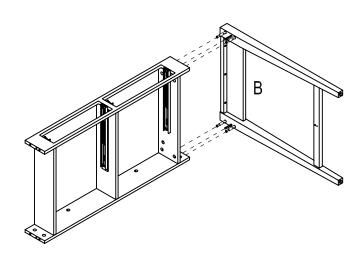

□ b) Insert lock (CC) into panels (F) and (G).

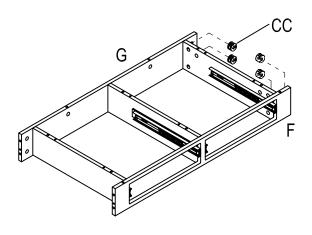

□ d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

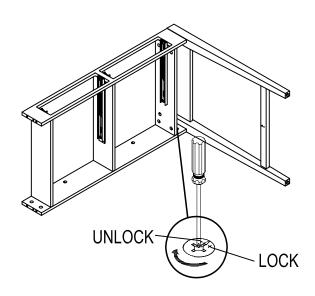

Wood dowel

Cam lock bolt

Cam lock Small head

Large head

(**AA**) x 2



 














4 Attaching the side frame and crossbar


□ a) Install dowel (AA) and bolt (BB) into frame (B).

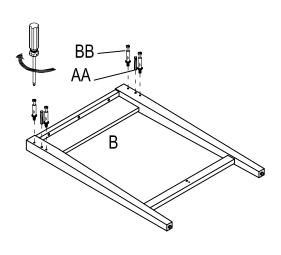


 c) Join frame (B) and bar (H) to the assembled body with dowel (AA).

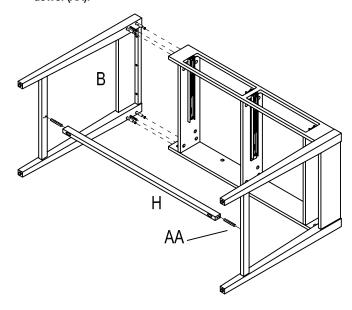

 $\ \square$ b) Insert lock (CC) into panels (F) and (G).

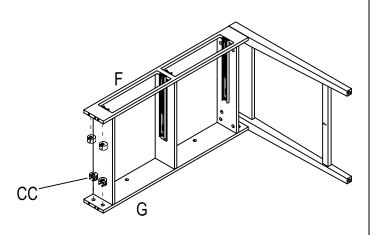

d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.
 Tighten bar (H) with screw (EE).

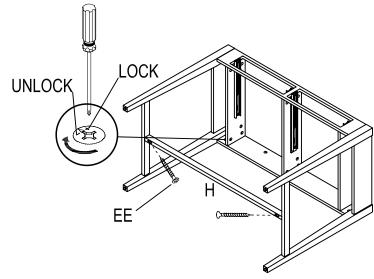

Wood dowel

Cam lock bolt

.

Small head

Large head

(**AA**) x 4



(CC) x 4

Cam lock

1-1/2 in. Flat head screw

 
(EE) x 2













5 Attaching the top panel


□ a) Install dowel (AA) and bolt (BB) into panel (A).

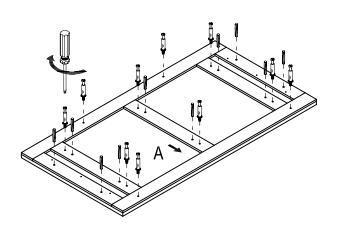


c) Join panel (A) to the assembled body with dowel (AA).

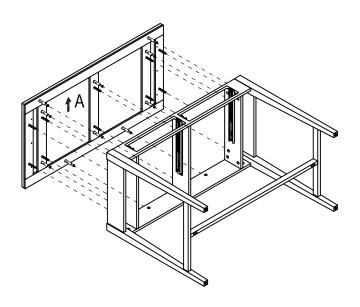

b) Insert lock (CC) into panels (G) and (F), and partitions (C), (D) and (E).

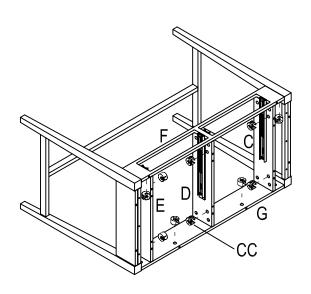

d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.
 Tighten frame (B) with screw (DD).

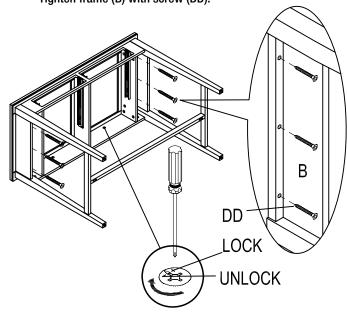

Wood dowel Cam lock bolt Cam lock 1 in. Flat head screw Small head Large head

(AA) x 10 (BB) x 10 (CC) x 10 (DD) x 6













6 Assembling the drawer


a) Tighten panels (J) and (K) to panel (I) with screw (DD).

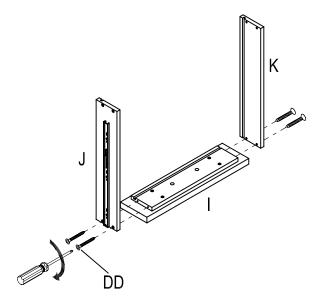


 c) Tighten panel (L) to the assembled body with screw (DD).

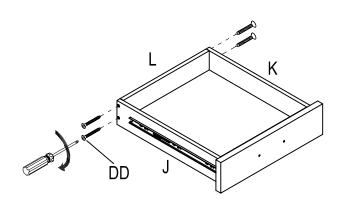

 b) Slide panel (M) into the grooves on panels (J) and (K).

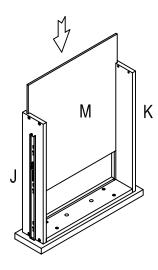

d) Tighten handle (FF) to panel (I) with bolt (GG).

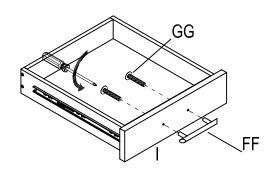

1 in. Flat head screw

Handle

Bolt

Small head

(**DD**) x 16



(**FF**) x 2




(**GG**) x 4





7 Inserting the drawer

Insert the drawer into the assembled body as shown.

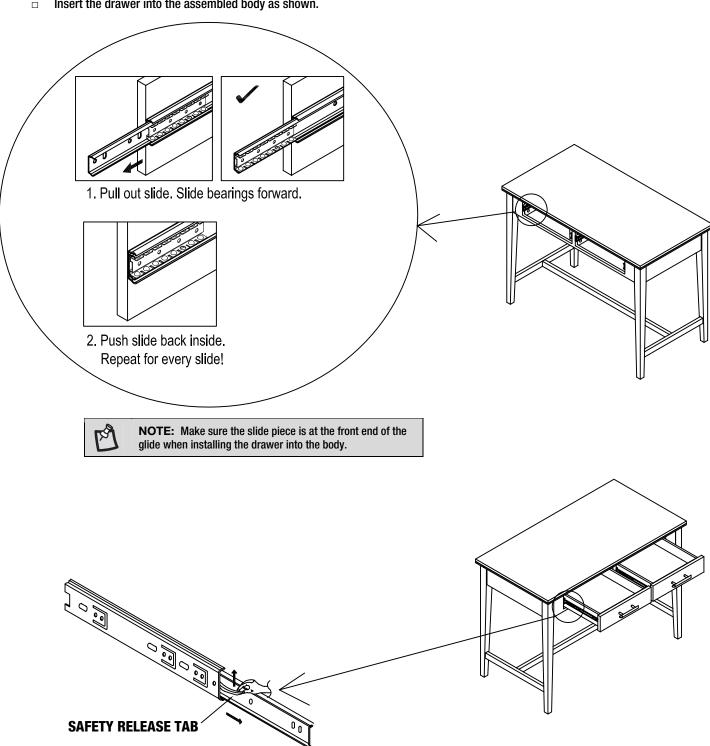






NOTE: When removing the drawer, tip-up the safety release tab to remove the drawer from the body.

8 Finalizing the assembly

 □ Install the anti-tipping hardware as shown.

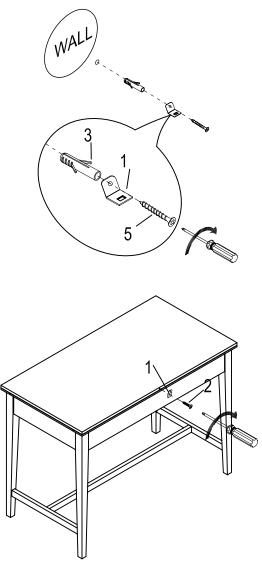

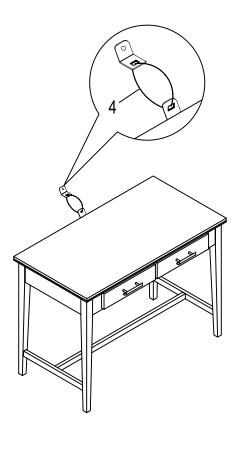





Questions, problems, missing parts?

Before returning to the store, call Home Decorators Collection Customer Service.

8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-998-7021

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.