

USE AND CARE GUIDE

UNFINISHED BASIC END TABLE

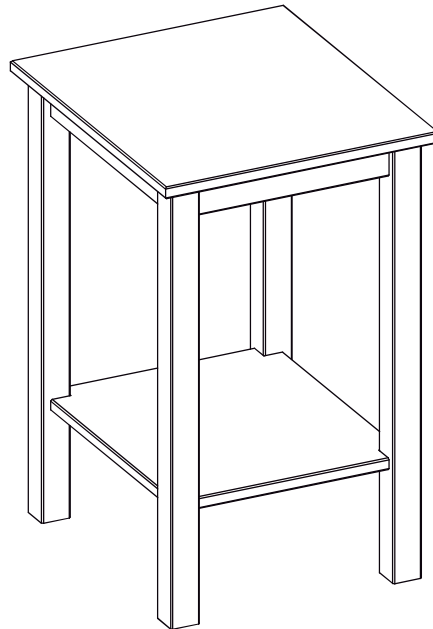

Questions, problems, missing parts?
Before returning to the store, call Customer Service.
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in StyleWell through the purchase of this Basic End Table . We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!

Table of Contents

Table of Contents	2
Pre Assembly	3
Pre Assembly	4
Assembly	5
Assembly	6
Assembly	7

Safety Information



DANGER

- ☐ Keep small parts away from children during assembly.
- ☐ Read and follow instructions carefully.



WARNING

- ☐ Read these instructions carefully and keep in a safe place.
- ☐ TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- ☐ Adult assembly required.
- ☐ Small parts may present choking hazard prior to assembly.
- ☐ Do not stand, step or climb on unit.



CAUTION

- ☐ Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- ☐ Do not overtighten connectors (screws, bolts, etc.). Overtightening can lead to product damage.
- ☐ Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- ☐ DO NOT USE SUBSTITUTE PARTS.
- ☐ This product should only be used on a flat, level surface.
- ☐ Product is designed to hold 10 Kg. Exceeding this limit may damage the product or cause injury to the user.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-Assembly

PLANNING ASSEMBLY

Read all instructions before assembly.
To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



NOTE: More than one person may be required to assemble this product.

TOOLS REQUIRED



Safety goggles



Phillips screwdriver



Hammer

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



AA



BB



CC



DD



EE




FF

Part	Description	Quantity
AA	8X30 Wooden dowel	18
BB	3.5x30 Screw	8
CC	6X44 Screw mini-fix	4
DD	14x10 Case mini-fix	4
EE	4.0x40 Screw	8
FF	19x20 Nail in caps	4

Pre-Assembly (continued)





PACKAGE CONTENTS

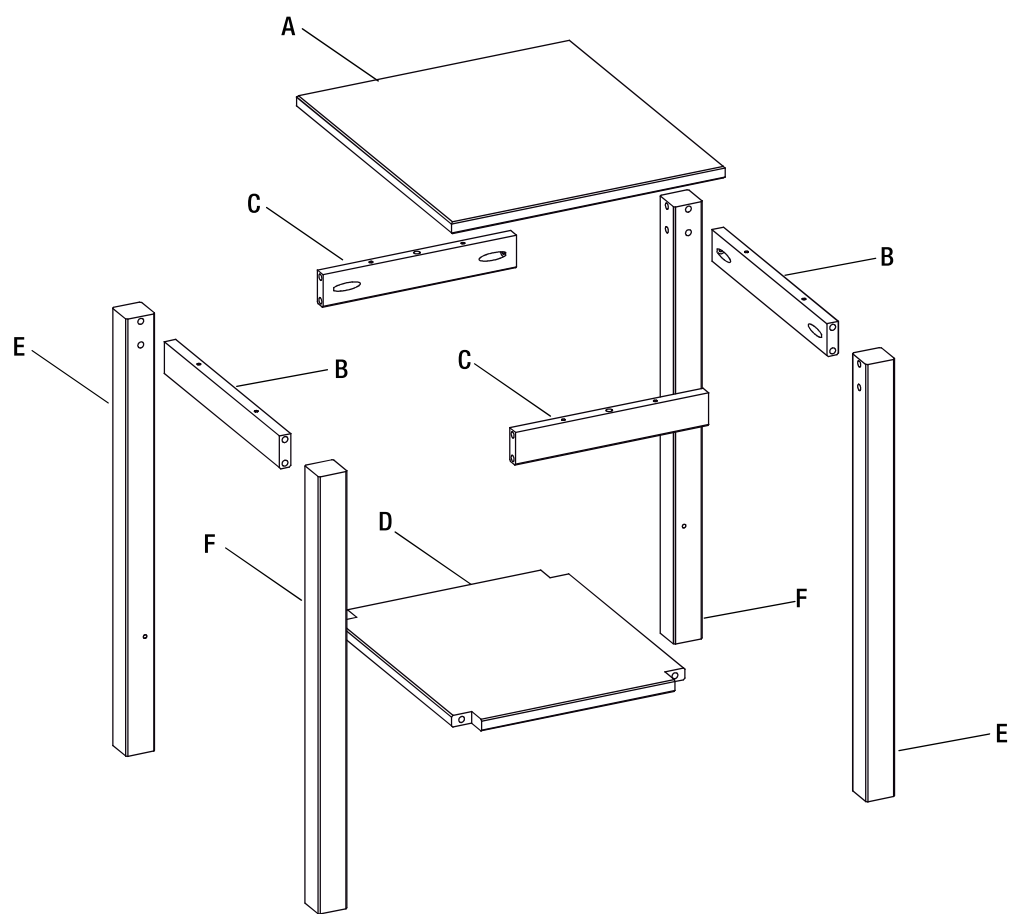




Part	Description	Quantity
A	Top Panel	1
B	Side Rail	2
C	Front Rail	2
D	Shelf	1
E	Front Right and Left Rear feet	2
F	Front Left and Right Rear feet	2

BASIC END TABLE Assembly (Repeat Step 2x)

1 Attaching the front rail to the feet

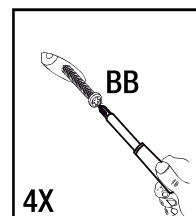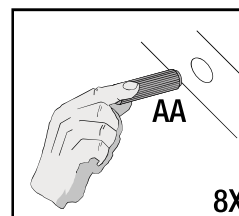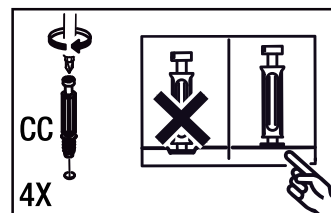
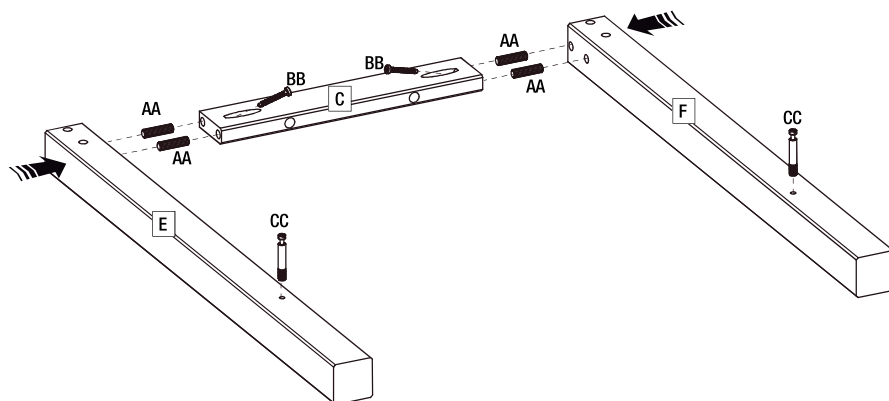


2 Attaching the side rails to the feet

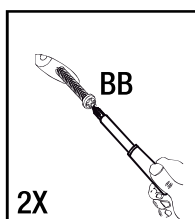
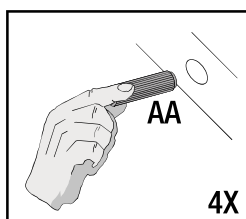
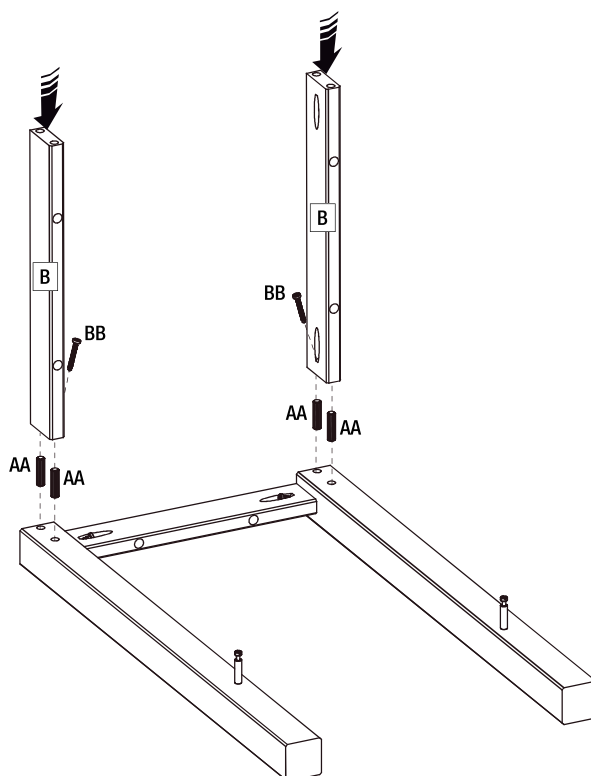


BASIC END TABLE Assembly

3 Attaching the shelf to the feet

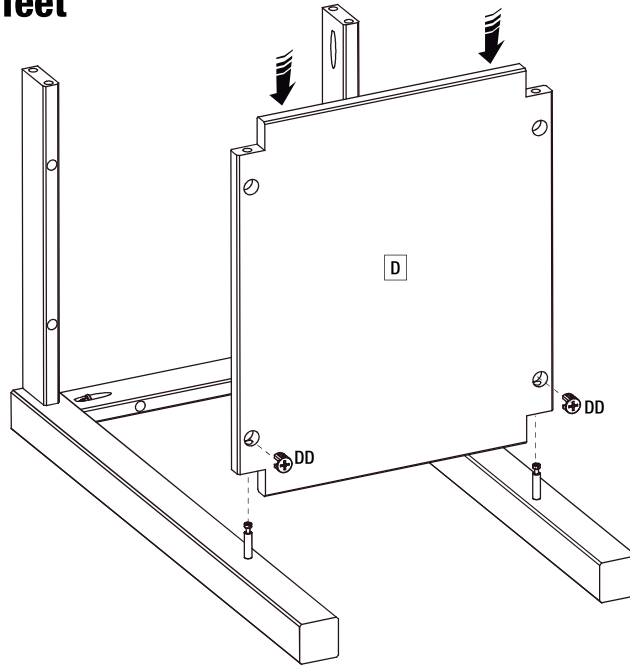
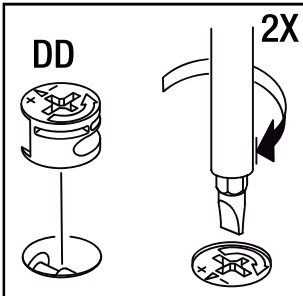


4 Attaching the side frame to the shelf and to the side rails

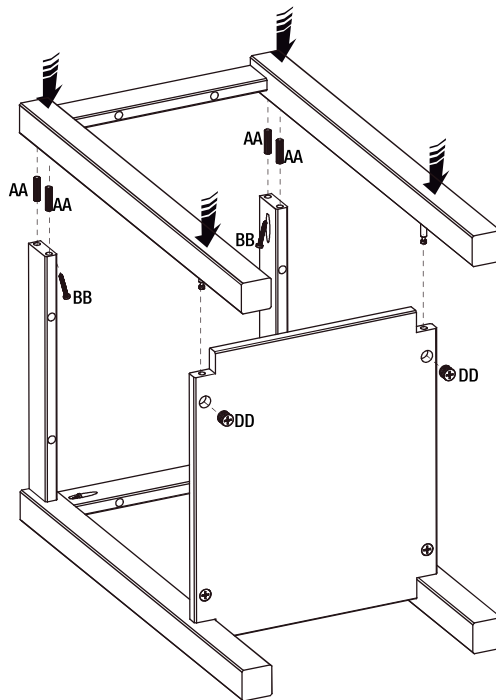
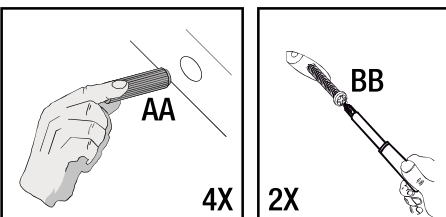
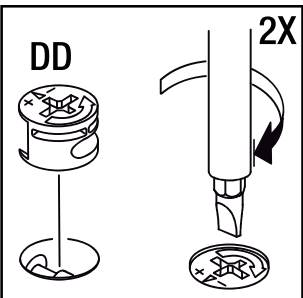



BASIC END TABLE Assembly

5 Placing the floor protection on the feet

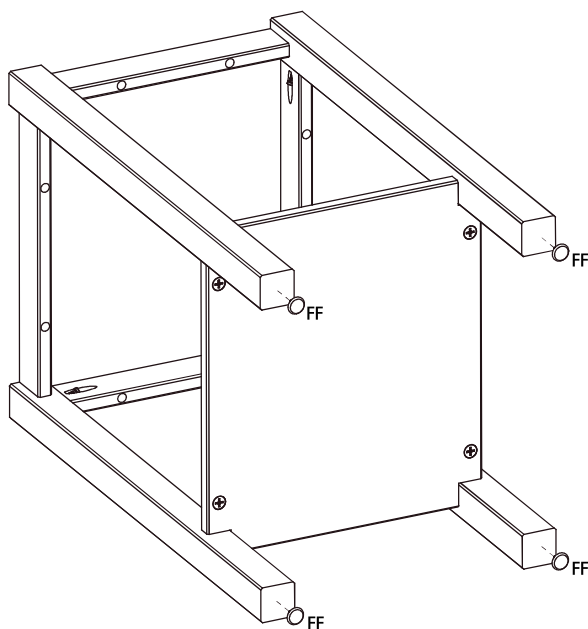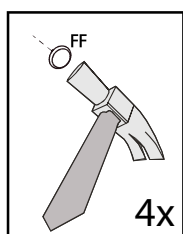

6 Attaching the top panel to the end table

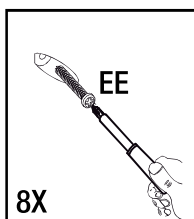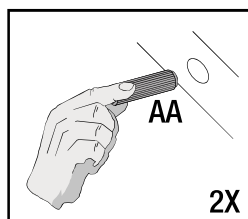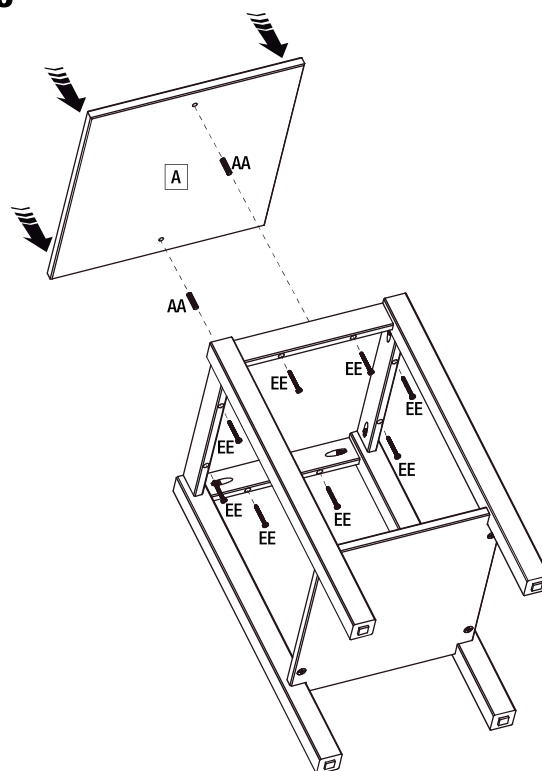

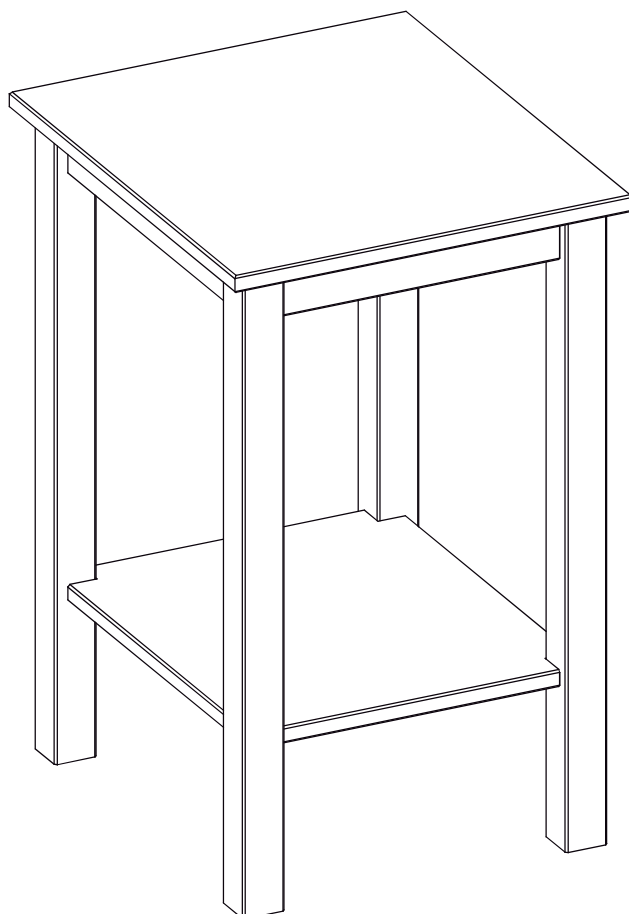

Care and Cleaning

- For best results, clean the furniture with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- Do not clean with abrasive materials, bleach, or solvents.
- Store the furniture in a dry, sheltered place when not in use.
- Keep the furniture away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.

StyleWell.™

Questions, problems, missing parts?
Before returning to the store, call Customer Service.
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.