


5m Bell Tent User Manual

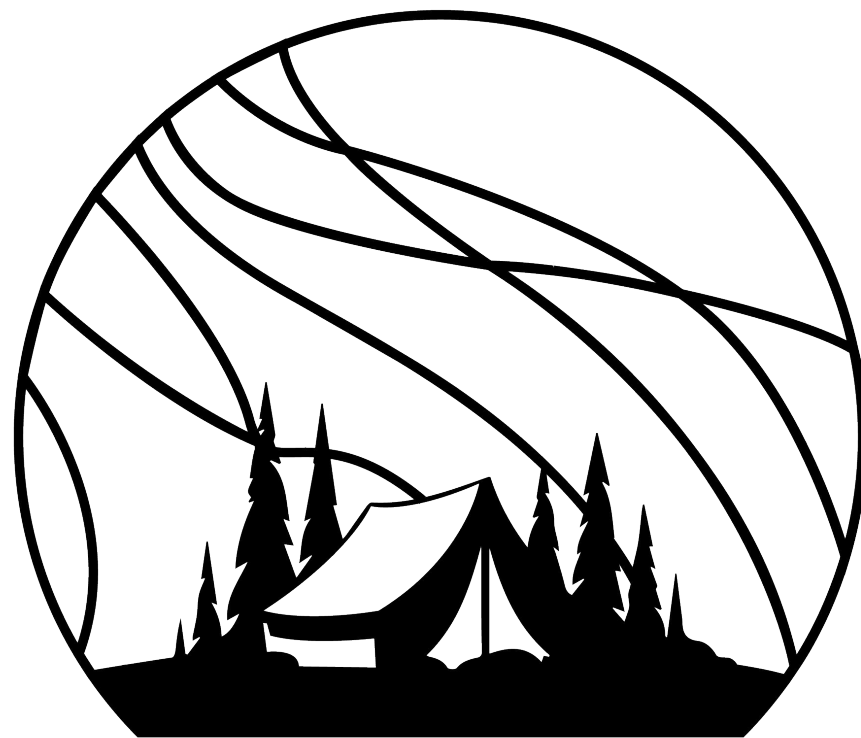

NORLIGHT

Thank you for purchasing this tent and giving it a home!
All of our tents are made from high quality materials and meet the highest manufacturing standards.
非常感谢您购买我们的帐篷并且给了它一个家！
我们所有的产品都是高质量的材料以及高要求的生产标准制作的。

Please read these instructions carefully. Proper installation and maintenance of your tent will ensure years of fun with this tent.
请仔细阅读说明书，正确的安装方式和保养方法能确保帐篷长久的使用。




EQUIPMENTLIST


产品清单



1×Canvas bag
1× 帐篷外袋

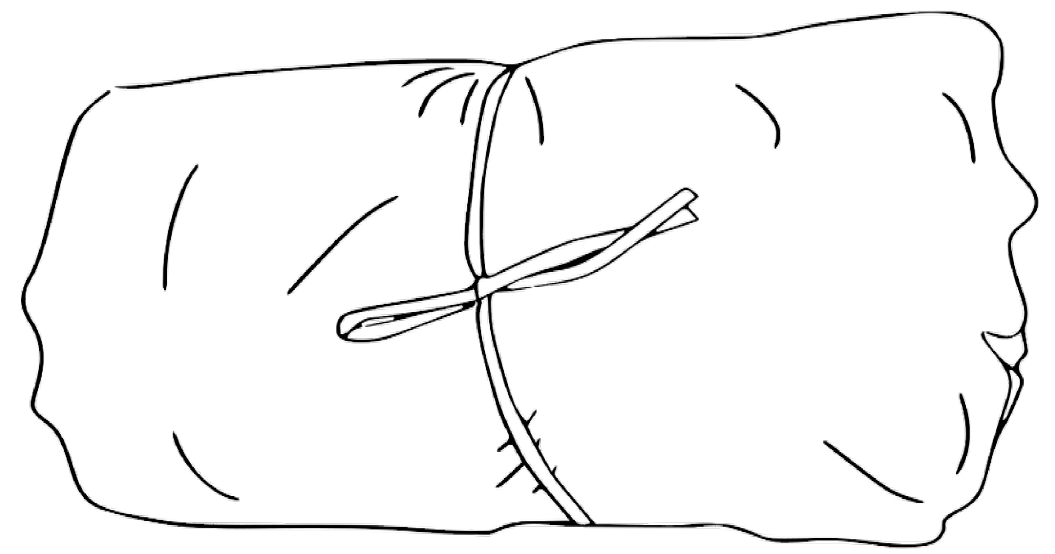


1×Tent +groundsheet
1× 帐篷含底部

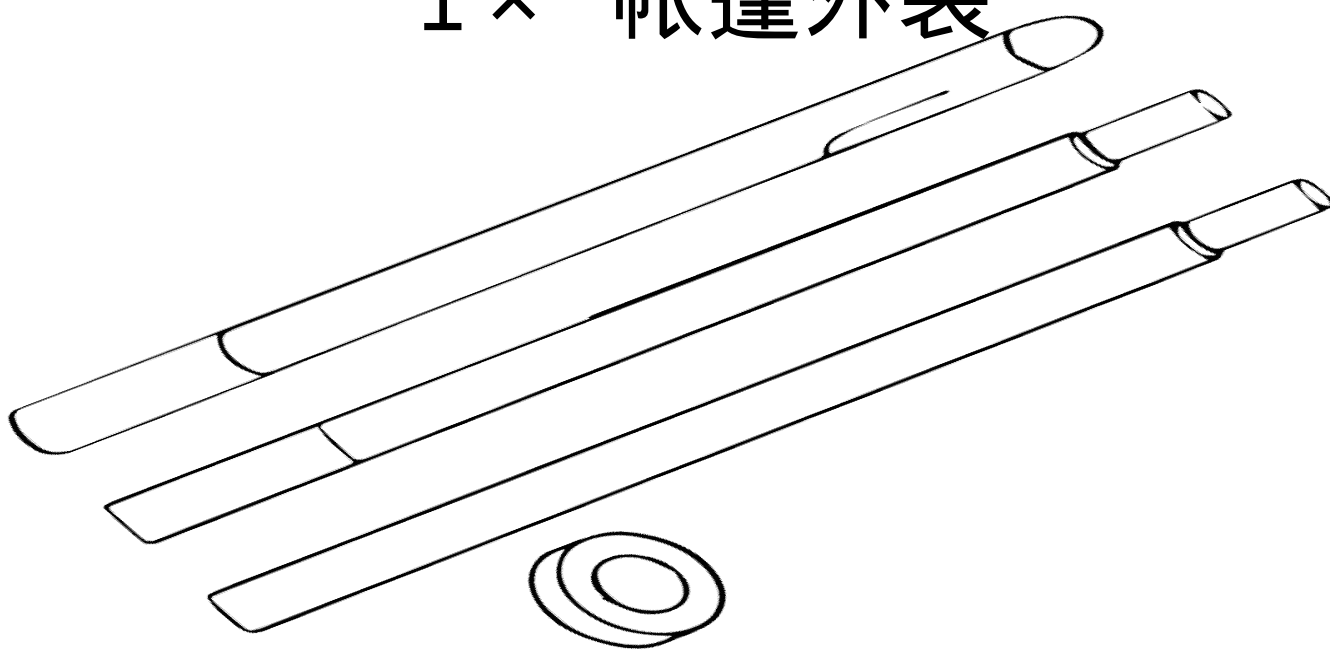


1×Wooden pole/saucer base
1套木架杆/木垫片/海绵垫




A Frame for door
1套前门铁架杆

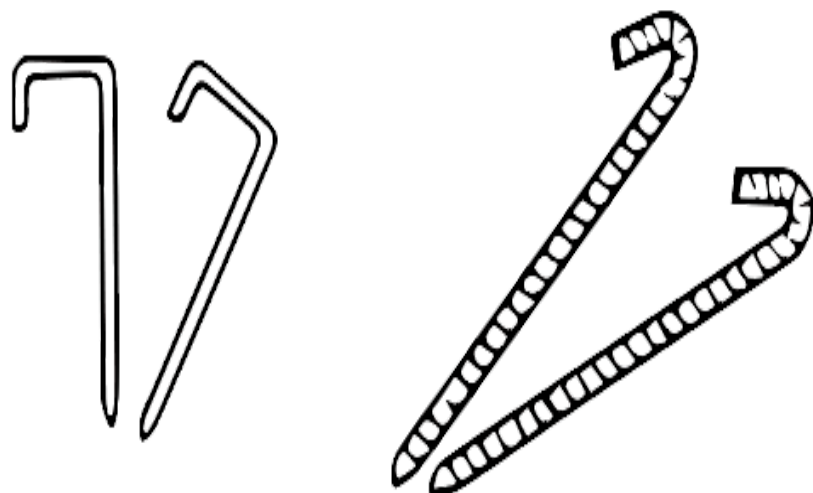

12×230mm Groundsheet pegs
12×260mm Wall pegs
12根底部地钉/12根螺纹钢地钉

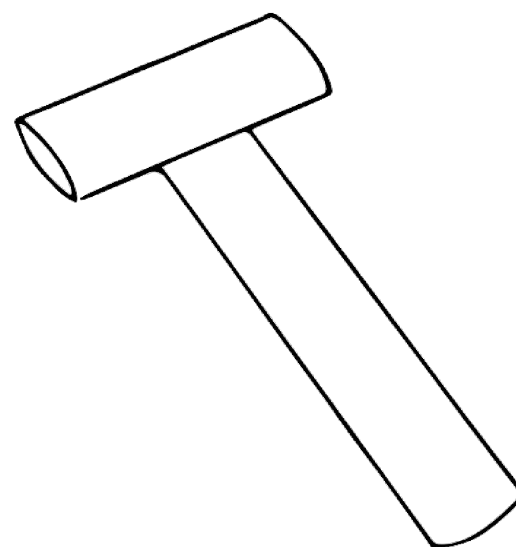


1×Mallet
1× 铁锤

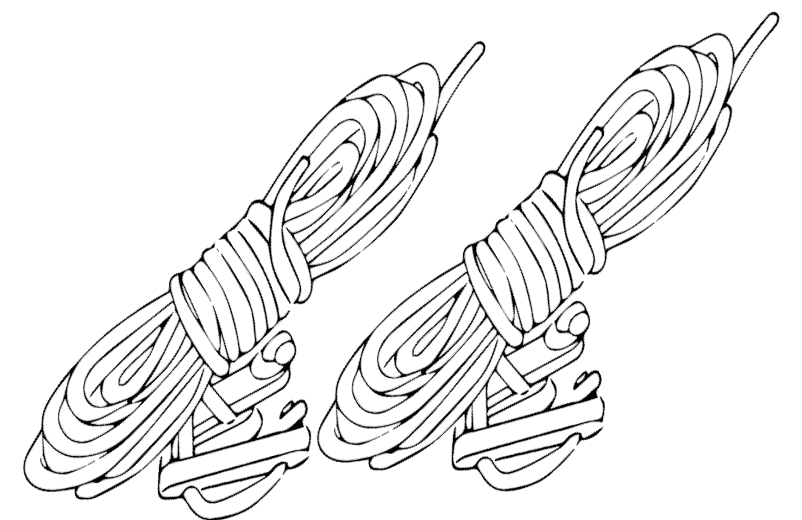


11×250mm Guy rope
1×4m front door guy rope
11根250mm 拉绳/1根4米前门拉绳

Putting up your Bell Tent 如何搭建bell 帐篷

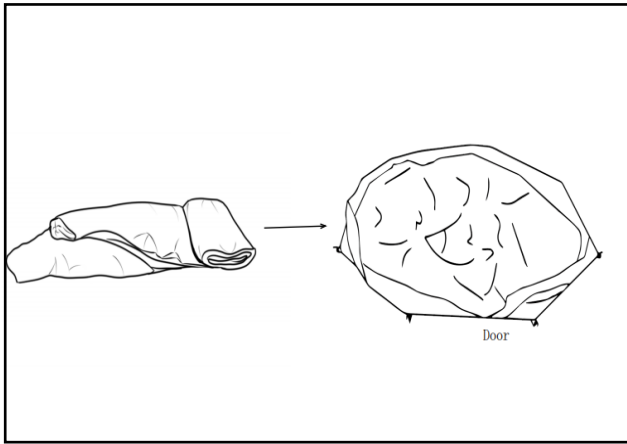


1. Open the tent with groundsheet

1. 打开帐篷并把底部铺在平整的地上

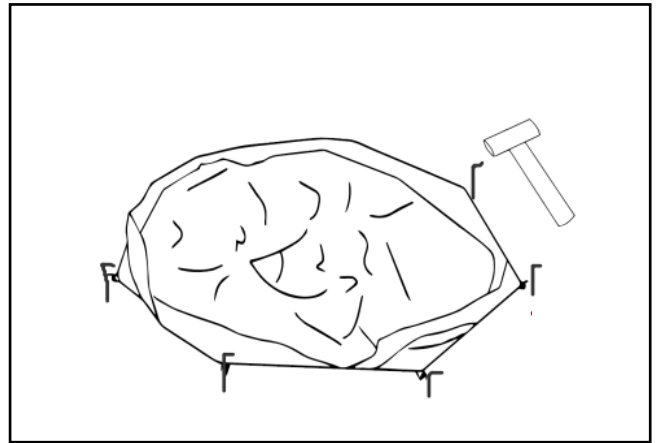


2. The bottom is paved and tightened then driven into the peg.

2. 帐篷找个平地铺好后，拉紧底布，每个角上固定好地钉

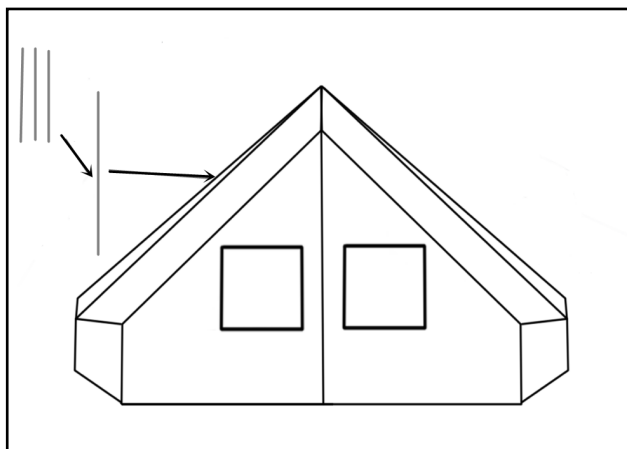


3. Hold up the middle wooden pole

3. 将中心架杆组装好后支撑起帐篷

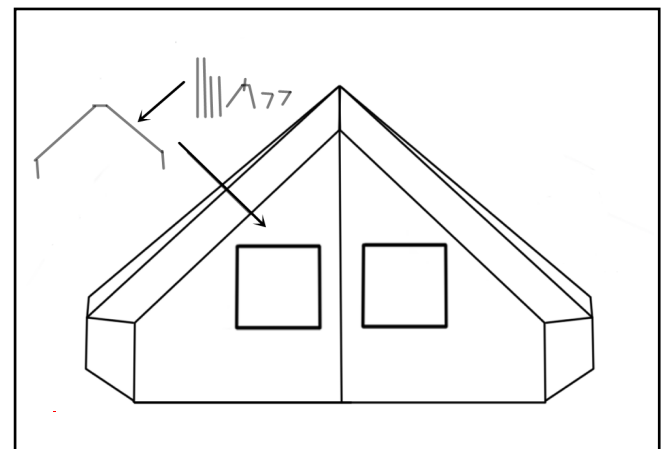


4. Assemble two set of front door steal poles and install into the tent.

4. 组装好前门A型架杆，放置到帐篷内前门的位置，绑好绑带。

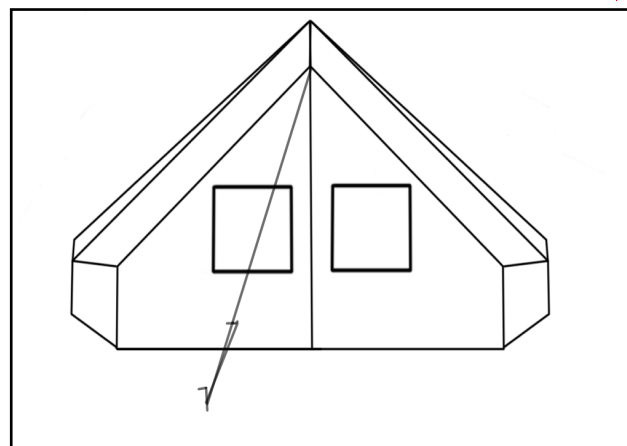

5. Fasten the pull cord on the front door first.

5. 前门架杆安装好后，先将前门的拉绳固定。

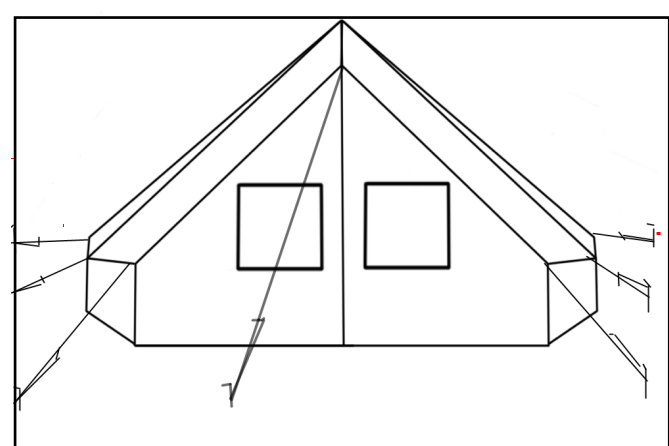

6. After tying the guy ropes at each corner, secure the pegs. Done.

6. 最后将每个角的拉绳绑上，并用地钉固定，调整好松紧，完成！

Maintenance and care

Storage

When storing your canvas tent, make sure it is clean and dry. Store it in a cool, dry place away from direct sunlight, as exposure to UV rays can cause the canvas to degrade over time.

Groundsheet

A groundsheet can help protect your tent from moisture and dirt. Make sure your groundsheet is clean and dry before storing it to prevent mold and mildew growth.

Pegs

Inspect your tent pegs regularly for signs of wear and tear. Replace any bent or damaged pegs to ensure that your tent remains securely anchored to the ground.

Canvas

The canvas material of your tent requires special care. To avoid damage, avoid using harsh chemicals or abrasives when cleaning. Instead, use a soft-bristled brush to remove dirt and debris. If your canvas tent gets wet, allow it to dry completely before storing it to prevent mildew and mold growth.

Cleaning and Reproofing

Over time, the waterproofing and dirt resistance of your canvas tent can deteriorate. You can clean your tent or buy a protect roof cover to restore its protective properties.. When it is not possible to simply brush off the dirt, or wash off with clean water there are several canvas cleaning and re-proofing products which you can use. We have special cleaning machines in Bristol in the UK and Inner Mongolia in

China. If you need any cleaning help ,pls kindly contact with us .WWW.NORLIGHTGLAMPING.COM

Waterproofing

Remember that new canvas tents will need some weathering and when first exposed to rain as the fibres need to adjust and expand. So you may experience damp and sometimes a few leaks inside when first exposed to water, but this only lasts 1-2 exposures so don't panic! It always remedies itself.

Repairs

If your tent is damaged, repair it as soon as possible to prevent further damage. Small tears and holes can be patched using a canvas repair kit, which typically includes adhesive patches and instructions for use. For more extensive damage, consider contacting a professional tent repair [service](#).

By following these maintenance and care tips, you can help ensure that your canvas tent remains in good condition.