


FIRE TABLE

Assembly instructions

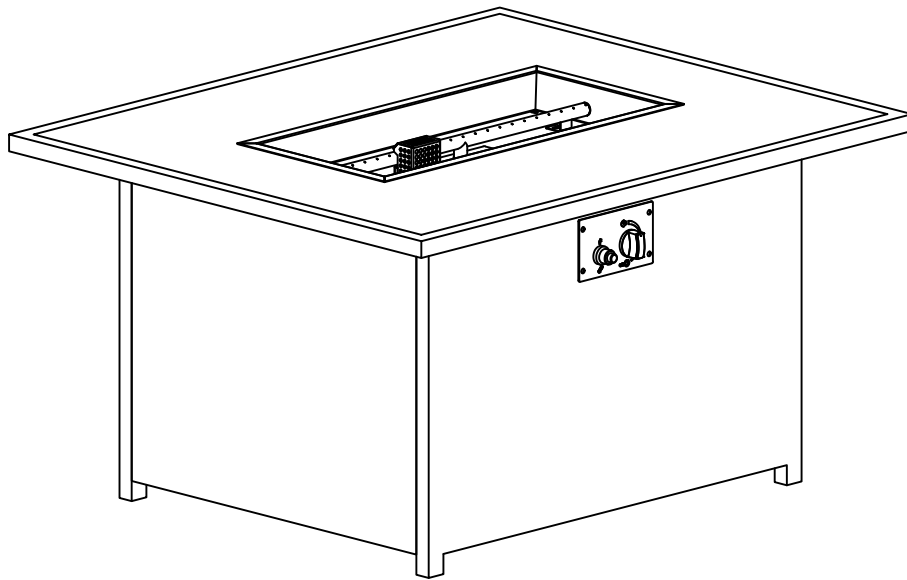

Included in the package (s) : Please use this guide if you require if you require replacement parts.




 

Ref	Visual	Qty
1		1
2		1
3		1
4		2
5		1


Ref	Visual	Qty
6		1
7		1
8		1
9		1
10		1

FIRE TABLE

Assembly instructions

Fixtures and fittings supplied(actual size)


Ref	Dimensions	Visual	Qty
A	1/4x20mm		4
B	1/4x40mm		12
C	Ø16x1mm		16
D	22x66mm		1
E	1/4x10mm		12

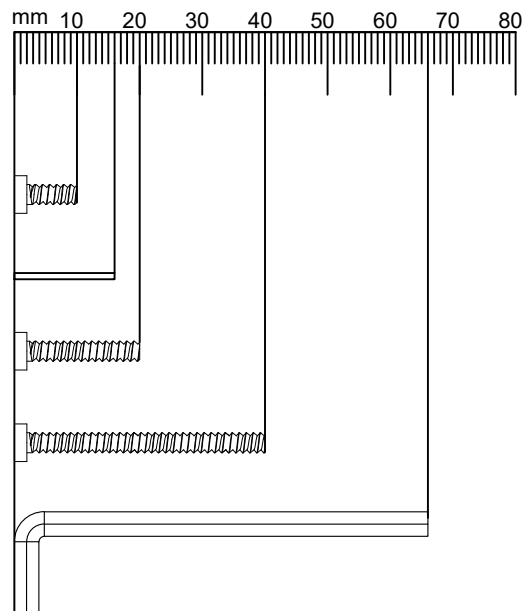

FIRE TABLE

Assembly instructions

1

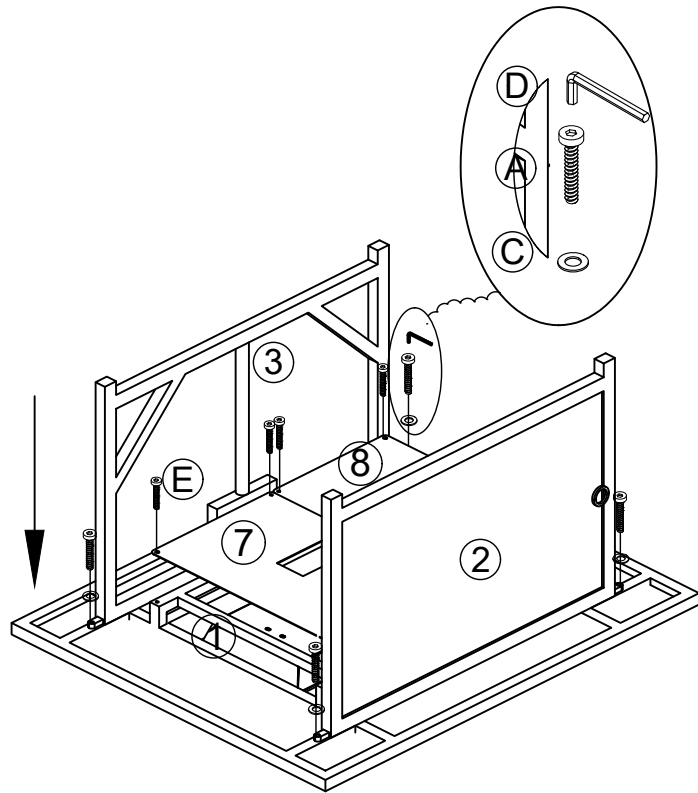

Ax4 1/4x20mm



Cx4 Ø16x1mm




Dx1 22x66mm



Ex8 1/4x10mm



2

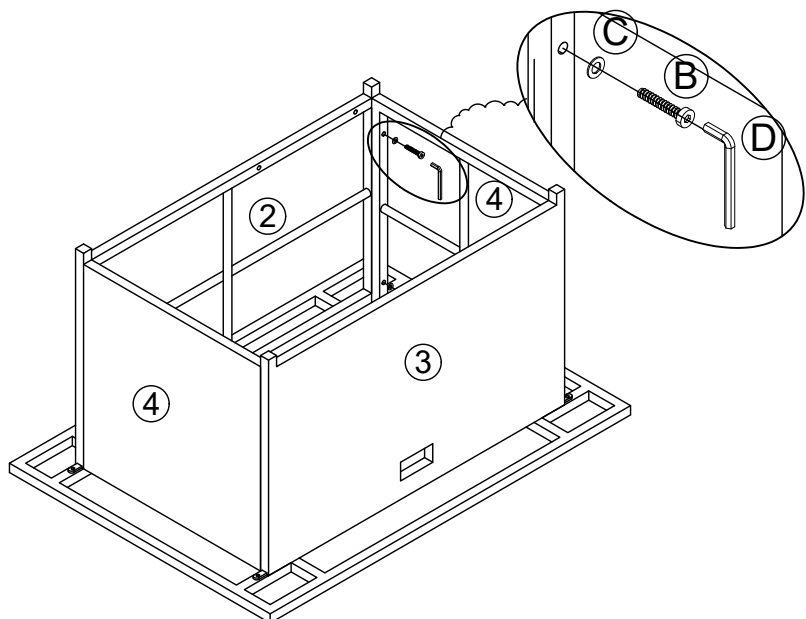

Bx8 1/4x40mm



Cx8 Ø16x1mm




Dx1 22x66mm



FIRE TABLE

Assembly instructions

3

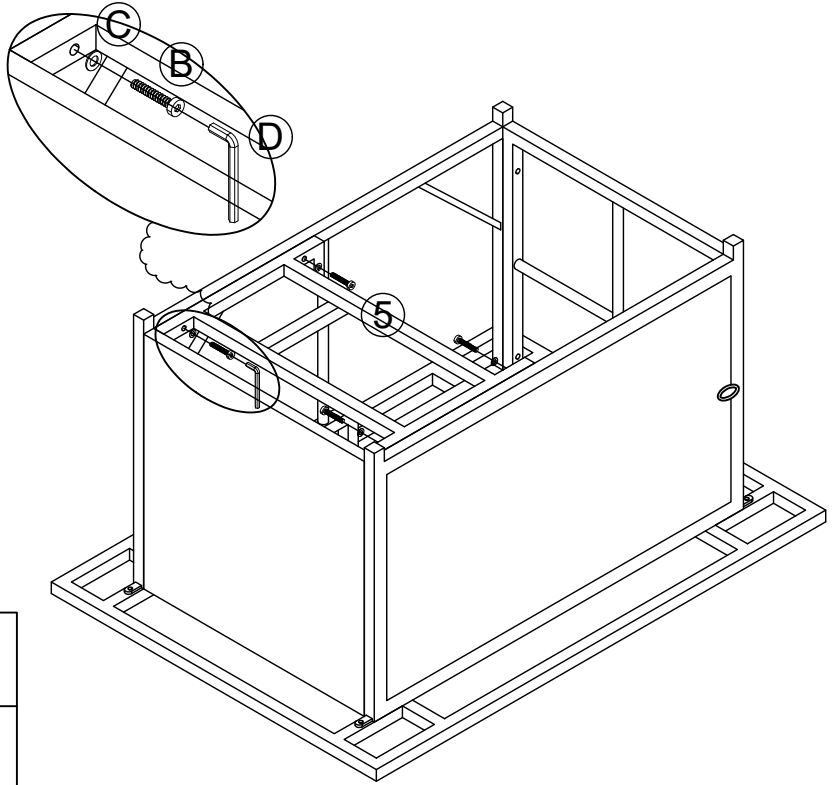

Bx4 1/4x40mm





Cx4 Ø16x1mm



Dx1 22x66mm



4

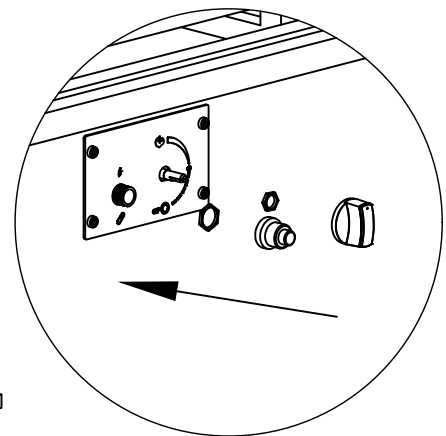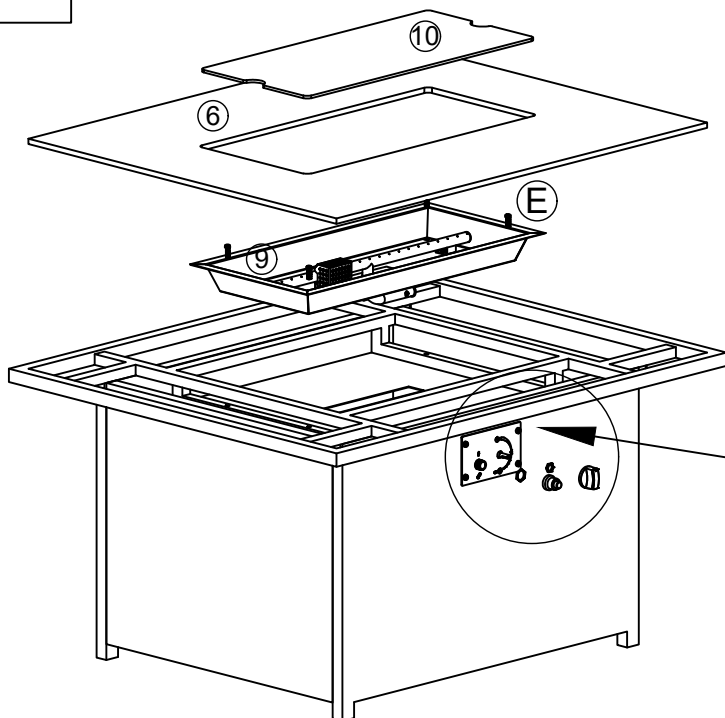

Ex4

1/4x10mm

