

Ecowell™
LULU
QUICK CLEAN

**WET/DRY
VACUUM
& WASH**

SKU#: P05
Model#: SC91

 


5
-
1
Z
-
1

Quick Start Guide

LULU QUICK CLEAN SERIES: P05

Operation




- ▶ Start by pressing .
- ▶ Press MAX/ECO to switch power.
- ▶ Press this trigger to switch the clean water volume.



- ▶ Recline the appliance to a comfy angle to start cleaning. Stand the appliance upright, it will stop working automatically. Press to start again.



 - ▶ Do not recline to protect against water leakage to the motor and to avoid affecting washing effect.




- ▶ Release the clean water tank and add clean water and adequate amount of the specified floor cleaning formula if applicable.



- ▶ When the dirty water tank is full of sewage and reaches the warning line, the appliance stops working. Please empty the dirty water tank.


Charging & Storage

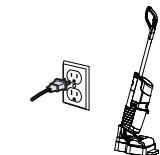

- ▶ Only use Ecowell plug.
- ▶ Full charging time: 4.5 hours.
- ▶ Charge 3 hours every 2 months in case of long-term storage.
- ▶ Store indoors in a dry place.


LULU QUICK CLEAN SERIES: P05

Digital Display

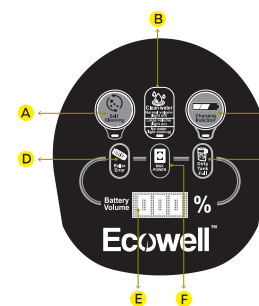

- A. Self-Cleaning
- B. Clean Water Status
- C. Charging Indicator
- D. Roller Error
- E. Battery Level Indicator
- F. Max Power
- G. Dirty Water Tank Full

Self-Cleaning & Self-Dryer

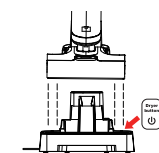

- ▶ Please empty the dirty water tank before starting self-cleaning.
- ▶ Press (1) self-cleaning and (2) self-drying buttons to clean and dry the roller, the cover, and the tunnel automatically.
- ▶ The self-drying process starts automatically after the self-cleaning process.
- ▶ The drying system will operate for 34 minutes to dry the roller and the tunnel.

* The drying system is at the charging base. Remember to press the self-drying on the charging base while starting self-cleaning.
* Please do not wash the base in the water.
* There will be a slight wind sound when the drying system is running, which is normal. Please feel free to use.

Ecowell™
LULU
QUICK CLEAN

LULU QUICK CLEAN SERIES: P05

Notice:

- ▶ Do not use this product near or on the surface of flammable and explosive objects.
- ▶ Do not use this product near a working fireplace or heater.
- ▶ Do not use on high-temperature substances, ultra-fine substances, chemical materials, etc.
- ▶ Do not use this appliance to absorb oil, wine, etc.
- ▶ Do not use this appliance to pick up sharp objects, such as glass shards.



2-YEAR WARRANTY



MAINTENANCE TIPS



EXCLUSIVE DEALS

TO REDUCE THE RISK OF INJURY,
USER MUST READ INSTRUCTION MANUAL
BEFORE OPERATING PRODUCT.

PLEASE DO NOT RETURN TO STORE.
ALTON IS HERE TO HELP.

Helpline:
1-888-899-0146

Alton Industry Ltd. Group
Manufactured by: Alton Industry Ltd.
Group
643 Innovation Dr., West Chicago, IL
60185

For more information,
please visit:
www.ecowell.com