


INSTALLATION AND CARE GUIDE

WIDESPREAD LAVATORY FAUCET

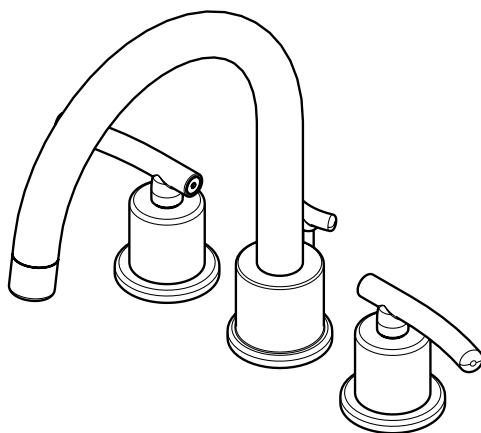

Questions, problems, missing parts?

Before returning to the store,
call Glacier Bay Customer Service
8 a.m.-6 p.m., EST, Monday-Friday

1-855-HD-GLACIER

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Glacier Bay through the purchase of this faucet. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Glacier Bay!

Table of Contents

Important Information	2	Installation	4
Warranty	2	Operation.....	9
Pre-Installation	2	Care and Cleaning	9
Planning Installation	2	Troubleshooting	9
Tools and Hardware Required	3	Service Parts.....	10
Package Contents	3		

Important Information

- Observe all local plumbing and building codes.
- Cover the sink drain to avoid losing any parts.
- Review the care and cleaning section included in this guide.
- When installing the flexible hose, there should be no torsion or deformation; DO NOT fold into a V or L shape; DO NOT use if there are any cracks or deformations.

Warranty

LIMITED LIFETIME WARRANTY

Glacier Bay products are manufactured with superior quality standards and workmanship and are backed by our limited lifetime warranty. Glacier Bay products are warranted to the original consumer purchaser to be free of defects in materials or workmanship. We will replace FREE OF CHARGE any product or parts that proves defective. Simply, return the product / part to any of The Home Depot retail locations or call 1-855-HD Glacier (1-855-434-5224) to receive the replacement item. Proof of purchase (original sales receipt) from the original consumer purchaser must be made available for all Glacier Bay warranty claims.

This warranty excludes incidental/inconsequential damages and failures due to misuse, abuse or normal wear and tear. This warranty excludes all industrial, commercial & business usage, whose purchasers are hereby, extended a five year limited warranty from the date of purchase, with all other terms of this warranty applying except the duration of warranty.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state and province to province. Please see a store or contact 1-855-HD Glacier for more details.

Pre-Installation

PLANNING INSTALLATION

Before you begin to install this product, ensure that all parts are present. Compare parts with the package contents list. If any part is missing or damaged, do not attempt to install the product. Contact customer service for replacement parts.

TOOLS REQUIRED



Adjustable
Wrench



Phillips
Screwdriver



 
Safety Goggles



Silicone
Sealant





(2) Water
Supply
Lines



Channel Lock
Pliers

Pre-Installation (continued)

PACKAGE CONTENTS

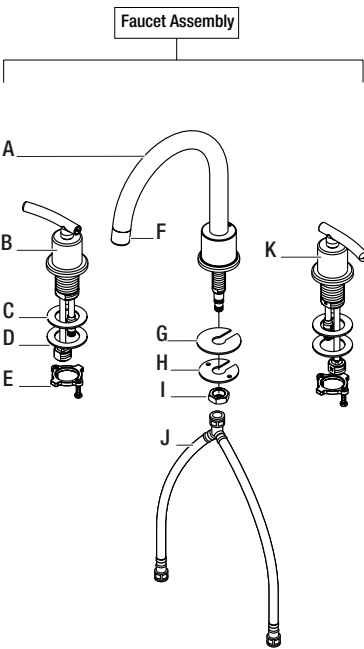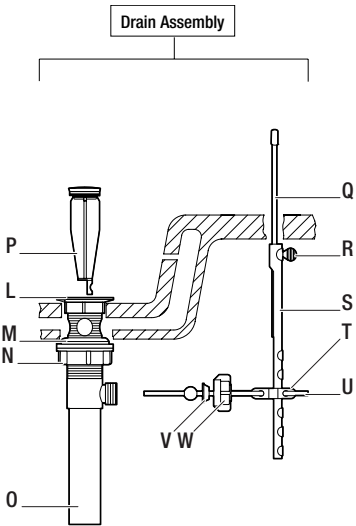

Part	Description	Quantity
A	Faucet body	1
B	Hot faucet handle	1
C	Rubber washer	2
D	Metal washer	2
E	Guide washer	2
F	Aerator	1
G	Rubber spacer	1
H	Metal spacer	1
I	Lock nut	1
J	Quick connecting hose	1
K	Cold faucet handle	1
L	Drain flange (Preassembled to Drain body (O))	1

Part	Description	Quantity
M	Rubber washer (Preassembled to Drain body (O))	1
N	Lock nut (Preassembled to Drain body (O))	1
O	Drain body	1
P	Plunger (Preassembled to Drain body (O))	1
Q	Lift rod	1
R	Thumb screw (Preassembled to Lift rod strap (S))	1
S	Lift rod strap	1
T	Spring clip (Preassembled to Ball rod (U))	1
U	Ball rod	1
V	Bushing (Preassembled to Ball rod (U))	1
W	Ball nut (Preassembled to Ball rod (U))	1


Installation

1 Turning off the water supply



CAUTION : Always turn off the water supply before removing an existing faucet or replacing any part of a faucet. Open the faucet handle to relieve water pressure and ensure that the water is completely shut off.

- Shut off the water supply.
- If necessary, remove the old faucet and clean off the installation surface.


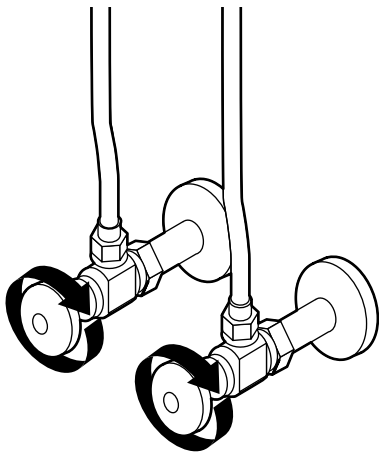


2 Installing the faucet body

- Remove the preassembled lock nut (I), metal spacer (H), and rubber spacer (G) from the shank of the faucet body (A).
- Insert the threaded end of the faucet body (A) into the center installation hole on the sink.
- Attach the faucet body (A) to the sink by securing the rubber spacer (G), metal spacer (H), and lock nut (I) on the threaded end of the faucet body (A) underneath the sink.






NOTE: If the sink is uneven, use silicone under the putty plate.

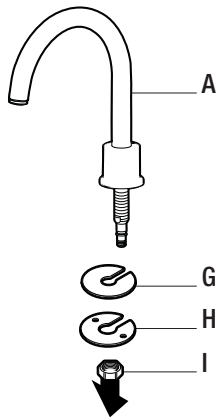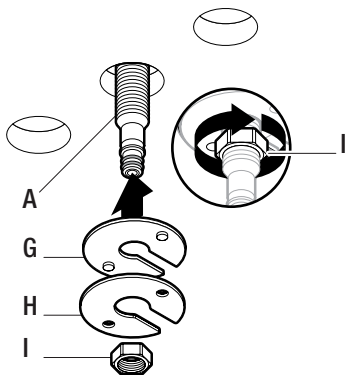



3 Installing the faucet handles

- Remove the preassembled guide washers (E), metal washers (D), and rubber washers (C) from the hot and cold faucet handles (B and K).
- Loosen the screws on the guide washers (E) until the ends of the screws are flush with the face of the guide washers (E).
- Insert the hot and cold faucet handles (B and K) into the installation holes on the sink.
- Attach the faucet handles (B and K) underneath the sink using the rubber washers (C), metal washers (D), and guide washers (E). Securely tighten the screws on the guide washers (E).

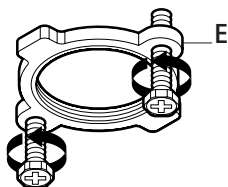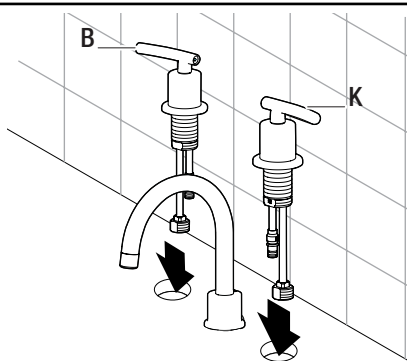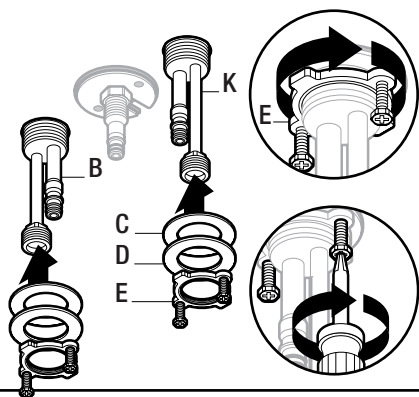




4 Installing the drain body

- Remove the drain flange (L) from the drain body (O).
- Apply silicone caulk (not included) under the drain flange (L) and place the drain flange (L) over the drain hole in the sink.
- From underneath the sink, screw the drain body (O) onto the drain flange (L). Ensure that the opening (1) for the ball rod on the drain body (O) faces towards the rear of the sink.
- Tighten the rubber washer (M) and lock nut (N) on the drain body (O).

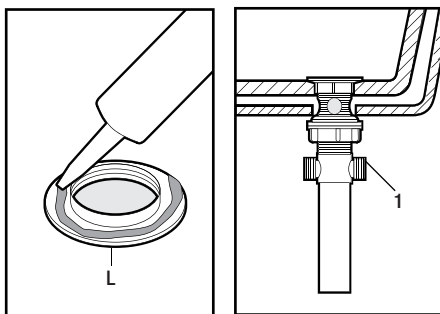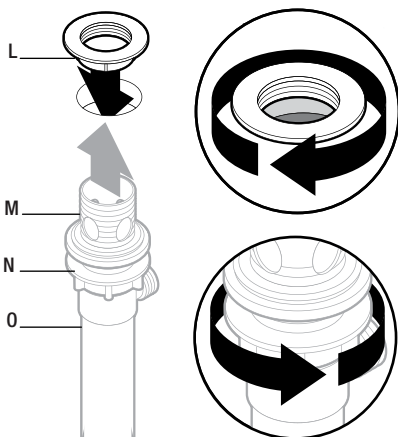



5 Installing the plunger and ball rod

- Insert the plunger (P) into the drain hole in the sink.
- Remove the lift rod strap (S) and spring clip (T) from the ball rod (U).
- Install the ball rod (U) into the drain body (O) and through the hole of the plunger (P).
- Push the bushing (V) and ball nut (W) against the hole in the drain body (O) and tighten the ball nut (W) onto the threaded end.

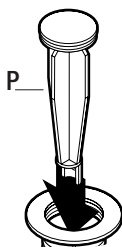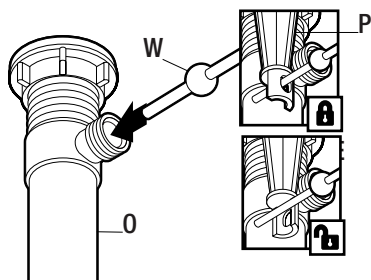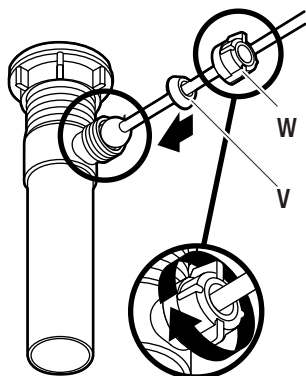




6 Installing the lift rod

- Insert the lift rod (Q) through the faucet (A) and down into the strap (S). Tighten the thumb screw (R).

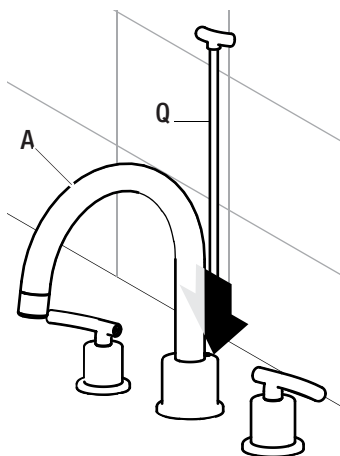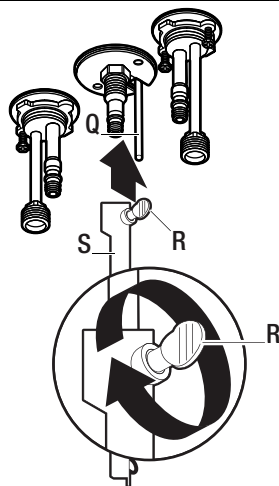


7 Attaching the ball rod and strap

- Adjust the ball rod (U) to the down position.
- Attach the ball rod (U) to the strap (S) using the clip (T).

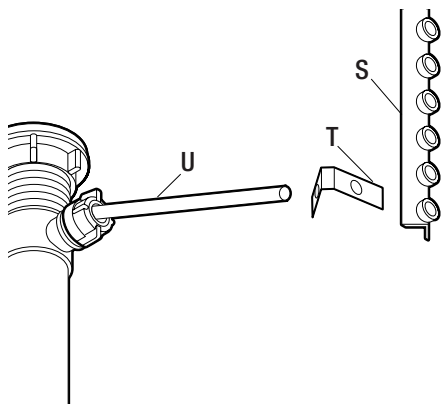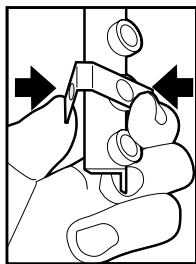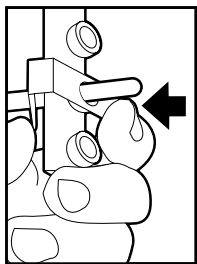


8 Adjusting the lift rod

- Loosen the thumb screw (R) on the lift rod strap (S).
- Adjust the lift rod (Q) to the down position and re-tighten the thumb screw (R).

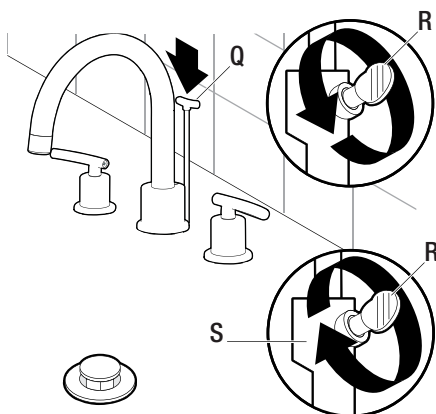


9 Attaching the connecting hose

- Remove the cap from the quick connect tubes.
- Attach the quick connecting hose (J) connections to the hot faucet handle (B) connection, faucet body (A) connection, and cold faucet handle (K) connection. Push until the connections snap together.

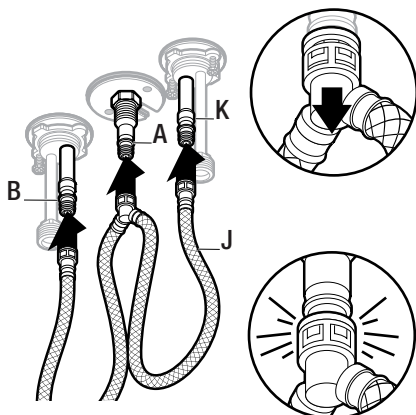


10 Connecting the supply lines

- Attach the water supply lines (not included) to the threaded ends of the faucet. Do not over tighten.

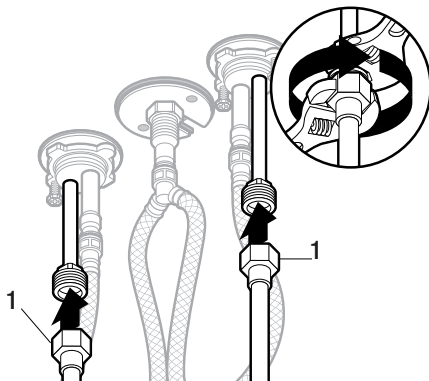

11 Checking for leaks

- Turn on the water supply to the faucet.
- Remove the aerator (F) from the faucet body (A).
- Turn the hot and cold faucet handles (B and K) and allow the hot and cold water to run for at least 1 minute to flush out any debris and identify any possible leaks.
- When finished, turn the water off and replace the aerator (F).

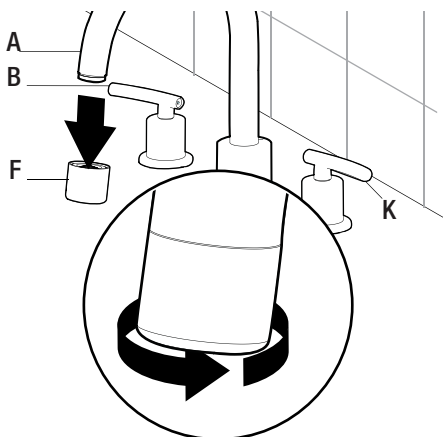


Operation

1 Removing the quick connecting hose

**CAUTION:** Use caution when removing the quick connecting hose connections in order to prevent cutting your hands.

- ☐ Push the quick connecting hose (I) housing up.
- ☐ Hold the clip and housing together and pull down.

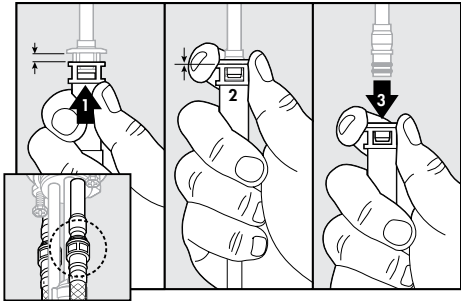

Care and Cleaning

This faucet is designed for years of trouble-free performance. Keep it looking new by doing the following:


- ☐ Clean periodically with a soft cloth.
- ☐ Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

Troubleshooting

Problem	Possible Cause	Solution
There are leaks underneath the handle.	The retainer nut has come loose and the O-ring on the cartridge is dirty or damaged.	<ul style="list-style-type: none">☐ Tighten the retainer nut.☐ Clear or replace the O-ring.
The aerator leaks or has an inconsistent water flow pattern.	The aerator is dirty or mis-fitted.	<ul style="list-style-type: none">☐ Remove the aerator and check for debris in the aerator screens.☐ Confirm that the rubber washer is properly installed.
The spout leaks.	The retainer nut is loose.	<ul style="list-style-type: none">☐ Tighten the retainer nut.

Service Parts

MODEL TYPE

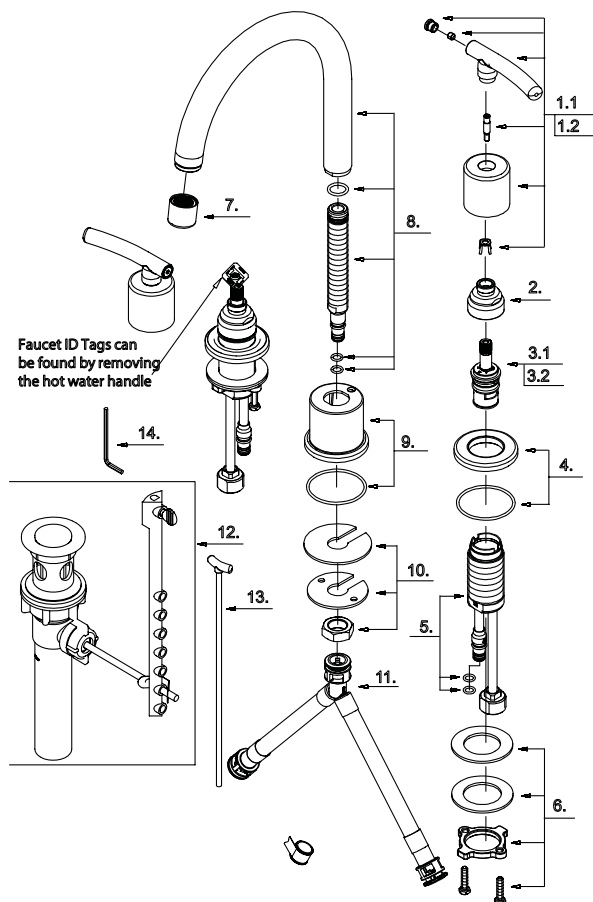

Part	Description	Part No.
1.1	Metal handle assembly (cold)	A66E467C
1.2	Metal handle assembly (hot)	A66E467H
2	Retainer nut	A016026
3.1	Ceramic disc cartridge (cold)	A507072WC
3.2	Ceramic disc cartridge (hot)	A507071W
4	Handle trim ring	A66F149
5	Handle valve body	A661002W
6	Mounting hardware assembly	A663951

Part	Description	Part No.
7	Aerator	A500107N-50
8	Spout assembly	A666335W
9	Spout trim ring	A66F148
10	Mounting hardware assembly	A66D455
11	Supply hose	A135141N
12	Pop-up assembly	A556012L
13	Lift rod	A025577
14	Hex Wrench (H2.5 * 19 mm L * 53 mm L)	A031000NI



Questions, problems, missing parts?

Before returning to the store,
call Glacier Bay Customer Service
8 a.m.-6 p.m., EST, Monday-Friday

1-855-HD-GLACIER

HOMEDEPOT.COM