 


# SUGIFT

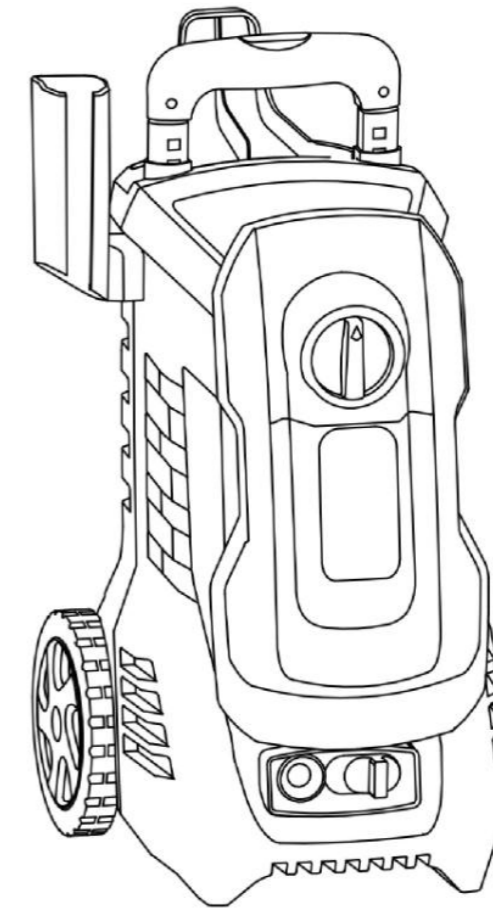

## WARRANTY

After-sales Service Letter of Commitment:

All products purchased in our company are guaranteed to keep in good repair for 3 months. If quality problems happen in guarantee period, our company will maintain for free or provide replacement. After-sales service isn't restricted by time and hear feedback idea of users and deal with them in time. If you are caught in some problems when using our products, welcome to contact us at any time.

After-sales mailbox: [Skonservice@outlook.com](mailto:Skonservice@outlook.com)



Read the instructions before using the machine



Appropriate ear protection has to be used when you use the cleaner



Wear safety glasses when you use the cleaner



Machine not suitable for connection to the potable water mains

Ningbo Yinzhou Jiasheng Pump Motor Factory  
Fanshidu Village, Jiangshan Town, Yinzhou District, Ningbo City

Made In China



JWP-201

## GENERAL SAFETY RULES

- WARNING: This machine has been designed for use with the cleaning agent supplied or recommended by the manufacturer. The use of other cleaning agents or Chemicals may adversely affect the safety of the machine.
- WARNING: Do not use the machine within range of persons unless they wear protective clothing.
- WARNING: Risk of explosion-Do not spray flammable liquids.
- WARNING: High pressure cleaners shall not be used by children or untrained personnel.
- WARNING: Water that has flown through back flow preventers is considered to be non-potable .
- WARNING: Removing the plug from the socket-outlet during cleaning or maintenance and when replacing parts or converting the machine to another function:
- WARNING: Inadequate extension cords can be dangerous.
- WARNING: Ensure that any exhaust emissions are not in the vicinity of air intakes.
- WARNING: Do not use the appliance without reading the instruction sheet.
- WARNING: The electrical supply connection shall be made by a qualified person and comply with IEC 60364-1. The electric supply to this appliance should include either a residual current device that will interrupt the supply if the leakage current to earth exceeds 30 mA for 30 ms or a device that will prove the earth circuit.
- WARNING: Keep operating area clear of all persons
- WARNING: High pressure hose, fittings and couplings are important for the safety of the appliance, Use only hoses, fittings and couplings recommended by the manufacturer.
- WARNING: Do not use the appliance if a supply cord or important parts of the appliance are damaged. e.g. safety devices, high pressure hose, trigger gun.
- WARNING: If an extension cord is used, the plug and socket must be of watertight construction.
- WARNING: Improper extension cords can be dangerous.
- WARNING: High pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, live electrical equipment or the appliance itself.
- WARNING: Do not direct the jet against yourself or others in order to clean clothes or foot-wear.
- WARNING: Disconnect from the electrical power supply before carrying out user maintenance.
- WARNING: To ensure appliance safety, use only original spare parts from the manufacturer or approved by the manufacturer.
- WARNING: Do not leave the appliance unattended while the machine is running.
- WARNING: Do not use cleaning agents or chemicals in the appliance.
- WARNING: Turn off the appliance if it is in the event of accident (e.g. contact with detergents: rinse With an abundance of clean water ) or breakdown to prevent unsafe situations.
- WARNING: When the appliance is moving and installing, the appliance must be in flat.

## ADDITIONAL SAFETY INSTRUCTIONS

In order to safely use the cleaner, make sure that you have read all of these instructions and checked the machine before operation. Have a try before the official use.

The machine, hose and plug must be checked before the operation. Defective parts should be repaired by a specialist.

Do not direct the jet at the machine, socket and wire-connection.

Do not direct the jet at person and animals.

Check the hose connection before operation, the leaky and defective parts shall be repaired or replaced immediately.

Do not touch the electrical plug or any wall socket with wet hands.

Use the handle grip to transport the machine, it's forbidden to drag the power cord to move the appliance.

When you unplug, grasp the plug not the cord.

Only the power cord which with rubber insulation enclosure or protection enclosure can be use.

Keep the plug and hose in dry place.

To prevent the maximum operating pressure, the outlet hose should be at least 3M long.

Do not use the pressure cleaner in inflammable environment.

Take care of the kickback force and the sudden torque on the spray assembly when opening the trigger gun. Always use two hands to grip the gun firmly before pressing the trigger.

Only press the switch after the high pressure hose is tightly fixed.

Always wear protective clothing, glove and safety glasses. It's forbidden to use the machine bare-footed or when wearing a sandal.

By operation keep the hand away from the water jet and hose.

Sometimes the reflected water is also dangerous.

Do not direct the water to fire or hot equipment. Hot particles and steam are dangerous.

Do not use the pressure washer with inflammable or toxic liquids, corrosive detergents, or any dangerous products.

Use only hand to squeeze the trigger, do not jam the trigger in the ON position.

Before disconnect the high pressure hose, turn off the machine first, then squeeze the trigger until there is no more pressure in the system.

Do not bend, twist or fold the hose.

Use only original spar parts supplied from manufacturer.

A fluctuating or high water pressure shows signal of defect or accumulation of the calcium in the hose. In this case turn off the machine immediately.

Do not run the cleaner without water. This will cause damage to it.

Before starting the machine, fully open the water supply tap. Be careful not to bend the hose.

When the machine hose or tube freeze in winter, do not use it. Before storing the water must be drained from the machine. Always store the pressure washer in a secure dry and frost protected place

Do not use the machine in a dirty place.

Put the machine on a flat surface.

The sea water is not suitable for using in this machine.

The appliance is not fit for long time industrial use.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

 
Children should be supervised to ensure that they do not play with the appliance.

The function of Safety valve: when the pressure of the pump exceeds the Preset valve, returns the excess fluid to the inlet system.

The function of pressure switch: When turn off a gun, pressure switch on the action, cut off the power supply for protection operations.

## ACCESSORY

1. Metal lance	2. Gun stock
3. handlebars	4. Metal nozzles
5. Cable stock	6. Needle
7. High pressure pipe hook	8. Metal inlet filter
9. Outlet	10. Inlet
11. Soap bottle	12. Main switch
13. Spary gun stock	14. Accessories stock

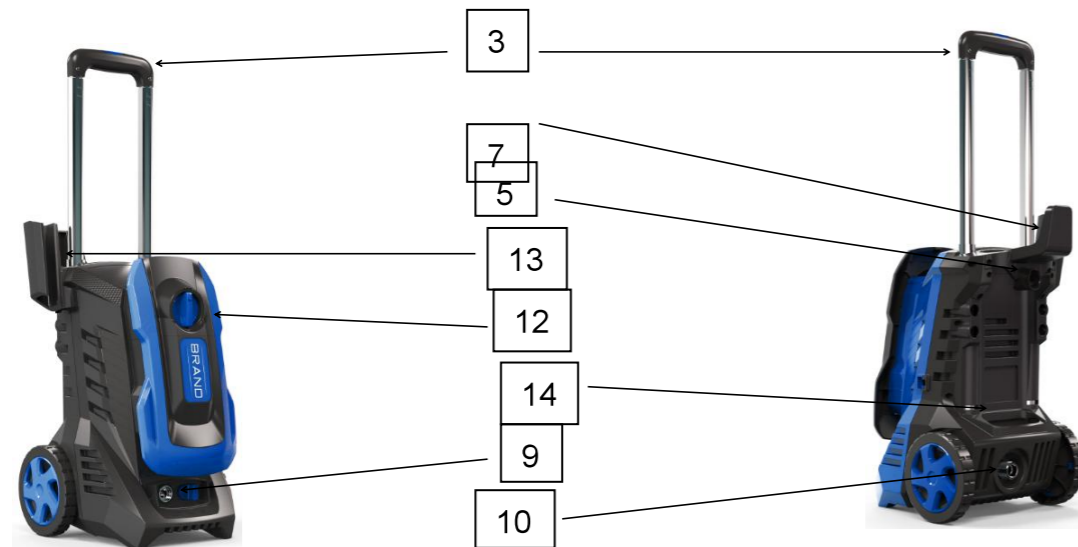

Water leaking from the pump.	3 drops water every minute is permissible, but if more water leaked, may be the Sealing is worn out.	1. contact the after-sales service
The motor stops suddenly.	1. The pressure control worked. 2. The thermal protection may have switched the motor off to prevent overheating.	1. Check if the outlet nozzle is blocked. Clean the nozzle 2. Turn off the cleaner, Leave the machine for a few minutes to cool down. 3. contact the after-sales service

## INSPECTION & MAINTENANCE

For safety use, make sure a three-month clean the appliance .Before working, make sure inspect the filter and the nozzle, make sure there is no impurity. After working, make sure there is no water in the pump and the hose.

If the product needs to be repaired in the guarantee period, please return the product to the shop. You need to provide the certificate of purchase in order to repair or get the substitute.

Before Packaging, The appliance should be cleaned, then use closed packaging, packaging should be firm. Store the appliance in dry.

For transportation safety, the appliance should comply with ISTA .



### Meaning of crossed –out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

## USER MAINTENANCE AND REPAIR

Disconnect from the electrical power supply before carrying out user maintenance.

Turn off the water supply at the tap and press the trigger to discharge the pressure.

Lubricate the fixing periodically using the lubrication oil.

When the water pressure is not consistent or too high, it shows the signal of defect hose or accumulation of the Calcium in the nozzle.

Turn off the machine immediately.

Use the nozzle cleaner to clean the hose and the water inlet filter.

Change the defective filter.

Make sure that the machine is clean and clean the components when necessary.

Follow the operation-instructions for the different parts. Pluggable ring-nuts are used to connect the gun, hose and other parts.

The seals of the ring-nut connections shall not be damaged

Turn the detergent tank and fasten it to the foam nozzle.

Connect the foam nozzle with the jet gun.

Turn on the machine. input the cleaning agent by a proportion of 1%. Warning: Use only the cleaning agent supplied by the manufacturer or their after-sales service.

Keep the appliance safe and store them carefully in a secure dry place. Always store the machine out of the reach of children.

Avoid storing the washer in temperatures below frost point.

Cut off the power if the appliance malfunctions.

## PROBLEM AND SOLUTION

Warning! Disconnect from the electrical power supply before carrying out user maintenance.

If the mains cable is damaged it must be replaced by the manufacturer, or its service agent or similarly qualified person to avoid a hazard.

### Possible problem and solution

Problem	Probable cause	Possible solution
The machine will not start working.	<ol style="list-style-type: none"> <li>no power supply</li> <li>faulty power supply.</li> <li>locking ring of the pump too tight.</li> </ol>	<ol style="list-style-type: none"> <li>contact the after-sales service</li> </ol>
No enough water coming out, uneven working pressure	<ol style="list-style-type: none"> <li>the filter is blocked</li> <li>inlet connection is not good, air in inlet pipe.</li> <li>the valve is blocked</li> <li>the outlet nozzle is not smooth.</li> </ol>	<ol style="list-style-type: none"> <li>Clean the filter.</li> <li>check the connection, tighten the seal. Check whether the hose is clogged or whether there is no enough inlet water.</li> <li>clean the valve and install it again</li> <li>contact the after-sales service</li> </ol>

## TECHNICAL DATA

Rated pressure	2600PSI
Max.pressure	3300PSI
Power input	1800W
Rated flow	2.0GPM
Rated voltage	110V-120V
Rated frequency	60Hz
Degree of Protection	IPX5
Protection class	II
Sound power level	98 dB(A)
Sound pressure level	80 ±3 dB(A)
Water temperature Max.	40°C
Inlet (max.)	145PSI

## ASSEMBLY

### High pressure hose connection

Connect the pressure hose to the machine's outlet, make sure it is connected firmly. See picture 1



Outlet

Picture 1

### Gun and high pressure hose connection

Connect the gun lance to the gun stock. Turn the gun lance counter clock wise until it locked in position. Connect the hose to the thread of gun stock by spanner. Check that the seal ring is properly seated. Press the 4-color nozzle (0" 15" 25" 40") into the gun lance. This pressure cleaner is equipped with a gun trigger safety lock. When not using the pressure cleaner, use the safety lock to keep from accidentally engaging the high pressure spray. See **Picture 2**




Picture 2

### Soap bottle connection

The detergent nozzle will allow you to apply many forms of liquid detergent onto the work surface. Fill the container with detergent only. Do not put any water into the container. The pressure cleaner will mix water and detergent automatically. When finish applying the detergent to the work surface, insert the adjustable spray nozzle, and remove the detergent by using the high pressure spray.

Connect the soap bottle to the gun stock. Turn the soap bottle counter clock wise until it locked in position. See **Picture 3**

 Insert the soap pot horizontally into the rack behind the washer. Turn the soap bottle counter clock wise until it locked in position. See **Picture 4**

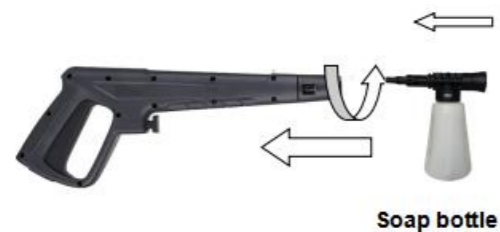


Picture 3



Picture 4

### Inlet hose connection

 1. Connecting water hose to inlet, make sure it is connected firmly.
2. Turn on the tap, make sure the inlet water pressure keeps between 1.45PSI and 14.5PSI.
3. Pull the trigger till all the air is pushed out of machine and water flows from the gun. It means now pump is full of water.
4. Then you can turn on the main switch to start the machine. See **picture5**

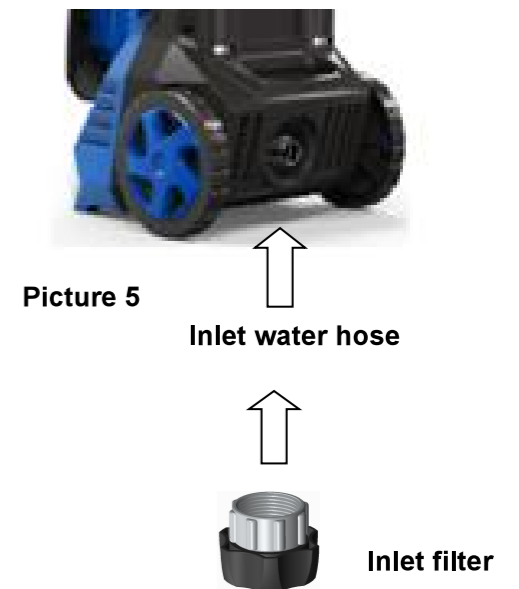

## OPERATION

THIS UNIT IS INTENDED TO BE USED WITH COLD WATER ONLY! DO NOT USE HOT WATER IN THIS PRESSURE CLEANER!

### Starting Up

After connecting the pressure cleaner to your cold water supply, proceed as follows:

- Make sure that the ON/OFF switch is in the OFF position.
- Connect the garden hose to the inlet fitting.
- Insert the adjustable spray nozzle into the gun.
- Install the handle to the machine main body.
- Connect the high pressure hose to the high pressure outlet fitting .
- Connect the high pressure hose to the gun.
- Connect the gun to the specified detergent nozzle.
- Open the water supply valve completely
- Before turning the unit on, press the gun trigger to bleed all the remaining air out of the pump and hose.
- Start the pressure cleaner by turning the on/off switch to the on position and squeeze the trigger.

**REMINDER:** Motor does not run continuously, only when the trigger is squeezed.

**WARNING - RISK OF INJECTION!** Unit will start spraying when trigger is squeezed. When turning the unit off after use, high pressure still exists inside the hose and unit. Point the gun in a safe direction and discharge the excess pressure. **NEVER** direct the high pressure water stream at people or animals.