

dust bowl release button **3** on the handle and remove the dust bowl by pulling the dust bowl away from the main housing.

- Remove the filter assembly **4** by pulling it out of the dust bowl.
- Twist counterclockwise and pull the filter cap **21** to separate it from the filter **20**.

Install Filter

- Attach the filter cap onto the filter and rotate it clockwise to lock it firmly into position.
- Push the filter assembly into the dust bowl.
- Install the dust bowl onto the main housing and lock it firmly into position.

Cleaning

IMPORTANT: Maximum dust collection will only be obtained with a clean filter and an empty dust bowl. If dust begins to fall back out of the product after it is switched off, this indicates that the bowl is full and requires emptying.

- Once the filter is removed from the dust bowl, shake off or lightly brush any dust from the filter.
- Empty any dust from the dust bowl **2** into a trash bin and wash if necessary.
- Rinse out the dust bowl with warm soapy water. Ensure that the dust bowl is completely dry before using.
- Wash the filters regularly using warm, soapy water and ensure that it is completely dry before using again. The cleaner the filter is, the better the product will perform.
- It is very important that the filters are completely dry and correctly in position before use.
- Ensure the filters are completely dry for 24 hours before refitting.

Replacement HEPA filter: DCV5011H

Do not use damaged filters. Replace any damaged filters immediately.

Accessories



WARNING: Since accessories, other than those offered by DEWALT, have not been tested with this product, use of such accessories with this product could be hazardous. To reduce the risk of injury, only DEWALT recommended accessories should be used with this product.

Recommended accessories for use with your product are available at extra cost from your local dealer or authorized service center. If you need assistance in locating any accessory, please contact DEWALT call or visit our website:

www.dewalt.com.

Repairs

The charger and batteries are not serviceable. There are no serviceable parts inside the charger or battery pack.



WARNING: To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustment (including brush inspection and replacement, when applicable) should be performed by a DEWALT factory service center or a DEWALT authorized service center. Always use identical replacement parts.

Register Online

Thank you for your purchase. Register your product now for:

- WARRANTY SERVICE:** Registering your product will help you obtain more efficient warranty service in case there is a problem with your product.
- CONFIRMATION OF OWNERSHIP:** In case of an insurance loss, such as fire, flood or theft, your registration of ownership will serve as your proof of purchase.
- FOR YOUR SAFETY:** Registering your product will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act.
- Register online at www.dewalt.com.

Three Year Limited Warranty

DEWALT will repair or replace, without charge, any defects due to faulty materials or workmanship for three years from the date of purchase (two years for batteries). This warranty does not cover part failure due to normal wear or tool abuse. For further detail of warranty coverage and warranty repair information, visit www.dewalt.com or call 1-800-4-DEWALT (1-800-433-9258). This warranty does not apply to accessories or damage caused where repairs have been made or attempted by others. THIS LIMITED WARRANTY IS GIVEN IN LIEU OF ALL OTHERS, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND EXCLUDES ALL INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary in certain states or provinces.

In addition to the warranty, DEWALT tools are covered by our:

1 YEAR FREE SERVICE

DEWALT will maintain the tool and replace worn parts caused by normal use, for free, any time during the first after purchase.

2 YEARS FREE SERVICE ON

DEWALT BATTERY PACKS

DC9071, DC9091, DC9096, DC9182, DC9280, DC9360, DCB120, DCB122, DCB124, DCB127, DCB201, DCB203BT, DCB207, DCB361

3 YEARS FREE SERVICE ON DEWALT BATTERY PACKS

DCB200, DCB203, DCB204, DCB204BT, DCB205, DCB205BT, DCB206, DCB208, DCB230, DCB240, DCB606, DCB609, DCB612, DCB615

NOTE: Battery warranty voided if the battery pack is tampered with in any way. DEWALT is not responsible for any injury caused by tampering and may prosecute warranty fraud to the fullest extent permitted by law.

90 DAY MONEY BACK GUARANTEE

If you are not completely satisfied with the performance of your DEWALT Power Tool or Nailer for any reason, you can return it within 90 days from the date of purchase with a receipt for a full refund – no questions asked.

LATIN AMERICA: This warranty does not apply to products sold in Latin America. For products sold in Latin America, see country specific warranty information contained in the packaging, call the local company or see website for warranty information.

FREE WARNING LABEL REPLACEMENT: If your warning labels become illegible or are missing, call 1-800-4-DEWALT (1-800-433-9258) for a free replacement.

Specifications

Max CFM:	46
Air Watts:	65W with 5.0Ah DCB205 battery pack (sold separately)
Tank Capacity:	23.6 oz (0.7L)
Runtime (min/Ah):	21 minutes with 5.0Ah DCB205 battery pack (sold separately)
Motor:	Brushed
L _{PA} (emission sound pressure level)	75 dB(A)
L _{WA} (sound power level)	87 dB(A)
Depth in. (cm):	18.3 (46.6)
Height in. (cm):	7.8 (19.9)
Width in. (cm):	5.2 (13.4)
Hose Length in. (cm):	24.6 (62.5)
Volts:	20V
Weight lbs (kg):	3.3 (1.5)
LED Lights:	Yes
Collection Type:	Bagless
Filter Model/Style No.:	DCV5011H
Filtration Type:	HEPA Filter
Wet/Dry:	Dry ONLY
Belt Hook	Removable
Accessories:	Accessory Bag, Crevice Nozzle, Round Brush, Gulper Brush, Extension, Floor Accessory, Flexible nozzle

Troubleshooting

Symptom	Possible Cause(s)	Corrective Action
Vacuum has weak or no suction power	Is the tank full of dust?	Empty the tank.
	Is the filter clogged?	Clean or wash the filter.
	Does the battery need to be charged?	Charge the battery.
	Is the nozzle clogged?	Check for and remove any debris.
Nozzle is clogged or jammed	Is debris clogging the nozzle?	Check for and remove any debris.
Dust and debris are coming out of the nozzle	Is the guard at the entrance of the tank clogged?	Check for and remove any debris.
Vacuum is not working	Does the battery need to be charged?	Charge the battery.
	Is the On/Off switch in the ON position?	Ensure the On/Off switch is in the ON position.
Vacuum gave a small static shock while vacuuming	Dry atmospheric conditions, like cold temperatures or dry desert conditions may cause static electricity buildup	This is harmless. Using a humidifier, moisturizing hands, removing socks or sweaters before vacuuming will alleviate the possibility of static electricity buildup.