
USE AND CARE GUIDE

WINDSOR DINING CHAIR - BARE

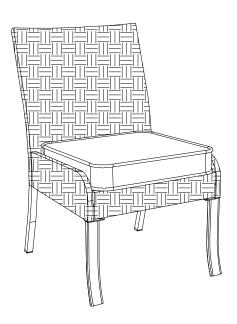

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

THANK YOU

Table of Contents

Table of Contents	.2
Important Safety Instructions	
Warranty	
Pre-Assembly	
Planning assembly	
i laining accombly infinition	•••

Care and Cleaning	7
Assembly	5
Package Contents	3
Hardware Included	3

Important Safety Instructions

SAVE THESE INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- Close supervision is necessary when this furnishing is used by or near children or disabled persons.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 3. Some parts may contain sharp edges. Wear protective gloves.
- 4. Please count the parts before assembly.
- 5. Set up your furniture properly. Ensure that all parts are assembled properly and fully tightened as per instructions. When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the leg levelers as required to ensure that the item stands in a level position.

6. Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be re-tightened fully before additional use.



DANGER: Keep children and parts away from the assembly area.



WARNING: To avoid destroying the finish, please handle the surface by using a soft cloth instead of your bare hands. Due to the nature of iron, surface oxidation (rusting) will occur if these protective coatings are scratched. We recommend immediate touch-up with rust inhibiting paint (not included).



CAUTION: Do NOT over tighten any of the bolts or nuts.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 3 years.

WHAT IS NOT COVERED

We do not reimburse for transportation of delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-800-841-1350 or visit www. Hamptonbay.com.

Production Number: 2022200026

Pre-Assembly

PLANNING ASSEMBLY

Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

 
HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.












Part	Part Number	Description	Quantity
AA	H100010006	Bolt M6*15 with Washer	4+1
BB	H100010028	Bolt M6*35 with Washer	12+2
CC	H090030002	Wrench M6	1
DD	H090030009	Rachet Wrench M6	1




NOTE: 1pc of Rachet Wrench per Set

PACKAGE CONTENTS

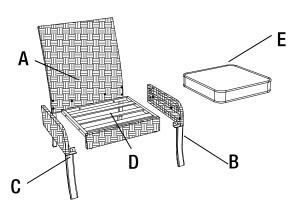


Part	Part Number	Description	Quantity
Α	P001500059	Back	1
В	P005400412	Leg (Left)	1
С	P005400413	Leg (Right)	1
D	P001600192	Seat	1
E	P001800125	Cushion	1
F	P005300059	Leveling feet (Pre-assembled on B/C)	2
G	P005300060	Leveling feet (Pre-assembled on A)	2

OPTIONAL TOOLS TO AID ASSEMBLY (NOT INCLUDED)

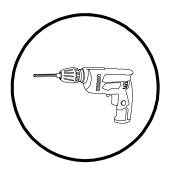

IMPORTANT


This assembly requires one to two person. Approximate assembly time: 30 minutes.

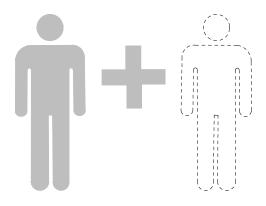

Assembly


Attaching the Back and Leg (Left)

□ Attach the leg (B) to the back (A) using 2 bolts (BB). Use wrench (CC) or rachet wrench (DD) to loosely tighten the bolts.

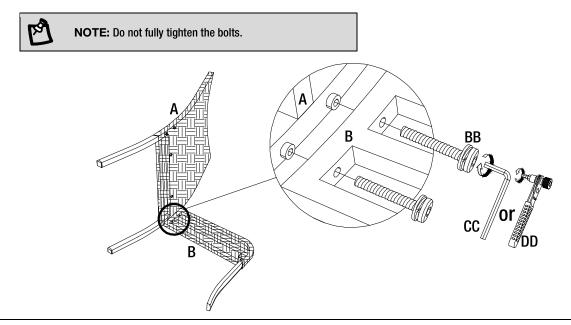


2 Attaching the Leg (Right)

□ Attach the leg (C) to the back (A) using 2 bolts (BB). Use wrench (CC) or rachet wrench (DD) to loosely tighten the bolts.

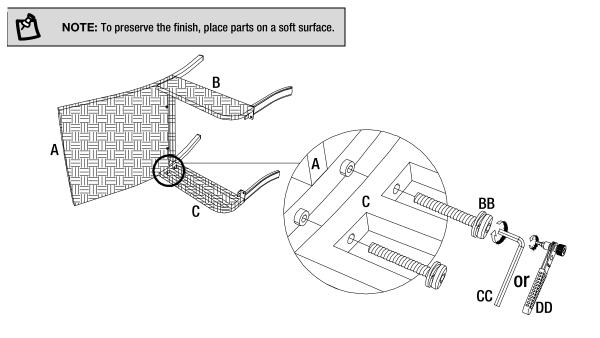


3 Attaching the Seat


 Attach the seat (D) to the back (A) and legs (C) using bolts (AA/BB). Use wrench (CC) or rachet wrench (DD) to loosely tighten the bolts.

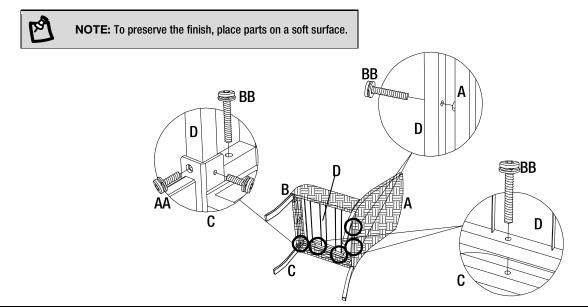

4 Attaching the Seat

 
Attach the seat (D) to the legs (B) using bolts (AA/BB). Use wrench (CC) or rachet wrench (DD) to fully tighten all the bolts.



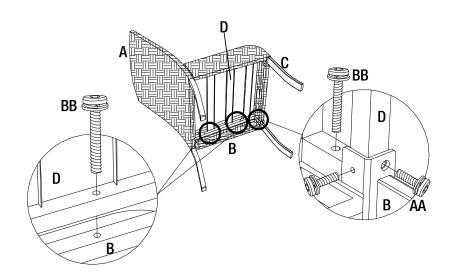

5 Placing the Cushion

- Place the cushion (E) on the seat (D) to complete the assembly.
- □ If the chair does not sit flat on the floor, slightly loosen the bolts, and push down on the seat to realign and adjust the legs, then carefully retighten the bolts.

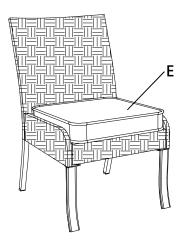

Care and Cleaning

- Before using, clean the chair completely with a soft dry towel.
- Do not use harsh abrasives or cleaners.
- □ When not in use, store in a cool, dry area.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM


Retain this manual for future use.

For certification use only

Factory Model# A211043802

USE AND CARE GUIDE

WINDSOR SWIVEL DINING CHAIR - BARE

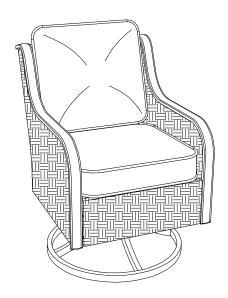

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this Chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Гable of Contents	2
mportant Safety Instructions	
Warranty	
Pre-Assembly	
Planning assembly	

Care and Cleaning	10
Assembly	6
Package Contents	4
Hardware Included	3

Important Safety Instructions

SAVE THESE INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- Close supervision is necessary when this furnishing is used by or near children or disabled persons.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 3. Some parts may contain sharp edges. Wear protective gloves.
- 4. Please count the parts before assembly.
- 5. Set up your furniture properly. Ensure that all parts are assembled properly and fully tightened as per instructions. When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the leg levelers as required to ensure that the item stands in a level position.

6. Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be re-tightened fully before additional use.



DANGER: Keep children and parts away from the assembly area.



WARNING: To avoid destroying the finish, please handle the surface by using a soft cloth instead of your bare hands. Due to the nature of iron, surface oxidation (rusting) will occur if these protective coatings are scratched. We recommend immediate touch-up with rust inhibiting paint (not included).



CAUTION: Do NOT over tighten any of the bolts or nuts.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 3 years.

WHAT IS NOT COVERED

We do not reimburse for transportation of delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-800-841-1350 or visit www. Hamptonbay.com.

Production Number: 2022200026

Pre-Assembly


PLANNING ASSEMBLY

 
Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.

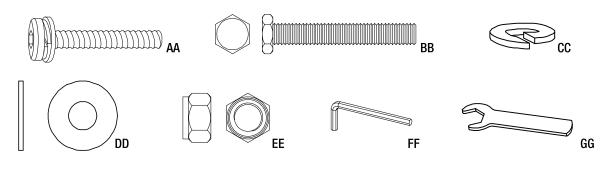






	1		
Part	Part Number	Description	Quantity
AA	H100010032	Bolt M6*40 with Washer	10+1
ВВ	H010010190	Bolt M8*45	4+1
CC	H050020016	Spring Washer M8	4+1
DD	H050010051	Flat Washer M8	8+1
EE	H040050027	Nut M8	4+1
FF	H090030002	Wrench M6	1
GG	H090010012	Wrench M8	2
НН	P000500937	Large Washer	4
JJ	H090030009	Rachet Wrench M6	1



NOTE: 1pc of Rachet Wrench per Set.

Pre-Assembly

PACKAGE CONTENTS

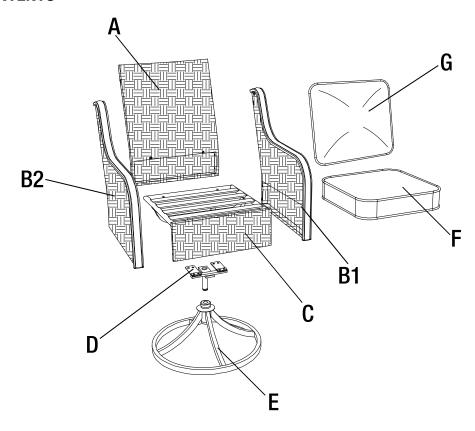


Part	Part Number	Description	Quantity
Α	P001500068	Back	1
B1	P001400251	Armrest (Left)	1
B2	P001400252	Armrest (Right)	1
С	P001600202	Seat	1
D	P000501273	T-Shaped Support	1
E	P005400437	Base	1
F	P001800130	Cushion	1
G	P001700107	Back Cushion	1
Н	P005300061	Leveling Feet (Pre-assembled on E)	8

OPTIONAL TOOLS TO AID ASSEMBLY (NOT INCLUDED)



IMPORTANT


This assembly requires one to two person. Approximate assembly time: $0.5 \sim 1$ hours.

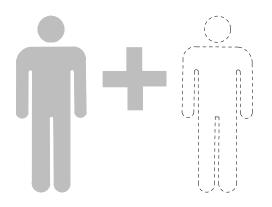

Assembly


1 Attaching the Back and Seat

□ Connect the back (A) with seat (C) using bolt (AA). Use wrench (FF) or rachet wrench (JJ) to loosely tighten the bolts.

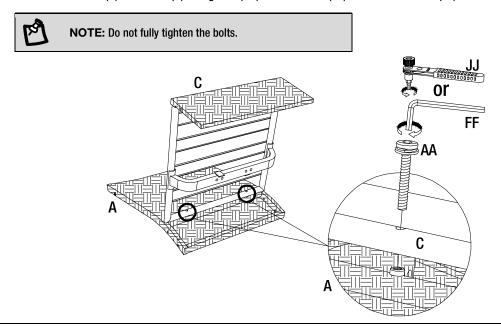

2 Attaching the Armrest (Left)

- Insert the hole on the armrest (B1) on the bolt on the side of back (A). Move the armrest (B1) backwards and adjust the angle if you find difficult to insert the hole.
- □ Swivel forward the armrest (B1) to be level with the seat (C).

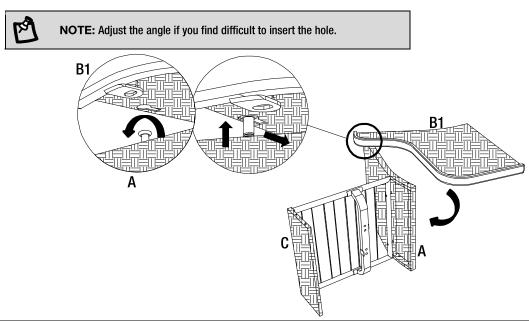


HAMPTONBAY.COM

3 Attaching the Armrest (Left)

- Align the back (A) with the mounting holes in the armrest (B1), connect them using bolts (AA). Use wrench (FF) or rachet wrench (JJ) to loosely tighten the bolts.
- □ Connect the seat (C) with the armrest (B1) using bolts (AA). Use wrench (FF) to loosely tighten the bolts.




NOTE: Do not fully tighten the bolts. Lightly rotate the armrest during installation.

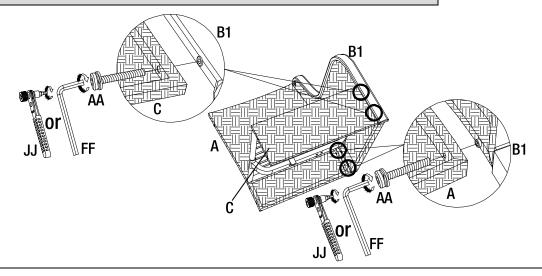


4 Attaching the Armrest (Right)

- □ Insert the hole on the armrest (B2) on the bolt on the side of back (A). Move the armrest (B2) backwards and adjust the angle if you find difficult to insert the hole.
- □ Swivel forward the armrest (B2) to be level with the seat (C).

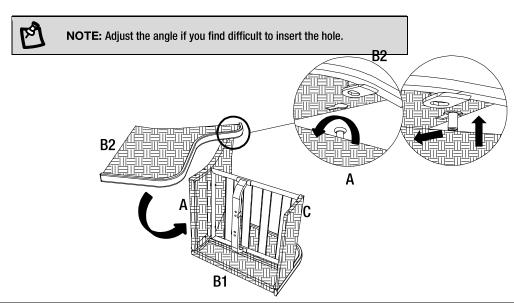


5 Attaching the Armrest (Right)

Align the back (A) with the mounting holes in the armrest (B2), connect them using bolts (AA). Use wrench (FF) or rachet wrench (JJ) to loosely tighten the bolts. Connect the seat (C) with the armrest (B2) using bolts (AA). Fully tighten the all bolts.

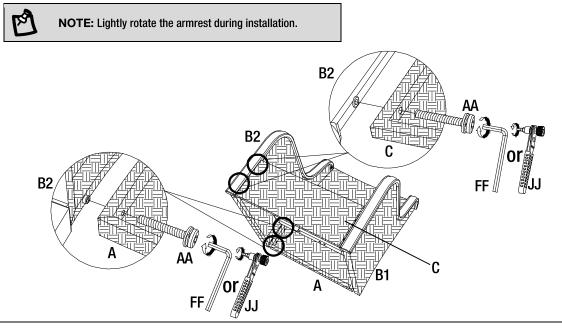

6 Attaching the T-Shaped Support

Attach the T-shaped support (D) to seat (C) using bolts (BB), spring washers (CC), flat washers (DD), nuts (EE) and large washer (HH). Fully tighten the all bolts. Wrench (GG) is used in the step.

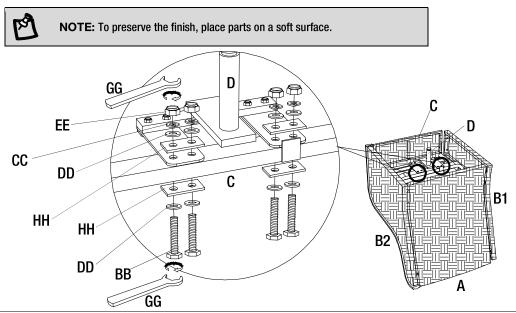


7 Inserting the T- Shaped Support

□ Insert the T-shaped support (D) to the base (E).




NOTE: To preserve the finish, place parts on a soft surface.

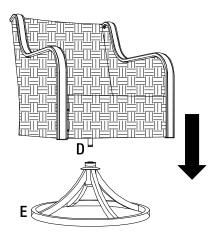

8 Placing the Cushions

□ Place the cushion (F) and back cushion (G) on the chair to complete the assembly.

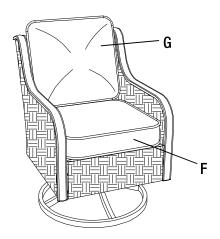

Care and Cleaning

- $\hfill\Box$ Before using, clean the chair completely with a soft dry towel.
- $\hfill\Box$
- $\ \square$ When not in use, store in a cool, dry area.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

Retain this manual for future use.

For certification use only

Factory Model# A211043601

USE AND CARE GUIDE

WINDSOR RECTANGLE DINING TABLE - BROWN



Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this table. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Гable of Contents	2
mportant Safety Instructions	
Warranty	
Pre-Assembly	
Planning assembly	

Hardware Included	3
Package Contents	3
Assembly	5
Care and Cleaning	

Important Safety Instructions

SAVE THESE INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- Close supervision is necessary when this furnishing is used by or near children or disabled persons.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 3. Some parts may contain sharp edges. Wear protective gloves.
- 4. Please count the parts before assembly.
- 5. Set up your furniture properly. Ensure that all parts are assembled properly and fully tightened as per instructions. When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the leg levelers as required to ensure that the item stands in a level position.

- Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be re-tightened fully before additional use.
- Table is not intended to support an umbrella alone, an umbrella shall always be used with a suitable base.



DANGER: Keep children and parts away from the assembly area.



WARNING: To avoid destroying the finish, please handle the surface by using a soft cloth instead of your bare hands. Due to the nature of iron, surface oxidation (rusting) will occur if these protective coatings are scratched. We recommend immediate touch-up with rust inhibiting paint (not included).



CAUTION: Do NOT over tighten any of the bolts or nuts.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 3 years.

WHAT IS NOT COVERED

We do not reimburse for transportation of delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-800-841-1350 or visit www. Hamptonbay.com.

Production Number: 2022200026

Pre-Assembly

 
PLANNING ASSEMBLY

Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.








Part	Part Number	Description	Quantity
AA	H100010035	Bolt M8*35 with Washer	8+1
ВВ	H090030005	Wrench M8	1
CC	H090030011	Rachet Wrench M8	1



NOTE: 1pc of Rachet Wrench per Set.

PACKAGE CONTENTS

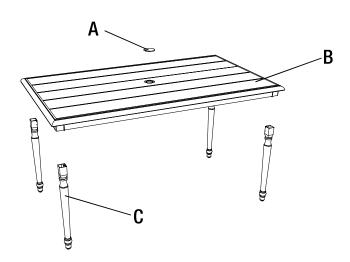


Part	Part	Description	Quantity
Α	P006500028	Umbrella Cap	1
В	P002100347	Table Top	1
С	P005400422	Leg	4
D	P005300053	Leveling feet (Pre-assembled)	4

OPTIONAL TOOLS TO AID ASSEMBLY (NOT INCLUDED)



IMPORTANT


This assembly requires one to two person. Approximate assembly time: Less than 30 minutes.

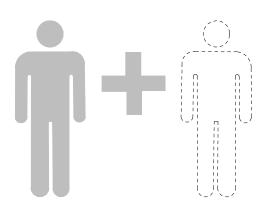

Assembly


1 Attaching the Table Top and Legs


Attach the legs (C) to the table top (B) using 8 bolts (AA). Use wrench (BB) or rachet wrench (DD) to fully tighten all the bolts. Move the legs (C) up and adjust the angle if you difficult to install.

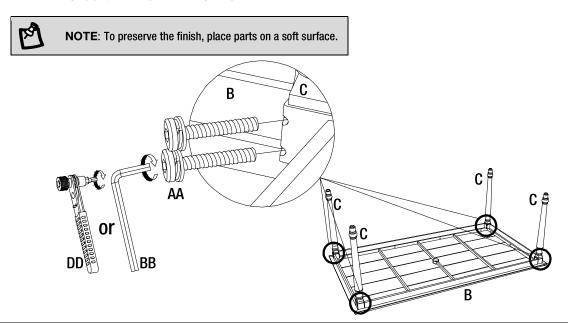

2 Placing the Umbrella Cap

 □ Place the umbrella cap (A) on the table top (B) to complete the assembly.



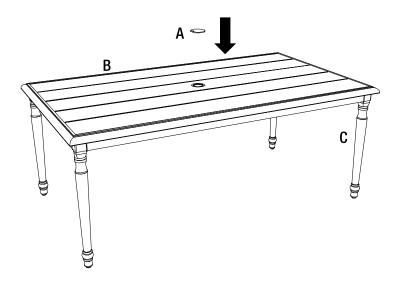

Care and Cleaning

- □ Before using, clean the table completely with a soft dry towel.
- Do not use harsh abrasives or cleaners.
- □ When not in use, store in a cool, dry area.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

Retain this manual for future use.

For certification use only

Factory Model# A208020400