

STEP 1: SELECT YOUR CLASS

Know the total weight of the trailer (GTW) you are towing and the maximum towing capacity of your tow vehicle determined by the manufacturer.

Class I	RATED FOR 2,000 LB GTW LIGHT TRAILERS AND CARGO CARRIERS	-0-t -0-t
Class II	RATED FOR 3,500 LB GTW MID-SIZED TRAILERS AND SMALL BOATS	<mark>12, ₹6-</mark> +
Class III	RATED FOR 5,000 LB GTW TRAVEL TRAILERS AND MOST BOATS	[]
Class IV	RATED FOR 10,000 LB GTW LARGE TRAVEL TRAILERS AND LARGE BOATS	
Class V	RATED FOR UP TO 21,000 LB GTW COMMERCIAL USE FOR HEAVY EQUIPMENT	, , , , , , , , , , , , , , , , , , ,

TOWING ACCESSORIES LINE UP

BALL MOUNT

The shank enters your vehicle's receiver hitch, while the tongue (or platform) secures the hitch ball.

HITCH BALL

The hitch ball connects to your ball mount, and hooks into the coupler.




HITCH PIN

Used to secure the ball mount in your vehicle's receiver.

COUPLER

Connected to the trailer bar, the coupler sits atop the hitch ball, becoming the bridge between the trailer and your towing vehicle.

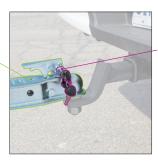

COUPLER LOCK

Used to keep the coupler locked onto the hitch ball, protecting the trailer from theft.

ELECTRICAL -

The trailer's electricity is acquired by connecting the trailer wiring into the towing vehicle. At times custom wiring, connectors, and adapters may be necessary.



CHAINS

In the event the trailer accidentally becomes unhitched, attached and crossed safety chains are used as a backup to keep the trailer connected to your towing vehicle.