

Use and Care Manual for Pop-up Tent

Installation

1. Unfold the tent on a flat surface. Use the 4 canopy poles to prop up the side walls for shade if needed. Adjust the height via the thumb-button system.
2. Ensure all joints of the steel tube frame are firmly connected.

Usage

1. Ideal for camping, picnics, etc. on beaches, backyards or parks.
2. To protect from wind, rain or sun, choose to prop up one side wall or put down both.

Storage

1. Disassemble the tent without tools and fold it neatly.
2. Store it in the provided 600D Oxford cloth bag. Keep in a dry place to prevent mold.

Maintenance

1. Wipe the 210D waterproof Oxford fabric with a damp cloth if dirty.
2. Check the steel frame regularly for any signs of damage and replace parts if necessary.