

PART #	KEY #	BIN LOCATION	DESCRIPTION
A WASHER PARTS			
W4.0-A-01-YG	1		AXLE
W5.5-A-02-YG	2		PUMP ASSEMBLY (2400PSI, 3/4")
W4.0-A-03-YG	3		HIGH PRESSURE HOSE
W4.0-A-04-YG	4		AIR CLEANER ASSEMBLY
W4.0-A-05-YG	5		MUFFLER ASSEMBLY
W5.5-A-06-YG	6		ENGINE ASSEMBLY
W4.0-A-07-YG	7		ENGINE BASE PAD
W4.0-A-08-YG	8		LOWER PRAME
APW5117-A-09-YG	9		UPPER FRAME & HANDLE
W4.0-A-10-YG	10		FUEL TANK ASSEMBLY
W4.0-A-11-YG	11		RUBBER FOOT (Φ50)
W4.0-A-12-YG	12		RUBBER CAP (Φ25)
W4.0-A-13-YG	13		WHEEL (8")
W4.0-A-14-YG	14		THERMAL RELIEF VALVE HOSE
W4.0-A-15-YG	15		DETERGENT HOSE
W4.0-A-16-YG	16		DETERGENT FILTER
W4.0-A-17-YG	17		QUICK CONNECT
W4.0-A-18-YG	18		HOSE HOLDER
W4.0-A-19-YG	19		GUN HOLDER
W4.0-A-20-YG	20		GROMMET
W4.0-A-21A-YG	21		NOZZLE (BLACK)
W4.0-A-21B-YG	22		NOZZLE (WHITE)
W4.0-A-21C-YG	23		NOZZLE (RED)
W4.0-A-21D-YG	24		NOZZLE (GREEN)
W4.0-A-22-YG	25		GUN
W4.0-A-23-YG	26		WAND
W4.0-A-24-YG	27		MUFFLER GASKET
W4.0-A-25-YG	28		OIL MEASURING CUP
HDW-AAA-M8X40H	29		ALLEN BOLT HARDENED(M8X40X1.25)
HDW-M-M8	30		LOCK NUT (M8X1.25)
HDW-N-M8	31		FLAT WASHER (M8)
B PUMP PARTS			
W4.0-B-01-YG	1		THERMAL RELIEF VALVE
W4.0-B-02-YG	2		THERMAL RELIEF VALVE CAP
W4.0-B-03-YG	3		OUTLET COUPLING
W4.0-B-04-YG	4		DETERGENT INLET COUPLING SET
W4.0-B-05-YG	5		OUTLET COUPLING CAP
W4.0-B-06-YG	6		PLUNGER CAP
C AIR CLEANER PARTS			
W4.0-C-01-YG	1		AIR CLEANER COVER
W4.0-C-02-YG	2		AIR CLEANER BASE (W/ STUD BOLT)
W4.0-C-03-YG	3		AIR CLEANER ELEMENT
W4.0-C-04-YG	4		AIR CLEANER ELEMENT BASE

W4.0-C-05-YG	5	FASTENING KNOB
D CARBURETOR PARTS		
G4.0-I-01BE-JD	1	CARBURETOR (LONG LEVER FUEL VALVE, W/O CHOKE LEVER, EPA)
G4.0-I-02A-JD	2	CHOKE LEVER (SHORT)
G6.5-I-04B-JD	3	INTAKE MANIFOLD (LONG)
G6.5-I-05-JD	4	INTAKE GASKET
G6.5-I-06-JD	5	INTAKE MANIFOLD GASKET
G4.0-I-07-JD	6	CARBURETOR GASKET (COPPER)
HDW-Y-01	7	HOSE CLAMP (M8)
HDW-Z-01	8	FUEL LINE (Φ9)
E FUEL TANK PARTS		
G2.5-O-01A-JD	1	FUEL FILLER CAP (NON-THREADED CARB)
G2.5-O-02A-JD	2	FUEL STRAINER (CARB)
APG3301C-O-02C-JD	3	FUEL STRAINER RETAINER
W4.0-E-03B-JD	4	FUEL TANK (EPA)
W4.0-E-04-YG	5	FUEL OUTLET
HDW-Y-01	6	HOSE CLAMP (M8)
HDW-Z-01	7	FUEL LINE (Φ9)
ENGINE PARTS		
A CYLINDER HEAD		
G4.0-A-01N-JD	1	CYLINDER HEAD BARE (FOR PRESSURE WASHER)
G4.0-A-02-JD	2	CYLINDER HEAD GASKET
JF120F6TC	3	SPARK PLUG (F6TC)
G6.5-A-04-JD	4	VALVE COVER
G6.5-A-05-JD	5	VALVE COVER GASKET
HDW-A-M6X105	6	INTAKE STUD (M6X105X1.0)
HDW-B-M8X35	7	EXHAUST STUD (M8X35X1.25)
HDW-C-03	8	DOWEL PIN (Φ10X16)
HDW-D-M8X55	9	CYLINDER HEAD BOLT (M8X55X1.25)
HDW-E-M6X12	10	VALVE COVER BOLT (M6X12X1.0)
B CYLINDER BLOCK		
G4.0-B-01C-JD	1	CRANKCASE ASSEMBLY (FOR PRESSURE WASHER)
G6.5-B-04-JD	2	GOVENOR GEAR ASSEMBLY
HDW-BB-08	3	OIL SEAL (Φ22XΦ35X6)
HDW-CC-6222	4	BEARING (6222)
HDW-G-M10X15	5	OIL DRAIN BOLT (M10X15X1.25)
HDW-H-01AL	6	COMPRESSION WASHER (M10)
C CRANK CASE COVER ASSEMBLY		
G4.0-C-01C-JD	1	CRANK CASE COVER (FOR PRESSURE WASHER)
G4.0-C-02-JD	2	CRANK CASE COVER GASKET
HDW-BB-09	3	OIL SEAL (Φ22XΦ41.3X6)
HDW-CC-6222	4	BEARING (6222)
HDW-C-01	5	DOWEL PIN (Φ8X14)

HDW-G-M8X20	6	HEX HEAD FLANGE BOLT (M8X20X1.25)
HDW-G-M6X28	7	HEX HEAD FLANGE BOLT (M6X28X1.0)
HDW-EE-01	8	OIL DIP STICK (M18)
HDW-AA-02 FL	9	O-RING FLAT (18 MM)
D CRANK SHAFT ASSEMBLY		
G4.0-D-01A-JD	1	CRANKSHAFT ASSEMBLY (STRAIGHT SHAFT)
HDW-U-03	2	FLAT WOODRUFF KEY (45 MM)
HDW-V-01	3	MOON WOODRUFF KEY (18 MM)
E PISTON AND CONNECTING ROD ASSEMBLY		
G4.0-E-01N-JD	1	PISTON (FOR PRESSURE WASHER)
G4.0-E-02-JD	2	PISTON RING SET (5 PCS, FOR PRESSURE WASHER)
G4.0-E-03-JD	3	WRIST PIN
G4.0-E-04N-JD	4	CONNECTING ROD (FOR PRESSURE WASHER)
G4.0-E-05-JD	5	CONNECTING ROD CAP
HDW-FF-04	6	WRIST PIN RETAINER (M13)
HDW-G-M7X30H	7	CONNECTING ROD CAP BOLT HARDENED (M7X30X1.0)
F VALVE TRAIN		
HDW-LL-M6H	1	ROCKER PIVOT NUT (M6X0.75)
G6.5-F-01-JD	2	ROCKER ARM
G4.0-F-02-JD	3	PUSH ROD GUIDE PLATE
G4.0-F-03-JD	4	PUSH ROD
G4.0-F-05C-JD	5	INTAKE VALVE (FOR PRESSURE WASHER)
G4.0-F-06C-JD	6	EXHAUST VALVE (FOR PRESSURE WASHER)
G4.0-F-07-JD	7	LIFTER
G6.5-F-08-JD	8	VALVE ROTATOR (IN/EX)
G6.5-F-10B-JD	9	VALVE RETAINER (W/O KEEPER, INTAKE)
G6.5-F-10C-JD	10	VALVE RETAINER (W/O KEEPER, EXHAUST)
G4.0-F-11B-JD	11	VALVE SPRING (W/O KEEPER)
G4.0-F-20-JD	12	CAMSHAFT ASSEMBLY
HDW-J-M6H	13	LOCK NUT HARDENED (M6X0.75)
HDW-HH-01H	14	PIVOT STUD (M6X52X0.75)
G RECOIL STARTER ASSEMBLY		
G4.0-G-01N-JD	1	RECOIL STARTER (FOR PRESSURE WASHER)
HDW-G-M6X8	2	HEX HEAD FLANGE BOLT (M6X8X1.0)
H FAN COVER ASSEMBLY		
G4.0-H-01C-JD	1	FAN COVER (W/ SWITCH HOLE)
G4.0-H-02A-JD	2	FLYWHEEL INSPECTION PLATE (W/O ELECTRIC START)
HDW-G-M6X12	3	HEX HEAD FLANGE BOLT (M6X12X1.0)
IGN-04R-JD	4	ENGINE ON/OFF SWITCH (RED, 1-WIRE)
J FLYWHEEL ASSEMBLY		
G4.0-J-01C-JD	1	FLYWHEEL (FOR PRESSURE WASHER)
G4.0-J-02N-JD	2	FLYWHEEL FAN (FOR PRESSURE WASHER)

G4.0-J-03C-JD	3	RECOIL STARTER CUP (FOR PRESSURE WASHER)
G6.5-J-04B-JD	4	TWO-WIRE IGNITION COIL
HDW-G-M6X20	5	HEX HEAD FLANGE BOLT (M6X20X1.0)
HDW-K-M14	6	FLANGE NUT SERRATED (M14X1.5)
L GOVERNOR ASSEMBLY		
G6.5-L-01-JD	1	GOVERNOR ARM SHAFT
G6.5-L-02-JD	2	GOVERNOR ARM
G4.0-L-03N-JD	3	GOVERNOR BASE (FOR PRESSURE WASHER)
G4.0-L-05-JD	4	GOVERNOR ROD
HDW-NN-05	5	SPEED GOVERNOR SPRING (105 MM)
HDW-II-01	6	GOVERNOR BOLT (SPECIAL, M6X20X1.0)
HDW-K-M6	7	FLANGE NUT SERRATED (M6X1.0)
HDW-G-M6X12	8	HEX HEAD FLANGE BOLT (M6X12X1.0)
HDW-N-M8	9	FLAT WASHER (M8)
HDW-W-01	10	GOVERNOR ARM SNAP PIN (8 MM)

