


REPLACEMENT PARTS - MODEL TBE304

4-CYCLE LAWN EDGER

PPN 25A-304-766

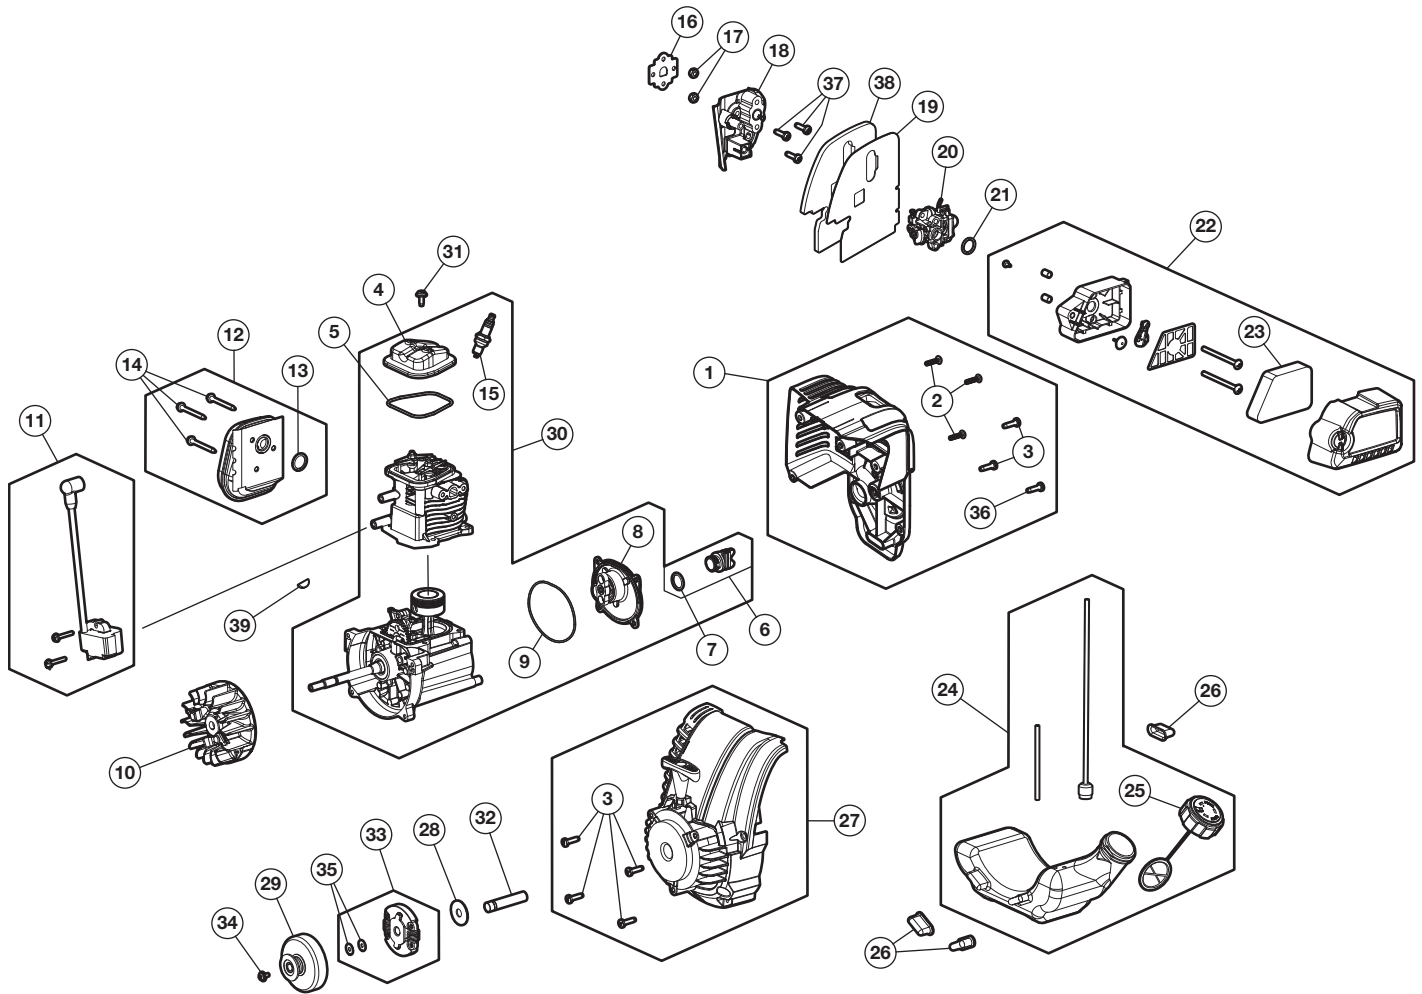


Item	Part No.	Description	Item	Part No.	Description
1	753-06134	Engine Cover Assembly (includes 2, 3 & 36)	21	791-181751	O-Ring
2	710-04194	Cover Screw	22	841-034692S	Air Cleaner Cover Assembly (includes 23)
3	710-04604	Starter Screw	23	753-05996	Air Filter
4	753-05901	Rocker Cover	24	753-06797	Fuel Tank Assembly w/Fuel Lines (includes 25)
5	753-05902	Rocker Cover O-Ring	25	753-1229	Fuel Cap
6	753-05408	Oil Plug (includes 7)	26	753-05259	Fuel Tank Pads
7	791-182290	Oil Plug O-Ring	27	753-06314	Starter Housing Assembly (includes 3)
8	753-06259	Crankcase Cover	28	9162-1	Washer
9	753-05238	Crankcase Cover O-Ring	29	753-06573	Clutch Drum (with Pulley)
10	753-06221	Flywheel Assembly	30	841-021441S	Shortblock Assembly (includes 4-9 & 15)
11	753-10444	Module Assembly	31	791-181025	Screw
12	753-05245	Muffler Assembly (includes 13 & 14)	32	750-04434	Spacer
13	753-05244	Muffler Gasket	33	753-1238	Clutch (includes 35)
14	710-04809	Muffler Screw	34	791-182468	Screw
15	794-00082	Spark Plug	35	6674	Washer
16	753-05247	Insulator Gasket	36	9054	Screw
17	712-04099	Nut	37	791-181003	Screw
18	841-020801S	Insulator	38	753-06949	Heat Shield
19	753-06948	Carburetor Gasket	39	914-04016	Flywheel Key
20	751-16046-4	Carburetor (with Primer)			

REPLACEMENT PARTS - MODEL TBE304

4-CYCLE LAWN EDGER

PPN 25A-304-766

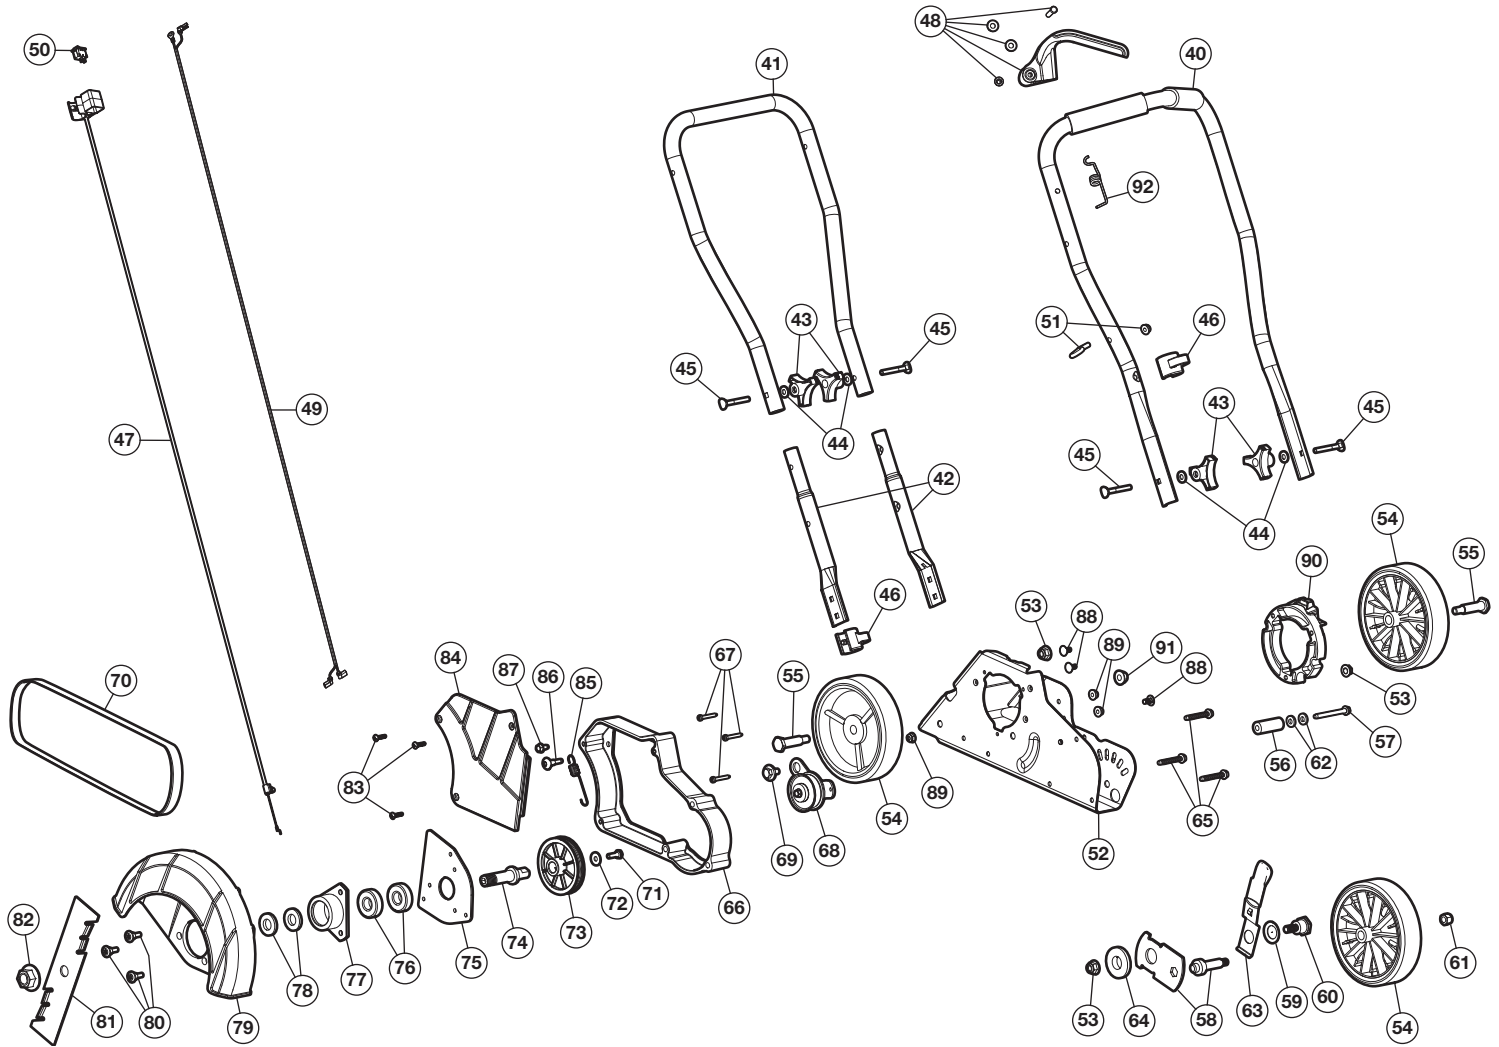

Item	Part No.	Description
40	753-06542	Upper Handle
41	753-06543	Middle Handle
42	753-06544	Handle Extension
43	791-182677	Handle Knob
44	4150	Washer
45	791-182899	Bolt
46	731-1820	Cable Guide
47	753-06546	Throttle Cable
48	753-06592	Throttle Lever w/Hardware
49	9681	Lead Wire
50	791-182405	On/Off Switch
51	753-05524	Starter Rope Guide
52	753-06593	Edger Frame
53	712-04065	Lock Nut
54	734-04261	Wheel
55	738-0373	Wheel Bolt
56	750-04783	Spacer
57	710-1206	Spacer Screw
58	687-02582S	Arm Assembly
59	736-0741	Washer
60	738-1172	Shoulder Screw
61	712-0130	Nut
62	750-04929	Spacer
63	987-02051	Lever Assembly
64	741-04242	Height Adjustment Bearing
65	710-1026	Spindle Plate Screw
66	753-06556	Spindle Spacer

Item	Part No.	Description
67	753-06559	Screw
68	753-05540	Idler Pulley Assembly
69	738-0930	Shoulder Screw
70	754-04149	Belt
71	710-3015	Screw
72	736-0270	Washer
73	756-04087B	Pulley
74	753-05543	Blade Spindle
75	787-01505	Spindle Plate
76	741-04547	Bearing
77	718-04012	Bearing Cup
78	736-04088	Washer
79	731-05064	Blade Guard
80	738-0706D	Screw
81	781-0080-0637	Edger Blade
82	712-0417A	Nut
83	710-04194	Screw
84	731-05822	Belt Cover
85	753-06562	Spring
86	753-06563	Bolt
87	710-0599	Screw
88	710-05177	Bolt
89	712-04064	Nut
90	753-06566	Spacer
91	712-04230	Nut
92	753-06636	Spring