



# ASSEMBLY INSTRUCTIONS

---

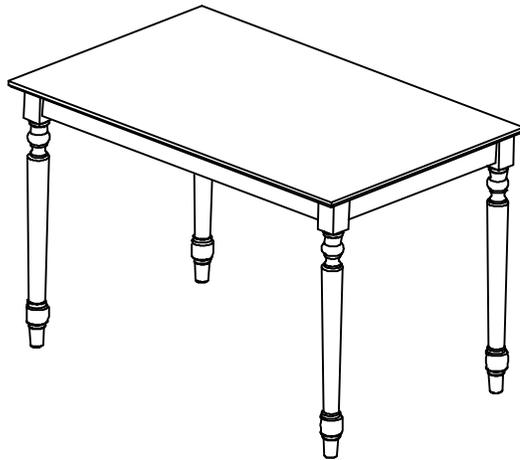

T-3030T, T-3042T, T-3048T, T-3636T, T-4242T/T-330T, T-336T, T-342T

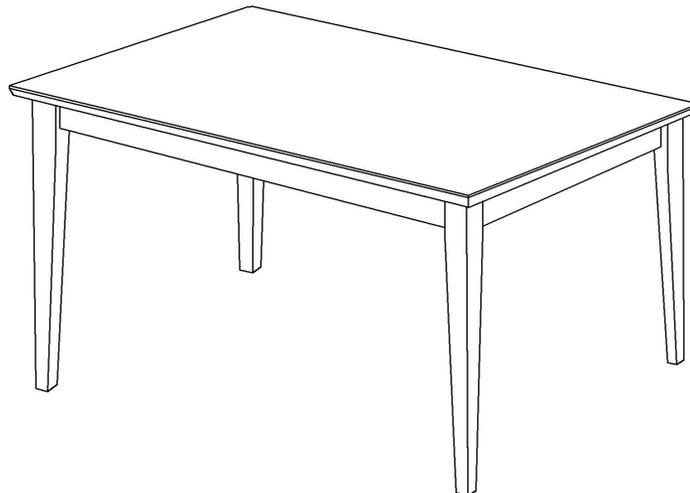

T-3030T, T-3042T, T-3048T, T-3636T, T-4242T/T-30S, T-36S, T-42S

---

Description: FIXED TOP TABLE

Item no : T-3030T, T-3042T, T-3048T, T-3636T, T-4242T AND  
T-330T, T-336T, T-342T OR T-30S, T-36S, T-42S  
"PACKED IN SEPARATE BOX"

ITEM: T-3030T, T-3042T, T-3048T, T-3636T, T-4242T AND  
T-330T, T-336T, T-342T OR T-30S, T-36S, T-42S

REVISED SEP 24, 2014

Printed in Vietnam

## BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

**IMPORTANT NOTE:**


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

**WARNING:**

Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish of your table. Protect the surface of the table with cloth if you are using any product with rubber feet or base.

## PART LIST T-3030T, T-3042T, T-3048T, T-3636T, T-4242T

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

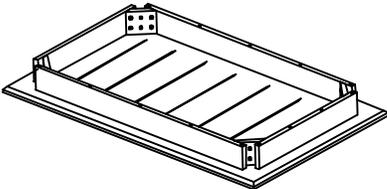NO	Description	Qty	Sketch
A	Table top	1	

 
## PART LIST T-30S, T-36S, T-42S

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch
B	Shaker legs	4	

## OR PART LIST T-330T, T-336T, T-342T

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch
B	Turned legs	4	

**ITEM: T-3030T, T-3042T, T-3048T, T-3636T, T-4242T AND  
T-330T, T-336T, T-342T OR T-30S, T-36S, T-42S**

**Printed in Vietnam**

**REVISED SEP 24, 2014**

# HARDWARE LIST


When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Hexagon nut ( M8x13mm)	8		3	Lock washer ( Φ8.5xΦ13mm)	8	
2	Flat washer ( Φ8.5xΦ19mm)	8		4	Wrench (13mm)	1	

**NOTE: HARDWARE IS PACKED IN CARTON OF LEGS T-330T, T-336T, T-342T OR T-30S, T-36S, T-42T**

## STEP 1

Attach legs (B) to the top (A) with washers (2), and (3) and nuts (1) as shown below. Tighten with the wrench (4).

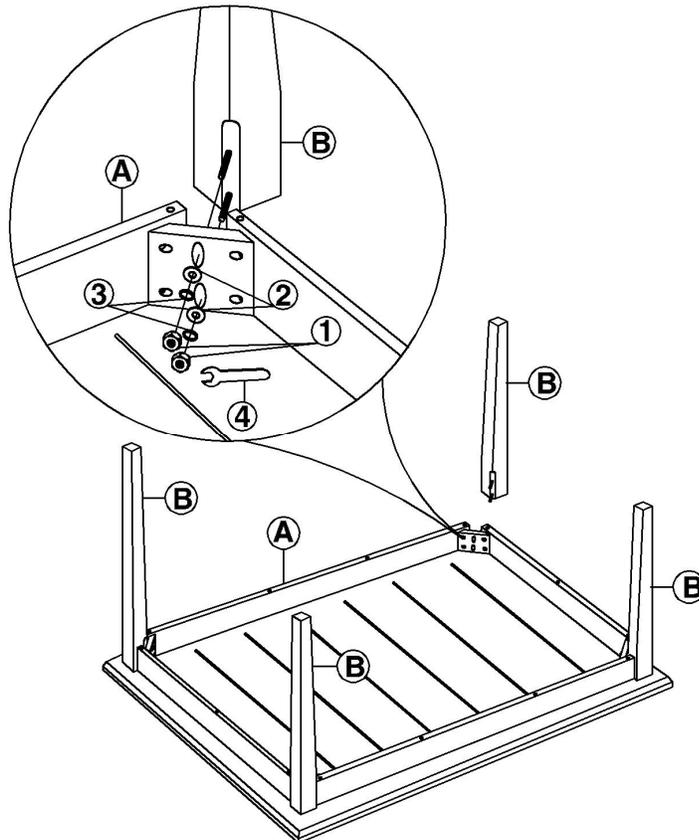

ITEM: T-3030T, T-3042T, T-3048T, T-3636T, T-4242T AND  
T-330T, T-336T, T-342T OR T-30S, T-36S, T-42S  
REVISED SEP 24, 2014

Printed in Vietnam