

 
Item # 0000 000 000  
Model # FZS60534S-STBC

# HAMPTON BAY<sup>®</sup>

## USE AND CARE GUIDE

---

### BOWBRIDGE STEEL 4PK SWIVEL CHAIR - BARE

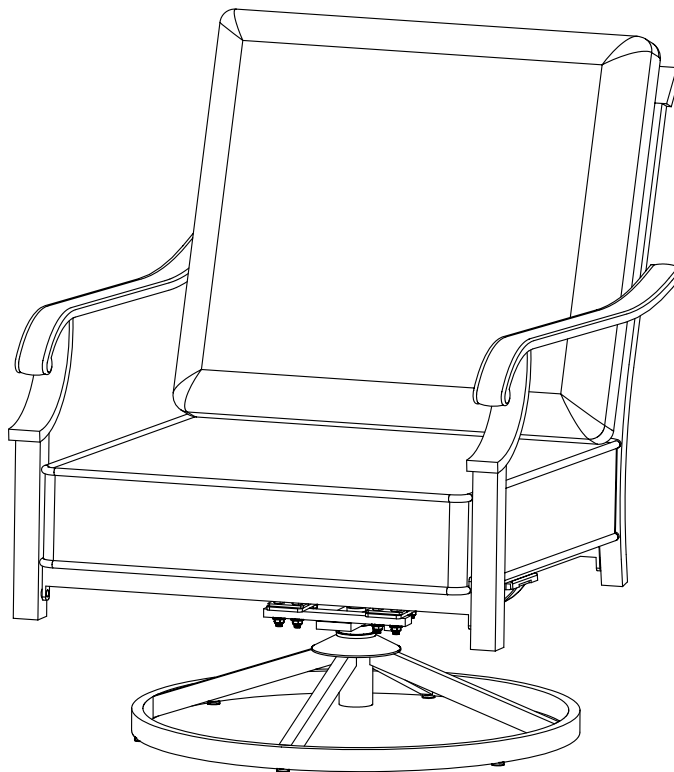

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service.  
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

---

#### THANK YOU

*We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!*

# Table of Contents

Table of Contents .....	2	Pre-Assembly .....	3
Important Safety Instructions .....	2	Planning Assembly .....	3
Save These Instructions .....	2	Hardware Included .....	3
Read All Instructions Before Use .....	2	Chair Package Contents .....	4
Warranty .....	3	Chair Assembly .....	5
What is Covered .....	3	Care and Cleaning .....	10
What is Not Covered .....	3		

## Important Safety Instructions

### SAVE THESE INSTRUCTIONS



**WARNING:** This chair was made for the explicit purpose of providing outdoor functions and is not to be used as a toy. This product is intended for normal outdoor use; however, the manufacturer recommends storing and / or covering this product when any formidable / severe weather is approaching.



**WARNING:** Do not locate this product near open flames. Do not use this product as a support. Do not shake, lean or climb on the product. Children under the age of 10, near the product, should be supervised by a competent adult at all times. This product is NOT intended for commercial use and will void the warranty.

### READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

1. Close supervision is necessary when this product is used by or near children, or disabled persons, if applicable.
2. Use this product only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
3. Do not move the chairs while the chairs are occupied. Failure to obey this caution could result in injury.



**CAUTION:** When not in use, secure the product in a cool and covered location.



**CAUTION:** Do not locate the product near any heat sources.



**WARNING:** Weight limit for the chair is 250lbs (113.39Kg) for each seat.



**WARNING:** Please keep children out of the assembly area before assembly.



**WARNING:** This chair unit is heavy, and may require two adults for safe assembly.



**WARNING:** Never use this product as a support. Do not shake, lean, or climb on the product at any time.



**WARNING:** Do not place heavy objects on the chair.

# Warranty

## 2 YEAR FRAME LIMITED WARRANTY

### WHAT IS COVERED

We warrant the frames to be free of manufacturing defects to the original purchaser for two years.

### WHAT IS NOT COVERED


It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit [www.HamptonBay.com](http://www.HamptonBay.com).

# Pre-Assembly


## PLANNING ASSEMBLY

Read all instructions before assembly.  
To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.

 


**NOTE:** More than one person may be required to assemble this product.

## HARDWARE INCLUDED




**NOTE:** Hardware not shown to actual size.

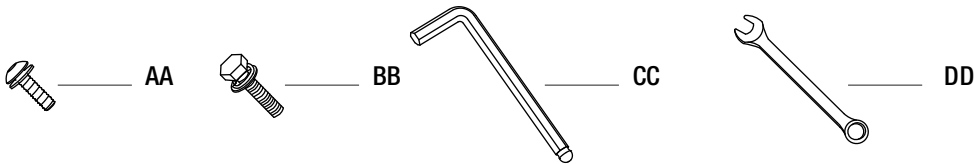

Part	Description	Quantity
AA	M6x15 combination bolt	40+1
BB	M8x20 combination bolt	16+1
CC	Hex wrench	1
DD	Wrench	1

# Pre-Assembly (continued)
 
## CHAIR PACKAGE CONTENTS

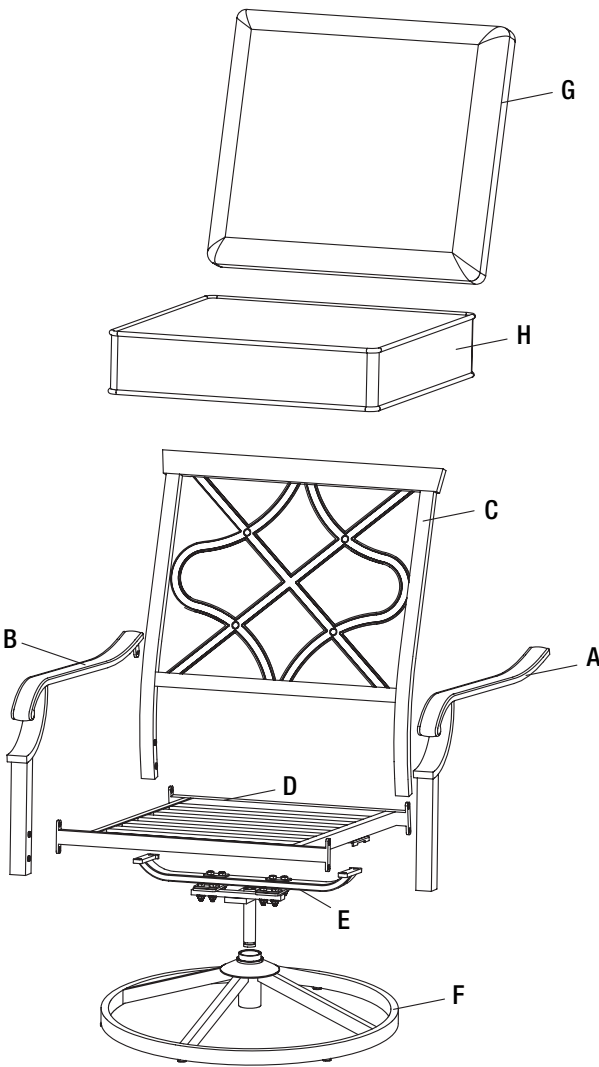

Part	Description	Quantity
A	Left Arm	4
B	Right Arm	4
C	Chair Back	4
D	Chair Seat	4
E	Support Tube	4
F	Swivel Base	4
G	Back Cushion	4
H	Seat Cushion	4


# Chair Assembly
 
## 1 ATTACHING THE CHAIR SEAT TO THE CHAIR BACK

- Place the chair back (C) upside down on a soft surface.
- Attach the chair seat (D) to the chair back (C) using M6x15 combination bolts (AA).



**NOTE:** Loosely tighten all bolts using the hex wrench (CC).

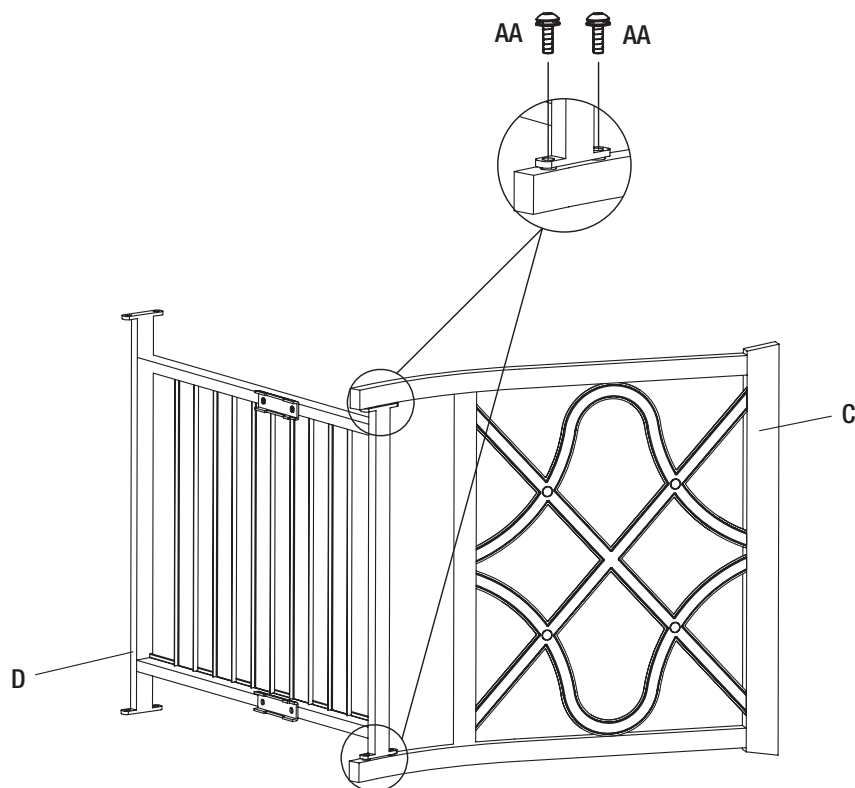


## Chair Assembly (continued)

### 2 ATTACH THE RIGHT ARM TO THE CHAIR SEAT AND CHAIR BACK

- Attach the right arm (B) to the chair seat (D) and chair back (C) using M6x15 combination bolts (AA).



 **NOTE:** Loosely tighten all the bolts using the hex wrench (CC).

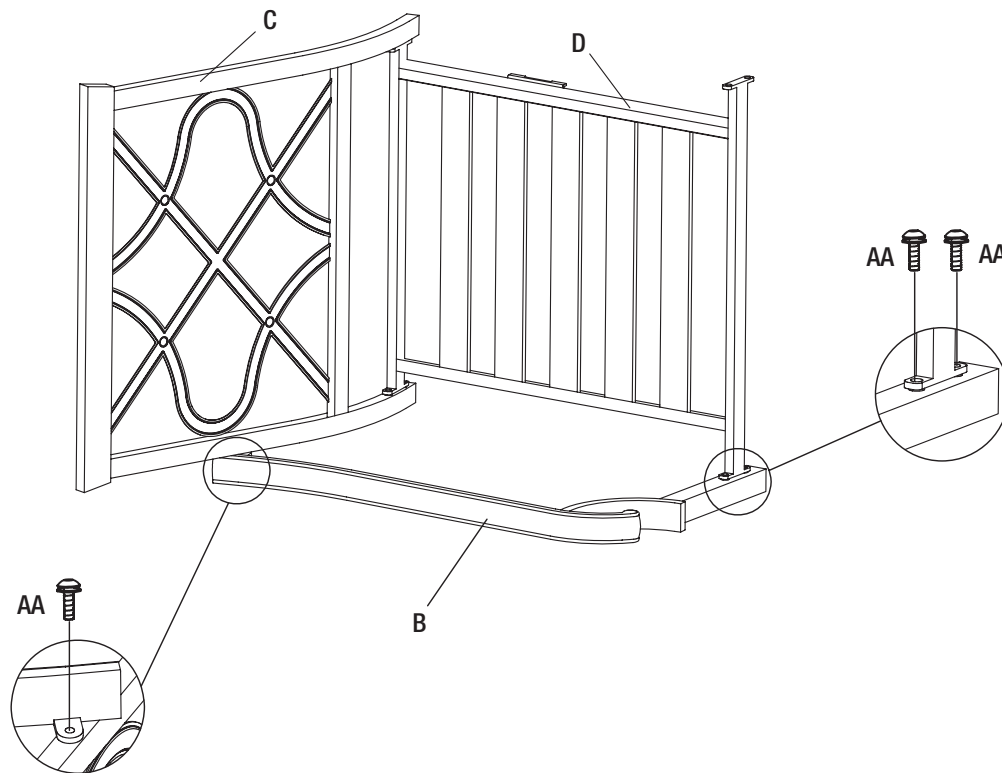


## Chair Assembly (continued)

### 3 ATTACH THE LEFT ARM TO THE CHAIR SEAT AND CHAIR BACK

- Attach the left arm (A) to the chair seat (D) and chair back (C) using M6x15 combination bolts (AA).



 **NOTE:** Loosely tighten all the bolts using the hex wrench (CC).

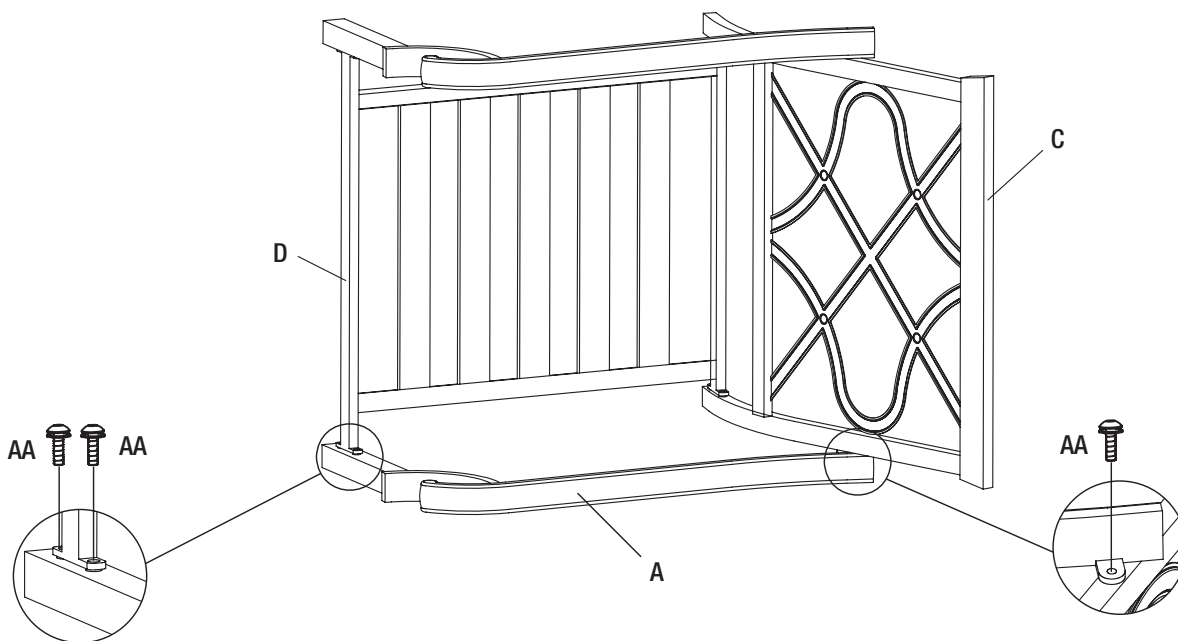


## Chair Assembly (continued)

### 4 ATTACH THE SUPPORT TUBE TO THE CHAIR SEAT

- Place the chair seat (D) upside down on a soft surface.
- Attach the support tube (E) to the chair seat (D) using M8x20 combination bolts (BB).



 **NOTE:** Loosely tighten all the bolts using the wrench (DD).

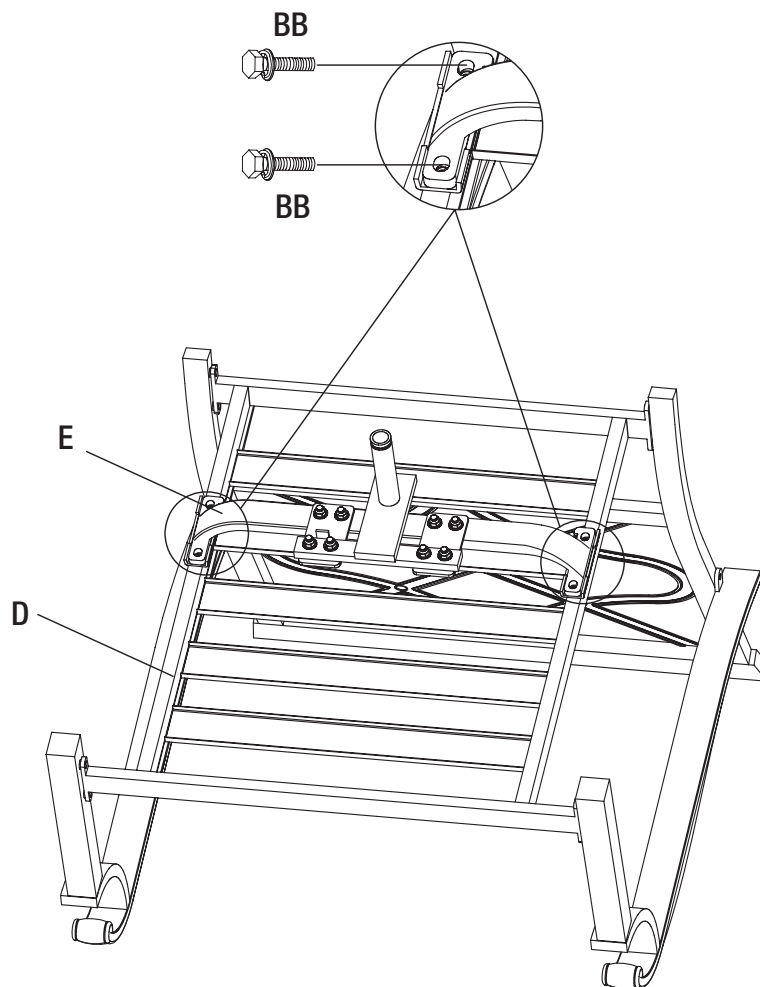




## Chair Assembly (continued)

### 5 TIGHTEN ALL BOLTS AND INSERT SUPPORT TUBE INTO THE SWIVEL BASE

 
- Once all of the bolts are in place, fully tighten all the bolts using the hex wrench (CC) and wrench (DD).
- Turn the chair right side up.
- Insert the support tube (E) into the swivel base (F).

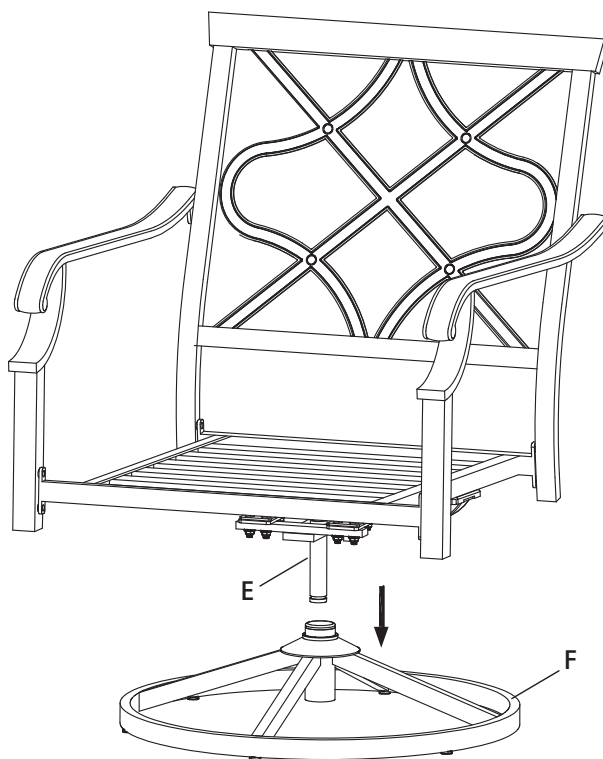

## Chair Assembly (continued)

### 6 PUT THE SEAT CUSHION AND BACK CUSHION ON THE CHAIR

 - Put the seat cushion (H) and back cushion (G) on the chair.
- Ensure all connections are secure before use.

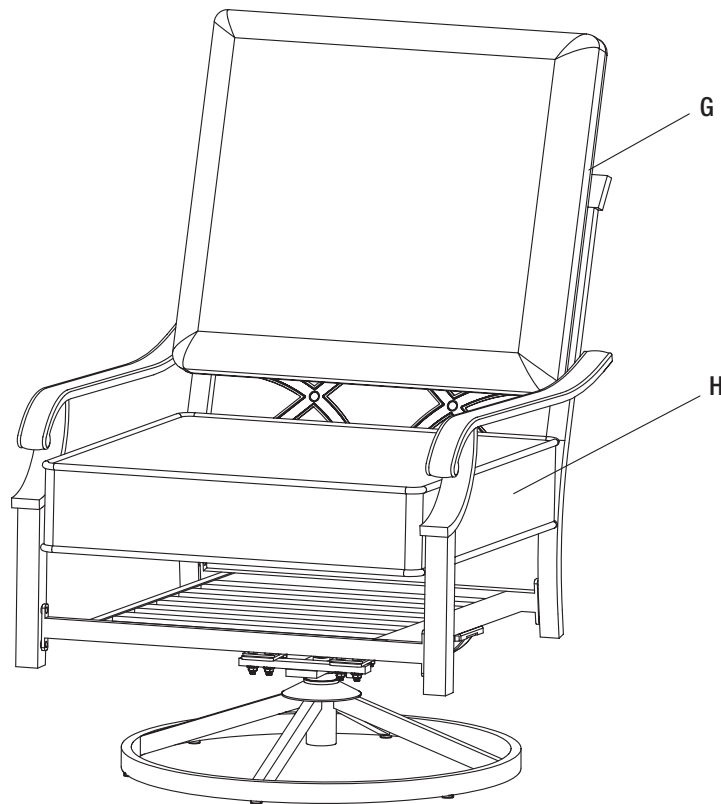

## Care and Cleaning

- For best results, clean the frame and cushions with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- Do not clean with abrasive materials, bleach or solvents.
- Store the chair in a dry sheltered place when not in use.
- Keep the chair out of fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.

# HAMPTON BAY®

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service.  
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

 
Retain this manual for future use.

For certification use only
Factory chair ID # FZS60534S

# HAMPTON BAY®

## USE AND CARE GUIDE

### BOWBRIDGE STEEL LP FIREPIT

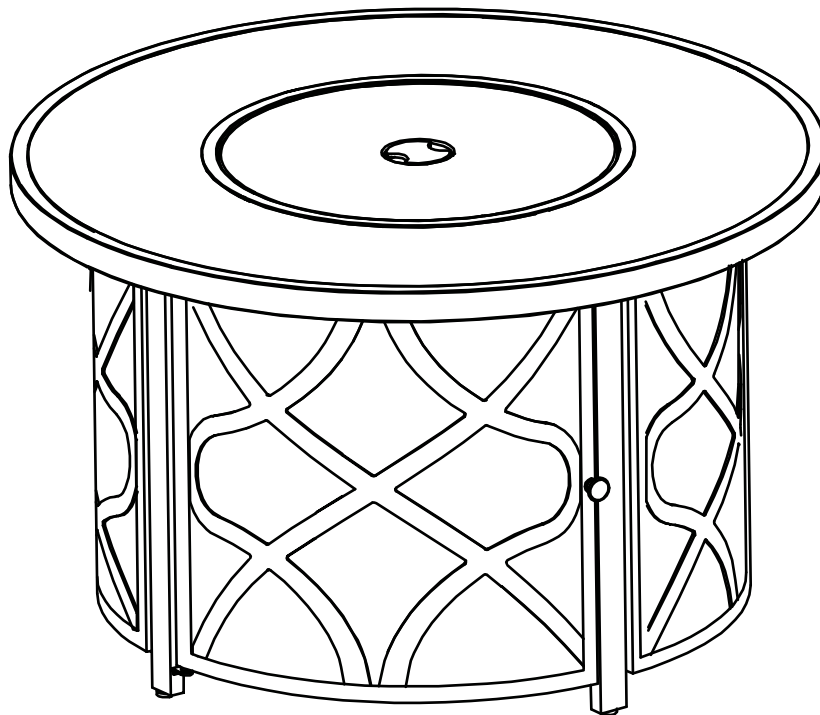

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service.  
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

---

#### THANK YOU

*We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this firepit. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvements needs.*

*Thank you for choosing Hampton Bay!*

# TABLE OF CONTENTS



## WARNING

### FOR YOUR SAFETY:

For Outdoor Use Only (outside, non-enclosed area). Do Not Use For Cooking. Installation and service must be performed by a qualified installer, service agency, or the gas supplier.



## WARNING

### FOR YOUR SAFETY:

- ⚠ If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.
- ⚠ **WHAT TO DO IF YOU SMELL GAS:**
  - Do NOT try lighting any appliance.
  - Do NOT touch any electrical switch; do NOT use any phone in your building.
  - Immediately call your gas supplier from a neighbor's phone.
  - Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
- ⚠ Installation and service must be performed by a qualified installer, service agency or gas supplier.
- ⚠ **INSTALLER:** Leave this manual with the appliance. **CONSUMER:** Retain this manual for future reference.
- ⚠ If you are assembling this unit for someone else, give this manual to him or her to read and save for future reference.



## WARNING

### FOR YOUR SAFETY:

- ⚠ Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
- ⚠ Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.



## DANGER

If you smell gas:

1. Shut off gas to appliance.
2. Extinguish any open flame.
3. If odor continues, leave the area immediately.
4. After leaving the area, call your gas supplier or fire department.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.



## WARNING

### FOR YOUR SAFETY:

1. Do NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
2. An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.




## DANGER

Do NOT leave this appliance unattended while it is in operation.

## Table of Contents

Table of Contents.....	2	Assembly.....	9
Important Safety Information.....	2	Operating.....	17
Propane (LP) Dangers and Warnings.....	5	Care and Maintenance.....	26
Hose & Regulator Assembly and Replacement.....	6	Warranty.....	26
Lava Rock Warning.....	6	Troubleshooting.....	27
Pre-Assembly.....	7		
Planning Assembly.....	7		
Hardware Included.....	7		
Packaging Contents.....	8		

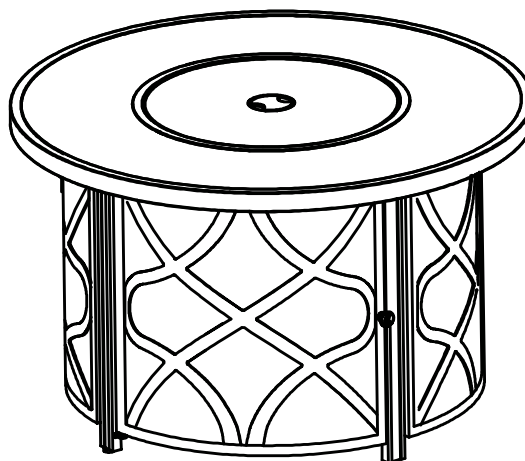 

## DANGER



### CARBON MONOXIDE HAZARD

- This appliance can produce carbon monoxide which has no odor.
- Using it in an enclosed space can kill you.
- Never use this appliance in an enclosed space such as a camper, tent, car or home.

This appliance complies with "ANSI Z21.97-2017-/CSA 2.41-2017, Outdoor Decorative Gas Appliances."

California Proposition 65: This product can expose you to carbon monoxide, which is a combustion by product known to the State of California to cause cancer birth defects or other reproductive harm.

For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

California Proposition 65: Handling the brass material on this product can expose you to Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm.

Wash hands after handling. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).



**WARNING: FUELS USED IN LIQUEFIED PROPANE GAS APPLIANCES, AND THE PRODUCTS OF COMBUSTION OF SUCH FUELS, CAN EXPOSE YOU TO CHEMICALS INCLUDING BENZENE, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND CAUSE BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.**

For more information go to: [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

**ADVERTENCIA: COMBUSTIBLES UTILIZADOS EN ELECTRODOMÉSTICOS DE GAS PROPANO LICUADOS, Y LOS PRODUCTOS DE COMBUSTIÓN DE TALES COMBUSTIBLES, PUEDEN EXPONER A LOS PRODUCTOS QUÍMICOS, INCLUYENDO EL BENCENO, QUE SE CONOCEN AL ESTADO DE CALIFORNIA PARA CAUSAR CÁNCER Y CAUSAR DEFECTOS DE NACIMIENTO U OTRA DAÑA REPRODUCTIVA.**  
Para obtener más información, visite: [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).



ATTACH YOUR RECEIPT HERE

Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_

# Important Safety Information



**WARNING:** Fire table is for outdoor use only.

Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that the control compartment, burners and circulating air passageways of the appliance are kept clean.



**WARNING:** Failure to follow the dangers, warning and cautions in this manual may result in serious bodily injury or death, or in a fire or an explosion causing damage to property.

## IMPORTANT NOTICE

Read and understand all warnings and precautions prior to assembly and use of your gas fire table. Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.

The installation of this unit must adhere to local codes or either the National Fuel Gas Code, ANSI Z223. 1/NFPA54 or CAN/CGA-B149.1 Natural Gas and Propane Installation Code.

Minimum Clearance from Unit to Combustible Materials:

61 ft. (155.4 cm) from the top; 48 ft. (121.9 cm) from all sides and back. Do not locate this fire table under any overhead enclosure.

## IF YOU SMELL GAS

- ☐ Shut off gas supply to the fire table.
- ☐ Extinguish any open flame.
- ☐ Do not try lighting any appliance.
- ☐ Do not touch any electrical switch; do not use any phone in your building.
- ☐ Immediately call your gas supplier from a neighbor's phone.
- ☐ Follow the gas supplier's instructions.
- ☐ If you cannot reach your gas supplier, call the fire department.

Children and adults should be alerted to the hazards of high surface temperatures and be kept at a safe distance while fire table is in use. This outdoor fire table is not to be operated by children. Young children should be closely supervised when in the vicinity of this outdoor fire table. Do not hang or place clothing or other flammable materials on or near the gas fire table. Any guard or protective device removed for servicing the appliance shall be replaced prior to operating the appliance.

- ☐ Keep these instructions for future reference. If you are assembling this unit for someone else, give this manual to him or her to read and keep for future reference.
- ☐ This gas fire table must be used **ONLY** outdoors in a well-ventilated space and shall **NOT** be used inside a building, garage, or any other enclosed area.
- ☐ **DO NOT** use this outdoor gas fire table for indoor heating. **TOXIC** carbon monoxide fumes can accumulate and cause asphyxiation.
- ☐ **NEVER LEAVE** this gas fire table unattended when in use.
- ☐ This unit is to be used with propane gas only! (sold separately)
- ☐ Do not attach a remote gas supply to this unit.
- ☐ Only use propane gas for this unit.
- ☐ Converting this unit to natural gas is dangerous. This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the Authority having jurisdiction. The maximum inlet natural gas pressure for this outdoor fire table is 10 1/2 in. wc; the minimum inlet natural gas for this outdoor fire table is 3 1/2 in. wc
- ☐ Do not use a flame to check for gas leaks.
- ☐ Do not store or use gasoline or other flammable vapors and liquids within 25 ft. (7.62 m) of this or any other appliance.
- ☐ Do not store any combustible materials in the base enclosure.

## Important Safety Information (continued)

- ☐ The use of alcohol, prescription or non-prescription drugs may impair an individual's ability to properly assemble or safely operate this outdoor fire table.
- ☐ DO NOT use in an explosive atmosphere. Keep gas fire table area clear and free from combustible materials, such as gasoline.
- ☐ This outdoor fire table is not to be installed or used in or on recreational vehicles and/or boats.
- ☐ Always use in accordance with all applicable local, provincial and national codes. Contact your local fire department for details on outdoor burning.
- ☐ Use the same precautions you would with any open fire when using this outdoor fire table.
- ☐ DO NOT burn solid fuels such as: wood, charcoal briquettes, lump charcoal, manufactured logs, driftwood, trash, leaves, paper, cardboard, plywood, or painted, stained or pressure-treated wood in this outdoor fire table.
- ☐ DO NOT paint or color any part of this heating unit.
- ☐ DO NOT use this outdoor fire table until it is COMPLETELY assembled and all parts are securely fastened and tightened.
- ☐ DO NOT store another LP gas tank within 10 ft. (3.05 m) of this outdoor fire table while it is in operation.
- ☐ DO NOT use this outdoor fire table near automobiles, trucks, vans or recreational vehicles.
- ☐ DO NOT use this outdoor fire table under any overhead structure or near any unprotected combustible constructions.
- ☐ Avoid using near or under overhanging trees and shrubs.
- ☐ Always use this outdoor fire table on a hard, level, non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose.
- ☐ DO NOT use this outdoor fire table if any part has been under water. Immediately call a qualified service technician to inspect the fire table and to replace any part or control system and any gas control which has been under water.
- ☐ DO NOT set the protective cover over the unit until it is turned off and completely cooled down.
- ☐ DO NOT use in windy conditions.
- ☐ Keep all electrical cords away from a hot outdoor fire table.
- ☐ Certain areas of this outdoor fire table when in use will become too hot to touch. Do not touch hot surfaces until the unit has cooled unless you are wearing protective gear such as insulated pot holders or heat-resistant gloves or mittens to avoid burns.
- ☐ DO NOT attempt to move or store this outdoor fire table until all parts are cool.
- ☐ DO NOT lean over this outdoor fire table when lighting or when in use.
- ☐ Use only the regulator and hose assembly provided. The replacement regulator and hose assembly shall be that specified by the manufacturer.
- ☐ DO NOT attempt to disconnect the gas regulator from the tank or any gas fitting while the outdoor fire table is in use.
- ☐ Always shut off the supply at the tank valve and disconnect regulator from the tank when the fire table is not in use.
- ☐ DO NOT sit on the fire table when the unit is in operation.
- ☐ DO NOT throw anything onto the fire when the unit is in operation.
- ☐ Lava rocks are very hot; please keep children and pets at a safe distance.
- ☐ It is essential to keep the outdoor fire table valve compartment, burners, and circulating air passages clean. Inspect outdoor fire table before each use.
- ☐ Check for leaks after not using the unit for long periods of time.
- ☐ Prior to each fire table operation, check the hose for evidence of excessive abrasion or wear by looking through the visual check hole. If the hose is damaged, cracked or cut, it must be replaced before using the gas fire table. The hose assembly can only be replaced with a hose assembly specified by the manufacturer. Please call the service center at 1-855-HD-HAMPTON.
- ☐ Before each use, remove the lava rocks. Examine the burner and its components. If dirty, clean with a soft brush and soapy water solution. Also examine the area around the burner. Any dirt or foreign material, such as spider webs or nests in this area, should be removed. If it is evident that the burner is damaged, the fire table must not be used. The burner assembly cannot be replaced. Please contact the service center at 1-855-HD-HAMPTON for technical support.
- ☐ Place the hose out of the pathways where people may trip over it (if using external tank). Do not place the hose in areas where it may be subjected to accidental damage.



# Important Safety Information (continued)

ATTENTION: Any alteration of the outdoor fire table that is not specifically directed in the operations manual will void manufacturer warranty.

## PROPANE (LP) DANGERS AND WARNINGS

### LP GAS

LP gas is flammable and hazardous if handled improperly. Familiarize yourself with its hazards before using any LP gas product.

### PROPANE HAZARDS

- ☐ Flammable, explosive under pressure, heavier than air and settles in pools in low areas.
- ☐ In its natural state, propane has no odor. For your safety, an odorant has been added.
- ☐ Contact with propane could burn your skin.
- ☐ Propane is extremely flammable and hazardous if handled improperly.

### LP GAS WARNINGS

- ☐ Cylinders must be stored outdoors in a well-ventilated area out of reach of children.
- ☐ Disconnected cylinders must have threaded valve plugs tightly installed and must not be stored in a building, garage or any other enclosed area.
- ☐ Never use a propane cylinder with a damaged body, valve, collar or footing.
- ☐ Dented or rusted propane cylinders may be hazardous and should be checked by your propane gas supplier.
- ☐ Be sure to use only one 20 lb (9.1 kg) LP gas cylinder with a Type 1 valve with this appliance as required by the American National Standards Institute (ANSI) and the Canadian Standards Steering Committee.
- ☐ Only tanks marked "propane" may be used.
- ☐ The installation of this unit must adhere to local codes or either the National Fuel Gas Code, ANSI Z223. 1/NFPA54, or CAN/CGA-B149.1, Natural Gas and Propane Installation Code.
- ☐ LP gas tank must be arranged for vapor withdrawal.
- ☐ The LP gas tank must have a listed overfilling prevention device (OPD) and a QCCI Type I (CGA810) LP gas tank connection.
- ☐ The LP gas tank must have a tank collar to protect the tank valve.
- ☐ Never use an LP gas tank with a damaged body, valve, collar, or footing. Dented or rusted LP gas tanks may be hazardous.
- ☐ The LP gas tank should not be dropped or handled roughly.
- ☐ Tanks must be stored outdoors out of the reach of children. Do NOT store in a building, garage, or any other enclosed area.
- ☐ Never store your LP gas tank where temperatures can reach over 125°F (52°C).
- ☐ Do not store the LP gas cylinder in direct sunlight or near a source of heat or combustion.
- ☐ Never keep a filled LP gas tank in a hot car or car trunk. Heat will cause the gas pressure to increase, which may open the relief valve and allow gas to escape.
- ☐ Place dust cap on valve outlet whenever the LP gas tank is not in use. Only install the recommended type of dust cap on the LP gas tank and the LP gas tank valve. Other types of caps or plugs may result in leakage of propane.
  - a. Do not store a spare LP gas cylinder under or near this appliance.
  - b. Never fill the LP gas cylinder beyond 80% full.
  - c. If the information in (a) and (b) is not followed exactly, a fire causing death or serious injury may occur.
- ☐ LP gas cylinders should be filled only by a certified LP gas dealer.
- ☐ The pressure regulator is set for 11 in. wc (2.74 kPa).
- ☐ The maximum inlet propane gas pressure for this outdoor fire table is 250 PSI; the minimum inlet propane gas pressure for this outdoor fire table is 25 PSI.
- ☐ The maximum inlet natural gas pressure for this outdoor fire table is 10.5 in. wc.
- ☐ The minimum inlet natural gas pressure for this outdoor fire table is 3.5 in. wc.
- ☐ Never attempt to attach this appliance to the self-contained LP gas system of a camper trailer, motor home or house.
- ☐ Always use the pressure regulator and hose assembly provided with the appliance to connect to a LP gas cylinder. Never connect to an unregulated LP gas supply. For technical support contact the service center at 1-855-HD-HAMPTON.
- ☐ Hand turn the manual gas control valve. Never use tools. If the valve will not turn by hand, do not try to repair it. Call a certified gas technician. The use of force or any self-attempted repair may result in a fire or explosion.

### When Connecting Your Gas Cylinder

Before connecting, be sure that there is no debris caught in the head of the gas cylinder, head of the regulator valve or in the ports. Connect regulator valve and hand-tighten firmly. Disconnect the propane cylinder from the regulator valve when the fire table is not in use. DO NOT obstruct the flow of combustion air and ventilation air to the burner.



 
# Important Safety Information (continued)

## HOSE AND REGULATOR ASSEMBLY AND REPLACEMENT

1. This fire table comes equipped with a standard LP gas hose and regulator including the appliance side connection for a CGA No. 791 Cylinder Connection Device. The LP gas hose and regulator supplied with this fire table must be used. Only a hose and regulator specified by manufacturer can be used for replacement.
  - a. The CGA No. 791 connection incorporates a magnetic flow limiting device that acts to limit the flow of gas if a leak is detected between the regulator and the burner valve.
  - b. If the burner valve is open prior to the LP gas cylinder service valve being opened, the connection will interpret this free flow of gas to be a leak.
  - c. The connection safety feature will reduce gas flow from the regulator to the appliance to a minimal level.
  - d. Be sure that the burner control valve is closed prior to opening the LP gas cylinder service valve to ensure that the connection flow limiting device is not triggered mistakenly.
  - e. If the connection flow limiting device is triggered mistakenly, close the LP gas cylinder service valve and the burner valve, wait 10 seconds to allow the device to reset, open the cylinder service valve, then open the burner valve and light the fire table as per lighting instructions.
2. Be sure to protect the hose from any hot surfaces. Serious danger may result if the hose contacts any hot surface.
3. Regular maintenance of the hose and regulator:
  - a. Inspect the hose before each use of the fire table. If the hose shows signs of cracks, abrasions, cuts or damage of any kind, do not operate the appliance. Fix or replace the hose as required before using the appliance. For assistance with repair or replacement of the hose, call the service center at 1-855-HD-HAMPTON. Use only replacement parts from the manufacturer.
  - b. Inspect the seal inside the CGA No. 791 service valve on the LP gas cylinder when replacing the cylinder or at least once per year. If there is any indication of damage, have the seal replaced by a certified gas dealer before operating the appliance.
4. Do not use tools to tighten the CGA No. 791 connection nut onto the LP gas cylinder service valve. Hand tighten only.
5. Be careful to not cross the threads on the connection when tightening the CGA No. 791 connection onto the LP gas cylinder service valve.
6. "Leak Test" should always be performed after attaching the connection to the LP gas cylinder service valve. See "Checking for Leaks" section of this manual in Step 6, page 21.
7. Connection instructions are on pages 17-18 (Steps 2–3 in the "Operation" section).

## LAVA ROCKS WARNING

1. Lava rocks may have sharp edges. Wear safety glasses and gloves when handling.
2. If changing or substituting the lava rocks with other media, use lava rocks/pumice stones/glass shards/glass beads available from your local authorized dealer/distributor.
3. Pour the lava rocks evenly into the burner area (with the exception of the screen, if applicable). The lava rocks should be 1/2 to 1 in. (1.2 to 2.5 cm) above the burner.

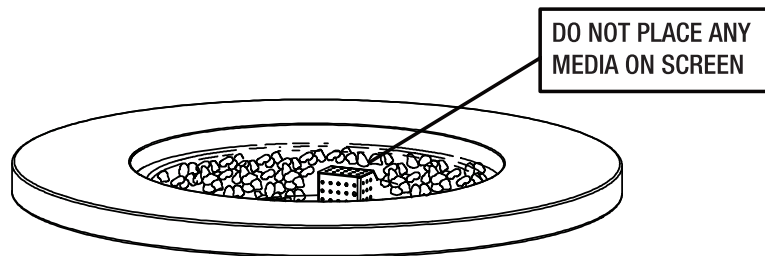

4. **IMPORTANT:** Do not exceed a height of 1 in. (2.5 cm) above the burner when placing lava rocks or other media. Ensure no media covers the igniter screen. Store any excess lava rocks in a safe location.
5. Keep away from the unit for the first 20 minutes after igniting your unit for the first time, as lava rocks/pumice stones/glass beads could pop out and cause injury. Should any rocks pop out, discard them.
6. Always ensure that lava rocks/pumice stones/glass shards/glass beads are completely dry before use. Failure to do so will cause them to crack or pop.

# Pre-Assembly

## PLANNING ASSEMBLY

Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



**NOTE:** More than one person may be required to assemble this product.

## HARDWARE INCLUDED



**NOTE:** Hardware not shown to actual size.



— AA



 
— BB



— CC



— DD

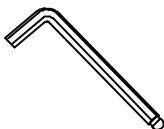

— EE




— FF

Part	Description	Quantity
AA	M6X15 Combination bolt	22+1
BB	M6X12 Countersunk bolt	1+1
CC	Plastic Washer	2+1
DD	Knob	1
EE	Hex wrench	1
FF	AAA Battery	1

# Pre-Assembly (continued)
 
## PACKAGE CONTENTS

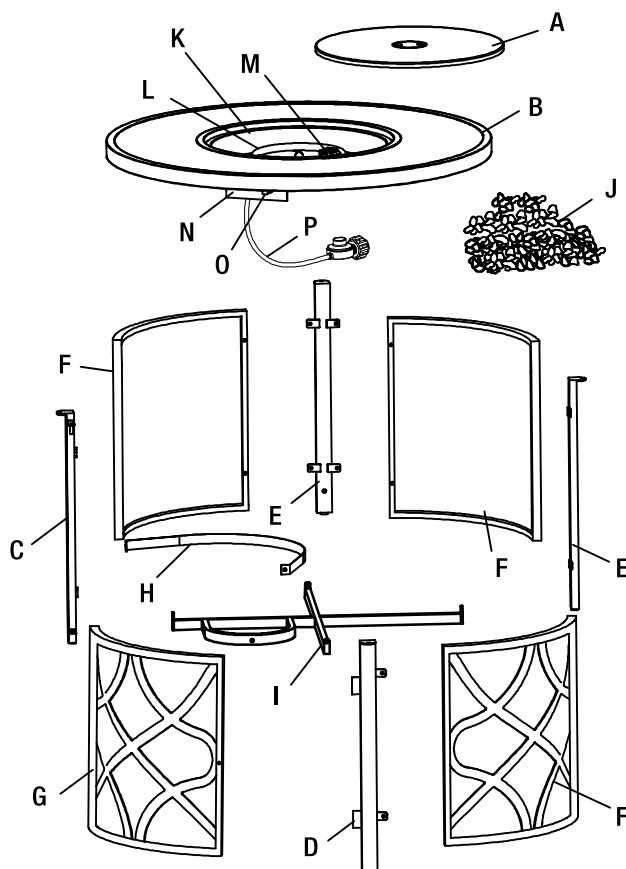

Part	Description	Quantity
A	Burner Lid	1
B	Table Top	1
C	Leg C	1
D	Leg D	1
E	Leg E	2
F	Side Panel	3
G	Door	1
H	Limit Tube	1
I	Tank Support	1
J	Lava Rocks	1
K	Burner Bowl	1
L	Burner Ring	1
M	Pilot Housing	1
N	Manual Electric Igniter	1
O	Control Knob	1
P	Regulator/Hose	1

**WARNING:** Failure to position the parts in accordance with these diagrams or failure to use only parts specifically approved with this appliance may result in property damage or personal injury.


# Assembly
 
## 1 CONNECTING THE LEGS

- Place the table top (B) upside down on a soft surface.
- Attach the legs (C&D&E) to the table top (B) using M6X15 combination bolts (AA).
- Do not tighten the bolts at this step.

NOTE: Pay attention to the direction of the control knob, it must be placed in the direction shown.

NOTE: Loosely tighten all the bolts using the hex wrench (EE).

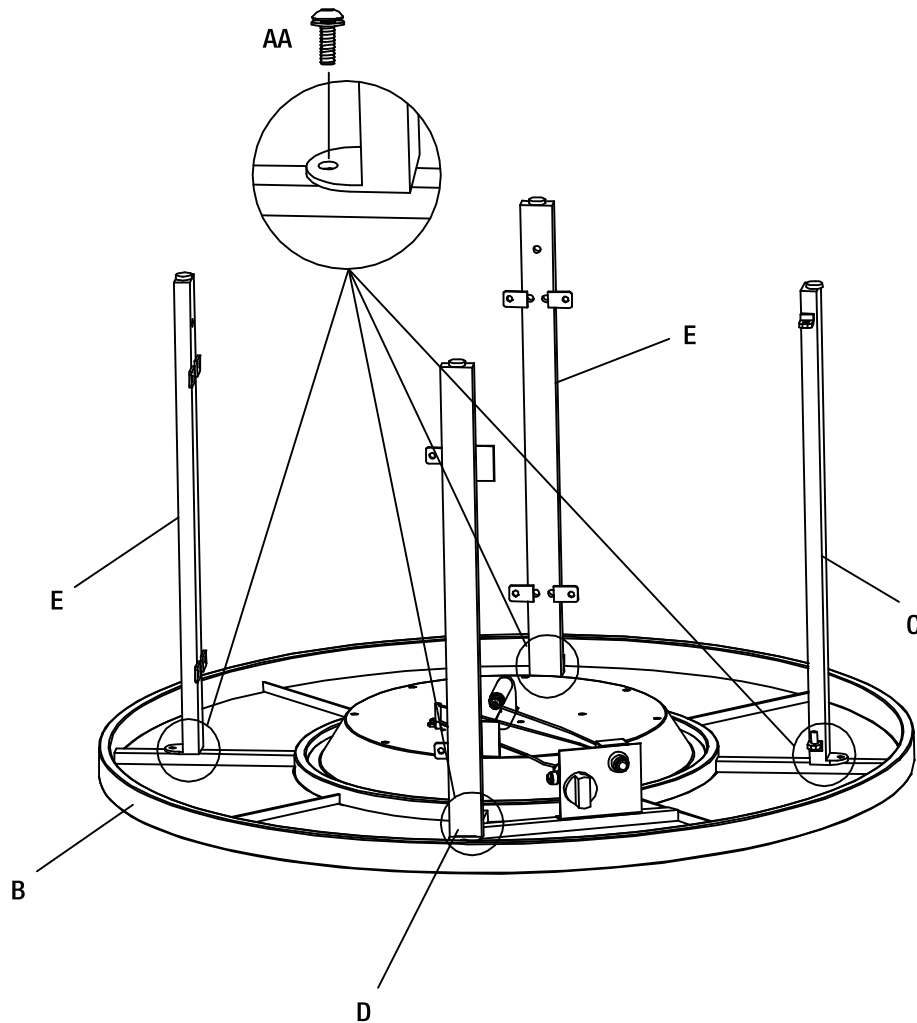


## Assembly (continued)

### 2 CONNECTING THE SIDE PANEL

- Attach the side panel (F) to the table top (B) using M6X15 combination bolts (AA).
- Do not tighten the bolts at this step.

 NOTE: Loosely tighten all the bolts using the hex wrench (EE).

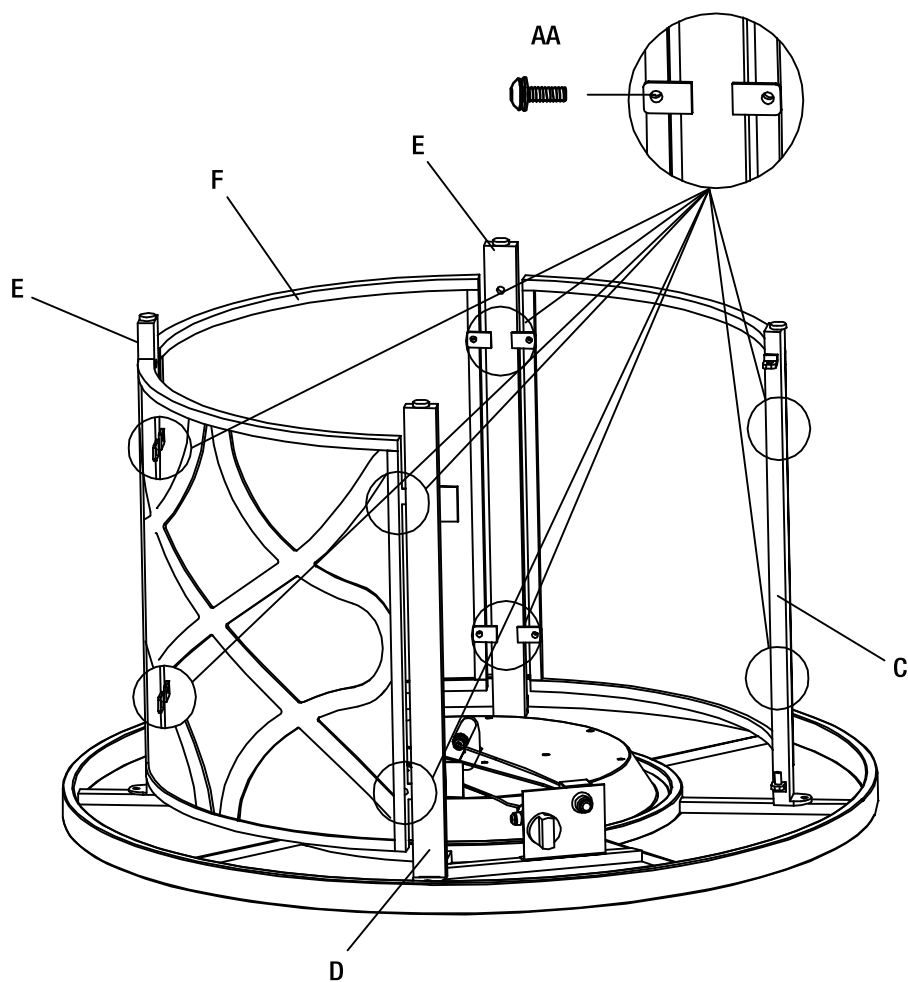


## Assembly (continued)

### 3 CONNECTING THE LIMIT TUBE

- Attach the limit tube (H) to the legs (C&D) using M6X15 combination bolts (AA).
- Do not tighten the bolts at this step.

 NOTE: Loosely tighten all the bolts using the hex wrench (EE).

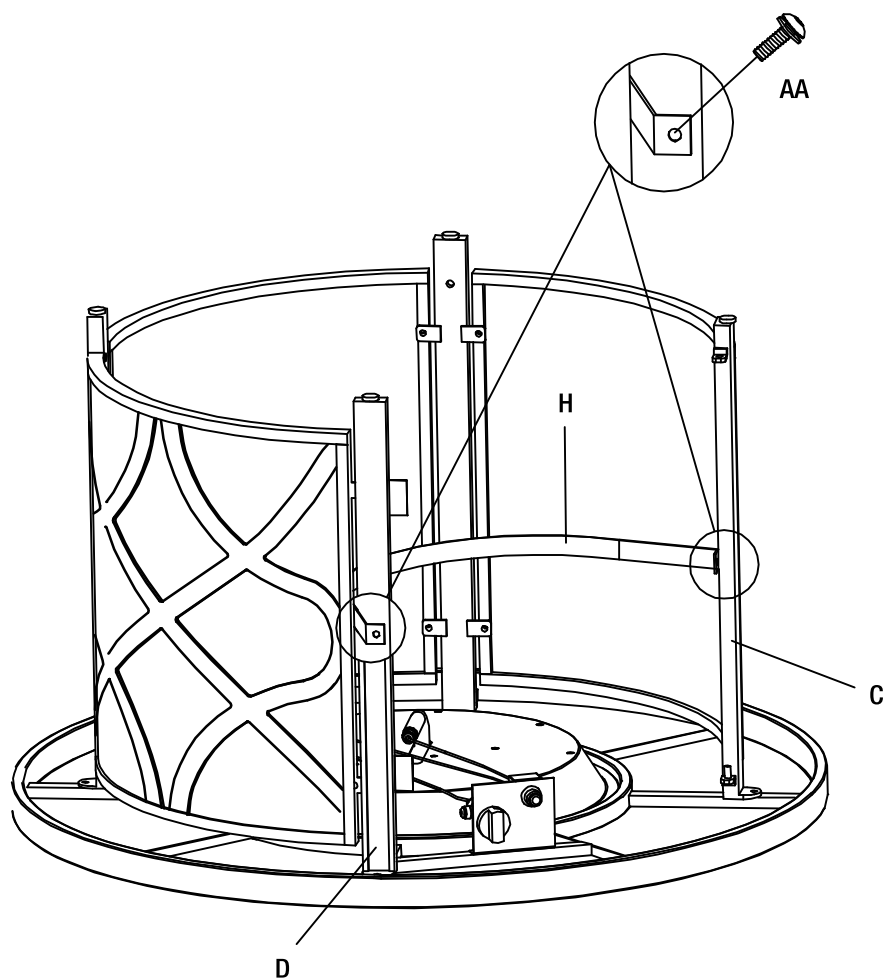


## Assembly (continued)

### 4 CONNECTING THE TANK SUPPORT

- Attach the tank support (I) to the legs (C&D&E) using M6X15 combination bolts (AA).
- Do not tighten the bolts at this step.

 NOTE: Loosely tighten all the bolts using the hex wrench (EE).

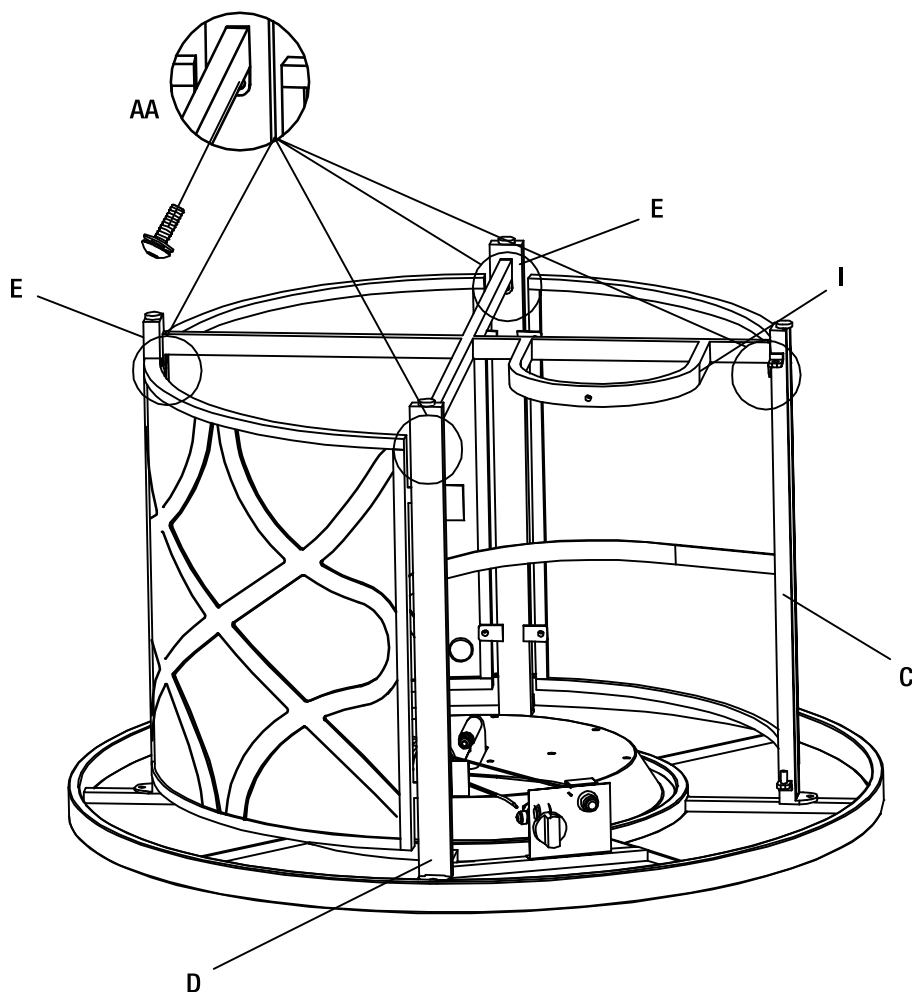


## Assembly (continued)

### 5 CONNECTING THE DOOR

- Attach the door (G) to the leg (C) using an M6X12 countersunk bolt (BB) and plastic washers (CC), as shown below.

 NOTE: Tighten all the bolts using the hex wrench (EE) at this step.

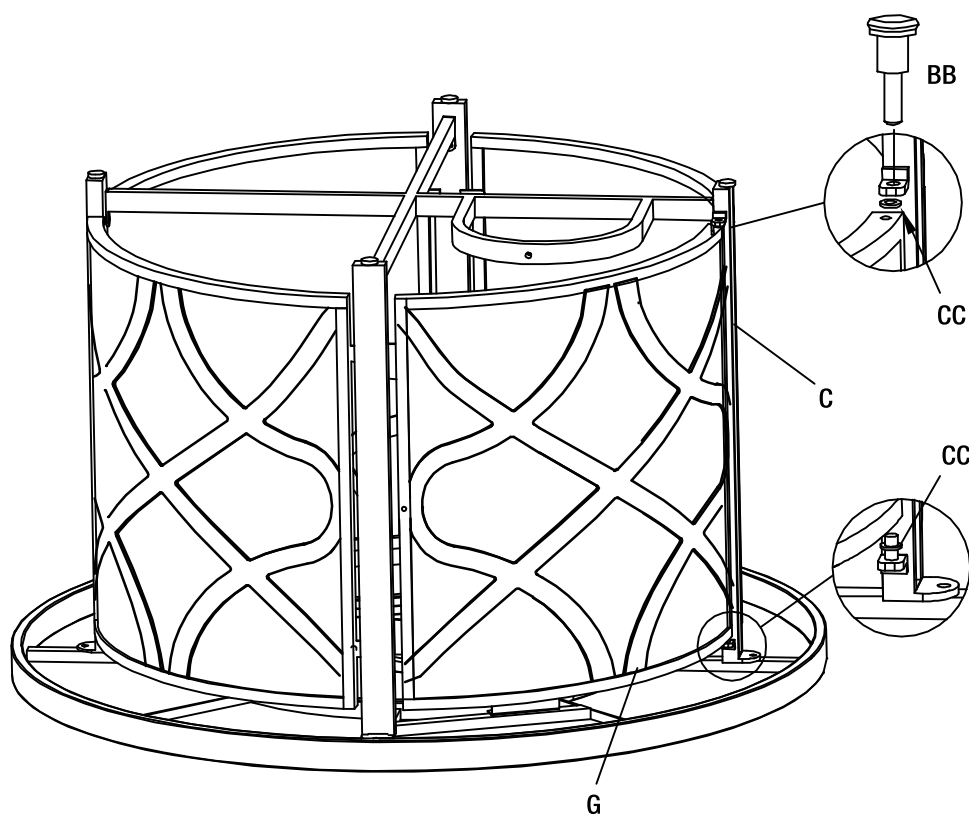




## Assembly (continued)

### 6 ATTACHING THE KNOB TO THE DOOR

 - Attach the knob (DD) to the door (G) as shown below

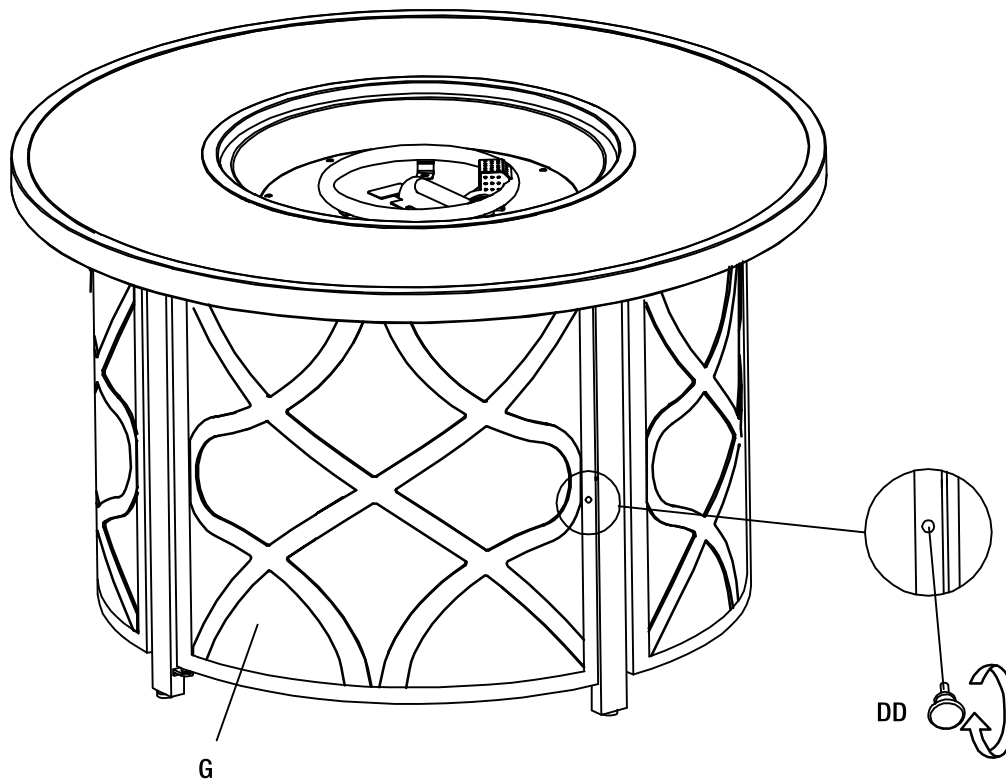



## Assembly (continued)

### 7 CHECKING THE TABLE AND PLACING THE LAVA ROCKS

- Once all of the bolts are in place, fully tighten all the bolts using the hex wrench (EE).
- Turn the assembled fire table right side up and ensure that all connections are secure.
- Place the lava rocks (J) into the burner bowl (K).



  **CAUTION:** To ensure proper function, the screen on the pilot housing should be free of lava rocks

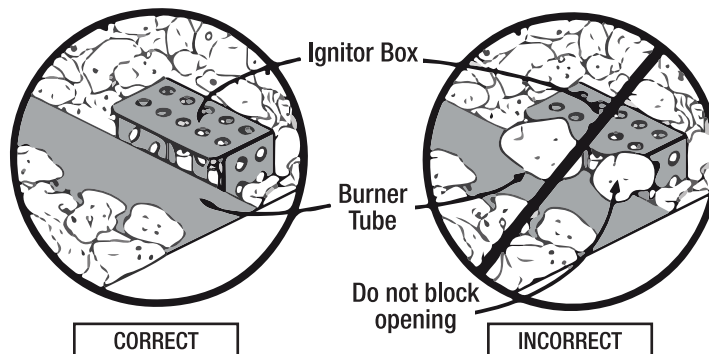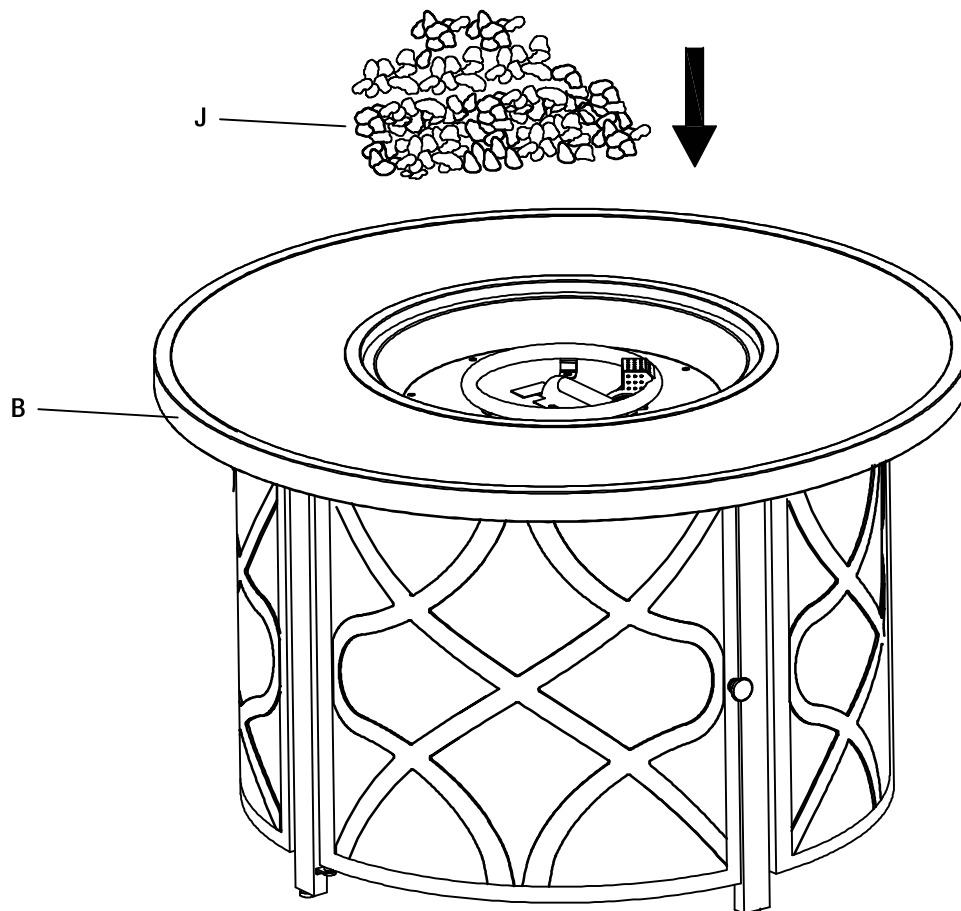


## Assembly (continued)

### 8 PLACING THE BURNER LID

- Place the burner lid (A) over the burner bowl (K).
- Make sure to remove the burner lid before lighting.
- Do not place the lid back onto the burner bowl until it has cooled down.



 Warning: Surfaces on the firepit can remain extremely hot for a period after use. Allow 45 minutes to cool down before touching or moving the firepit.

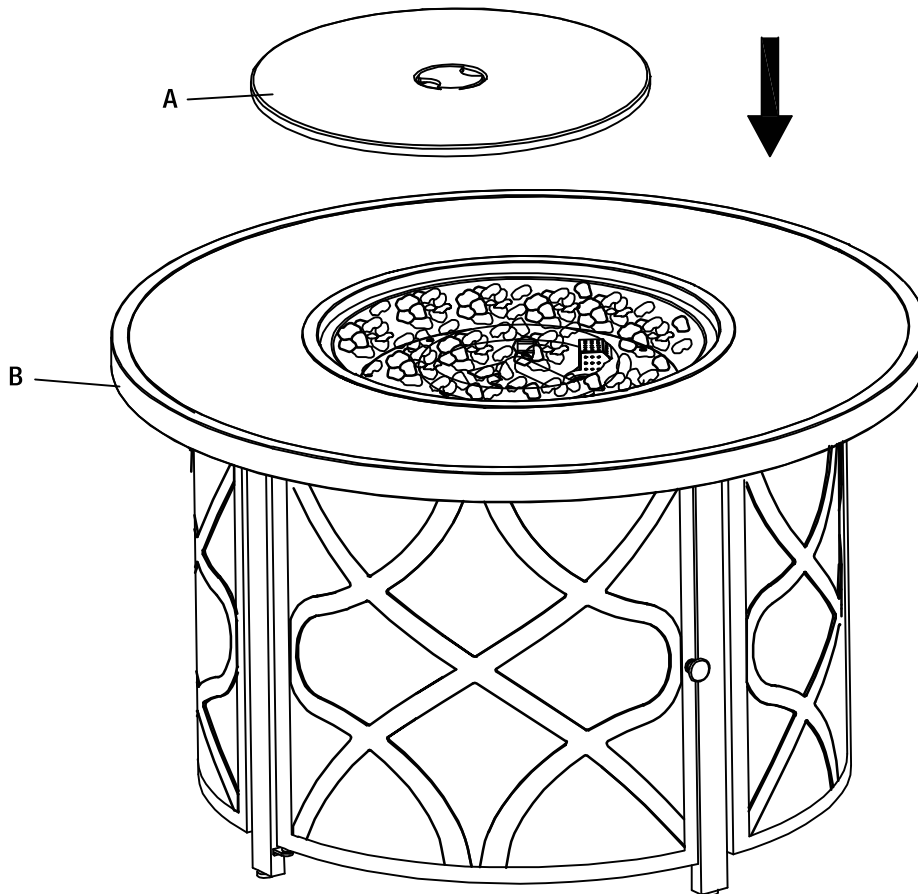


# Operation

## 1 INSERTING THE BATTERY AND CONTROL KNOB

- Insert the AAA battery (FF) and control knob (O) into the manual electric igniter (N) and twist the button cover onto the igniter housing. Do not over tighten.



 CAUTION: Do not put batteries into the fire or trash. Please treat batteries as hazardous waste and recycle properly.

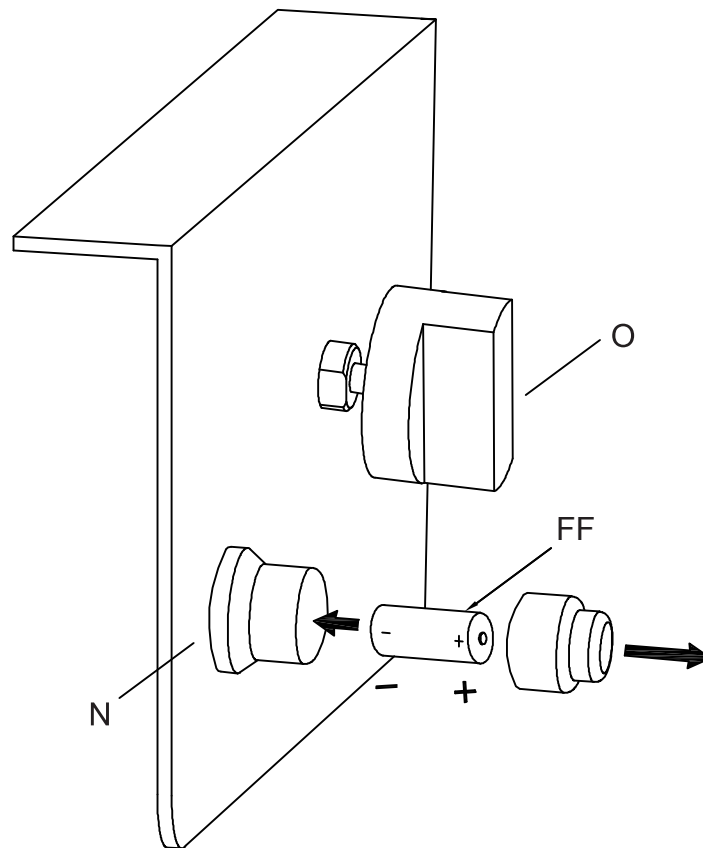





## Operation (continued)

### 2 INSTALLING LP GAS TANK

- To operate, you will need one precision-filled standard grill LP gas tank with external valve threads.
- Loosen the LP gas tank retainer bolt by turning counterclockwise.
- Place the precision-filled LP gas tank upright into the hole in the outdoor fireplace base so the tank valve is facing the gas line connection.
- Secure the tank by turning the LP gas tank retainer bolt clockwise until tight.



    
**CAUTION:** LP gas tank must be properly disconnected and removed prior to moving this outdoor fireplace. Make sure LP gas tank valve is closed.

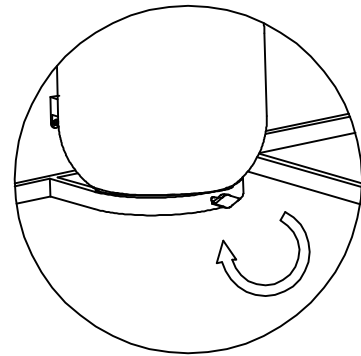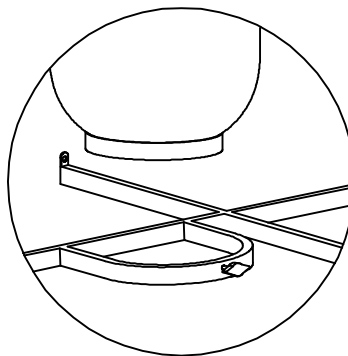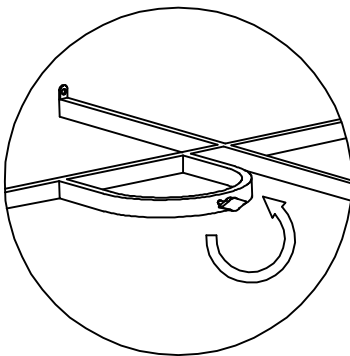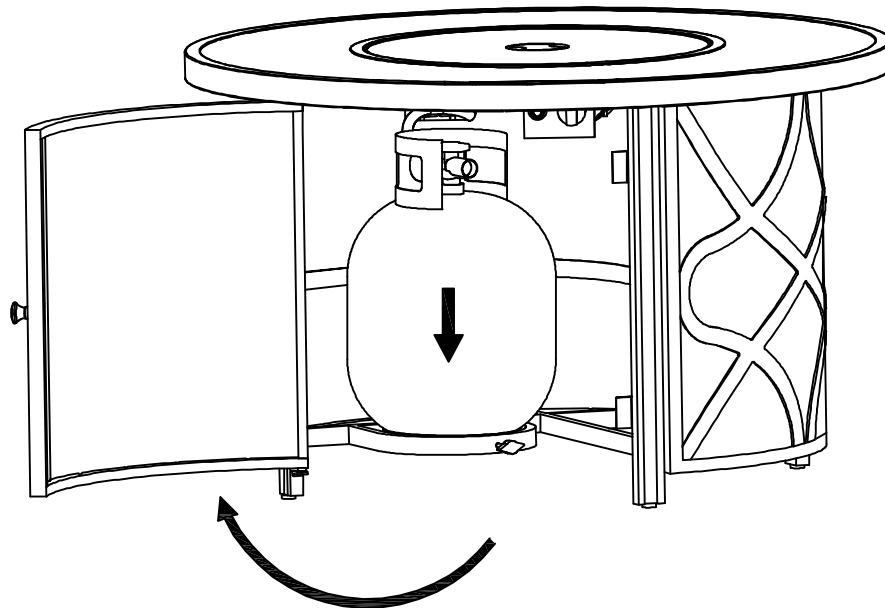

## Operation (continued)

### 3 CONNECTING LP GAS TANK

 - Before connecting, be sure there is no debris caught in the head of the LP gas tank, head of the regulator valve or in the head of the burner ports.
- Connect the regulator/hose assembly to the tank by turning knob clockwise until it stops.

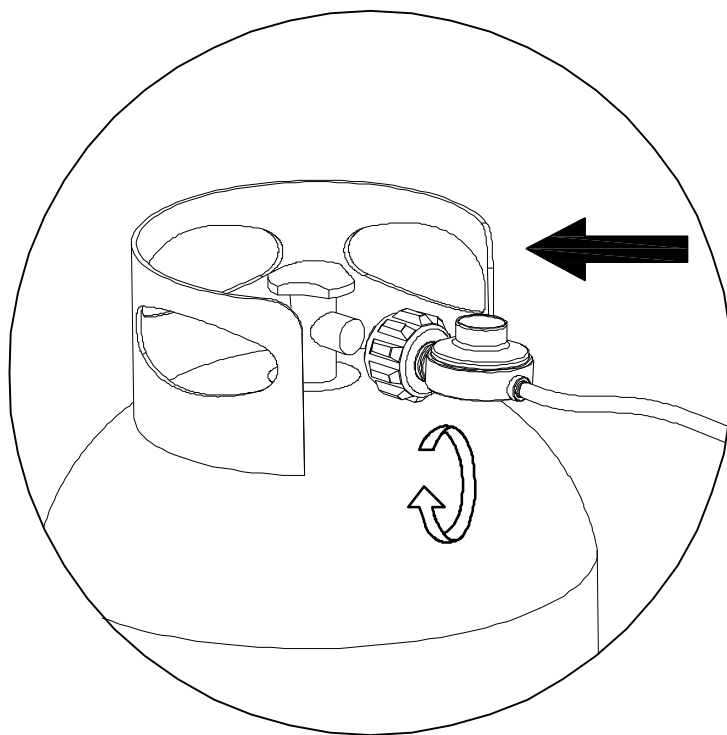


## Operation (continued)

### 4 DISCONNECTING LP GAS TANK

- Before disconnecting make sure the LP gas tank valve is “CLOSED”.
- Disconnect the regulator/hose assembly from the LP gas by turning the knob counterclockwise until it is loose.
- Place the protective cap cover on the LP gas tank and store it outdoors in a well-ventilated area out of direct sunlight.

 NOTE: LP gas tank must be properly disconnected and removed prior to moving this fire table.

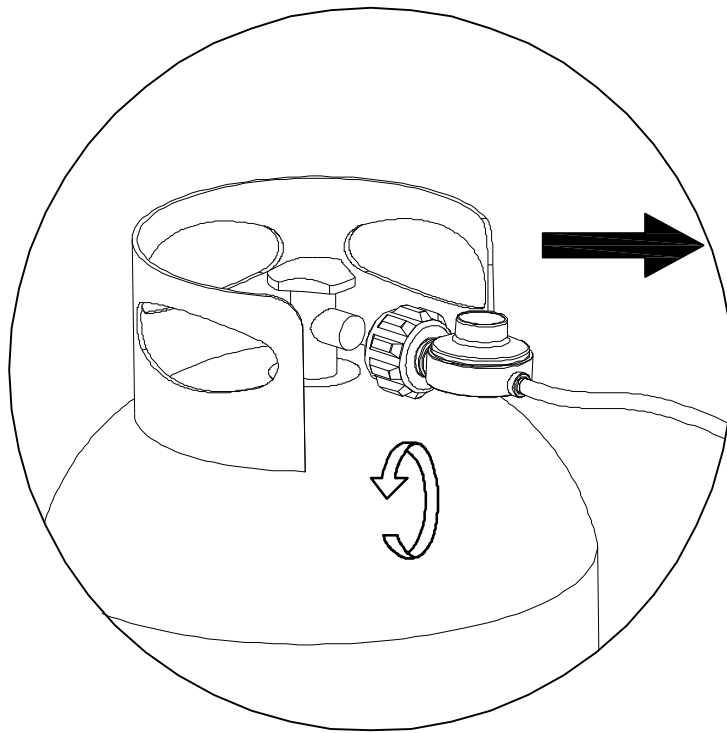



## Operation (continued)

### 5 CHECKING FOR LEAKS AND BURNER CONNECTIONS

- ❑ Before using this outdoor fireplace, make sure you have read, understand and are following all information provided in the “Important Safety Information” section on page 2 to 6.
- ❑ Failure to follow these instructions can lead to serious injury or death or cause property damage.
- ❑ Make sure the regulator/hose and valve connections are securely fastened to the burner and the tank.
- ❑ Visually check the connection between the burner/venturi tube and orifice.
- ❑ Make sure the burner/venturi tube fits over the orifice.
- ❑ Please refer to the figures below for proper installation.



  **CAUTION:** Failure to inspect this connection or follow these instructions could cause a fire or an explosion which can cause death, serious bodily injury or damage to property.

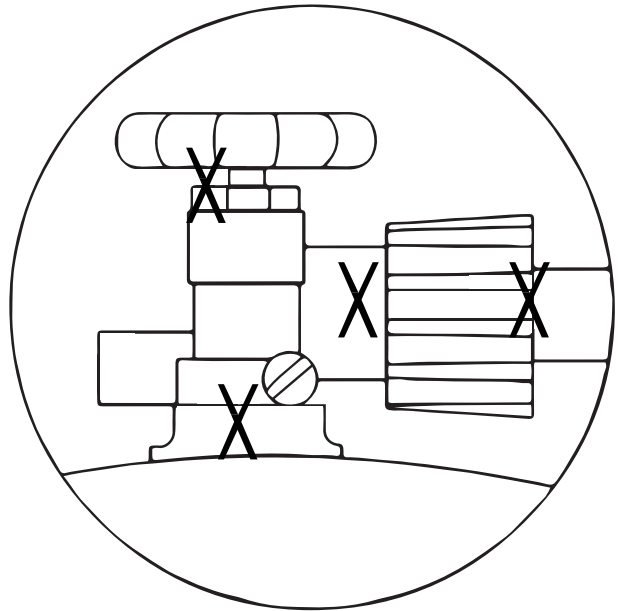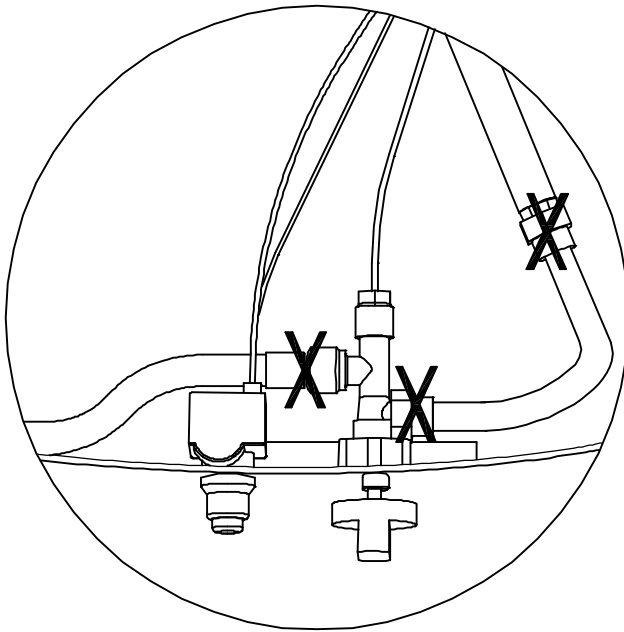




## Operation (continued)

### 6 TANK/GAS LINE CONNECTION LEAK TEST


 
- Make 2-3 oz. of leak detection solution by mixing one part liquid dishwashing soap with three parts water.
- Make sure the switch knob is in the “OFF” position.
- Connect the LP gas tank per “CONNECTING LP GAS TANK” section.
- Turn the LP gas tank valve to “OPEN”.
- Spoon several drops of solution, or use a squirt bottle, at all "X" locations (see figure in step 5).
  - a) If any bubbles appear, turn the LP gas tank valve to “CLOSED”, reconnect and re-test.
  - b) If you continue to see bubbles after several attempts, turn LP gas tank valve to “CLOSED” and disconnect the LP gas tank, per “DISCONNECTING LP GAS TANK”.
  - c) If no bubbles appear after one minute, turn the LP gas tank valve to “CLOSED”, wipe away solution and proceed.

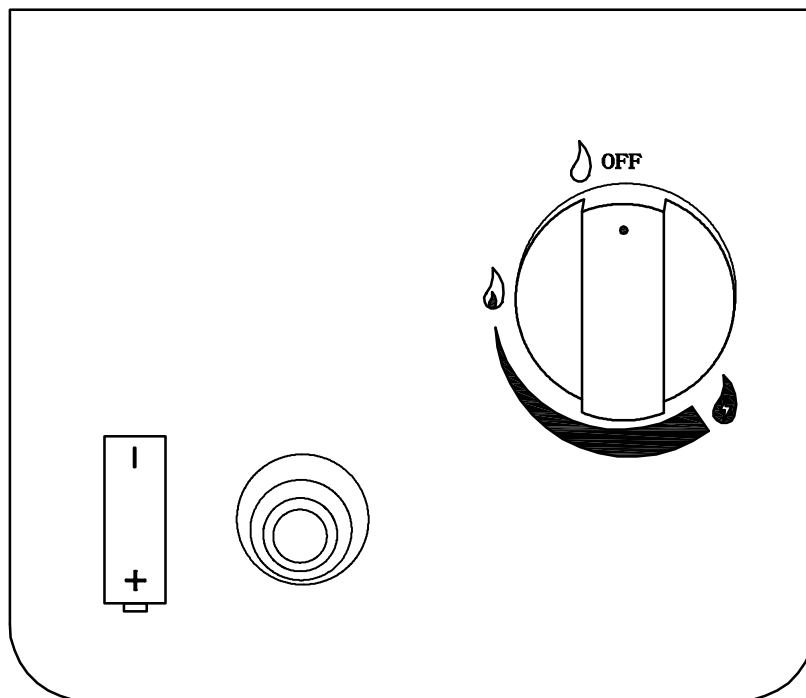

## Operation (continued)

### 7 CLOSING THE DOOR

  - Close the door. Now the fire table is complete and ready to use.

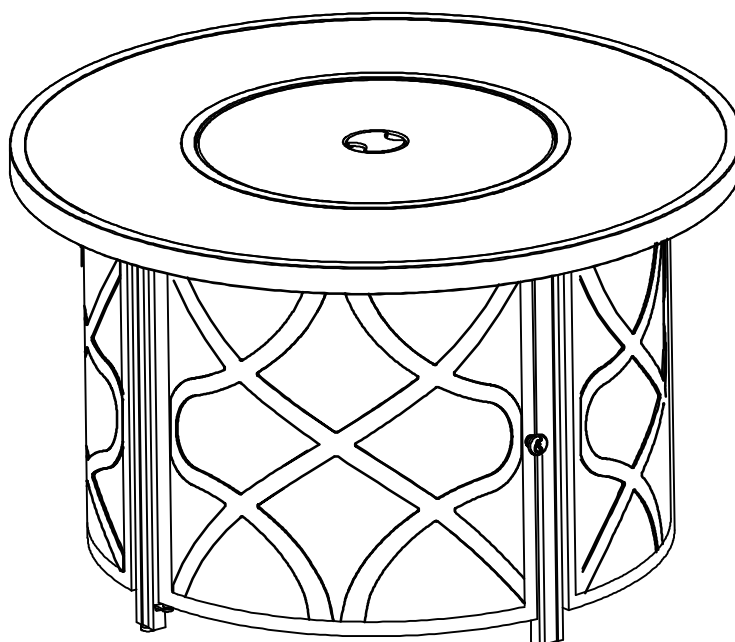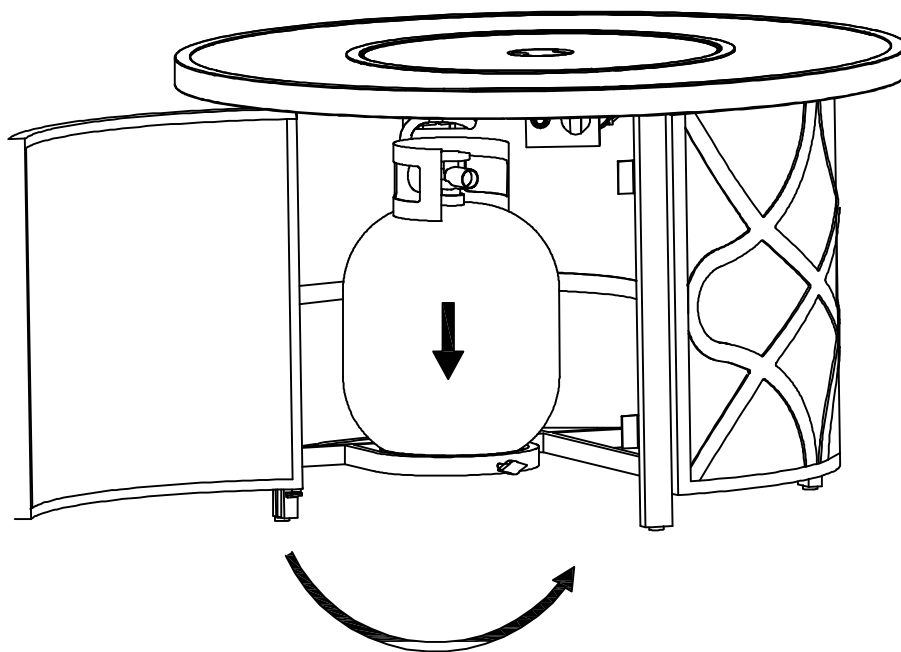

# Operation (continued)



**CAUTION:** Do not put batteries into the fire or trash. Please treat batteries as hazardous waste and recycle properly.



**CAUTION:** Failure to follow these instructions could cause a fire or an explosion which can cause death, serious bodily injury or damage to property.



**WARNING:** NEVER light the burner with the cover on the outdoor fire table.



 
**CAUTION:** Keep outdoor gas appliance area clear and free from combustible materials, gasoline and other flammable vapors and liquids.



**CAUTION:** Do NOT obstruct the flow of combustion and ventilation air.



**CAUTION:** Check and clean burner/venturi tubes for insects and insect nests. A clogged tube can lead to a fire.

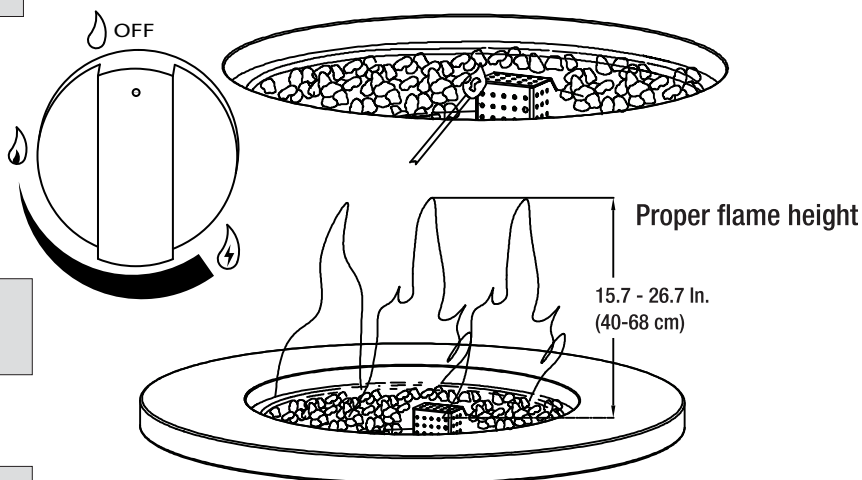

## LIGHTING

1. Make sure all labels, packaging and protective films have been removed from the outdoor fire table.
2. Remove cover and burner lid (if applicable) before operating fire table. Check for obstructions of airflow to the burner. Spiders, insects and webs can clog the burner/venturi tube. A clogged burner tube can lead to a fire.
3. Control knob must be in the "OFF" position.
4. To ensure proper function, the screen on the pilot housing should not be covered by lava rocks.
5. Connect LP gas tank per steps 1 and 2 in the "Operation" section.
6. Turn the LP gas tank valve to "OPEN".
7. Push and hold the flame igniter to create sparks within the electrode; and continue to hold.
8. Push in the control knob and turn to the "ON" position. Keep holding down the control knob to allow gas to flow for 20 seconds.
9. After 20 seconds, release and turn control knob counterclockwise to adjust flame to desired height.
10. If ignition does not occur in 20 seconds turn burner control knob to "OFF", wait five minutes, fan with a newspaper or magazine, and repeat lighting procedure.

# Operation (continued)

## LIGHTING (CONTINUED)

11. If the igniter does not light the burner:
  - a. Wearing heat-resistant gloves, position a long, lit match or long, lit butane lighter near the pilot housing.
  - b. Push and turn control knob to "ON".
  - c. Remove match/lighter once burner is lit.
12. After lighting, observe the burner flame and make sure all burner ports are lit and flame height matches illustration on page 23.



**CAUTION:** If ignition does not occur in 5 seconds, turn the control knob to "OFF", wait 5 minutes, fan with a newspaper or magazine, and repeat lighting procedure.

### Turning off

1. Turn the LP gas tank valve to "CLOSED".
2. Turn the control knob to the "OFF" position.



**NOTE:** A "poof" sound is normal as the last of the LP gas is burned.

3. Disconnect the LP gas tank per "Disconnecting LP Gas Tank" section.



**CAUTION:** NEVER place the cover on a hot outdoor fire table.

### Notices

- ☐ This outdoor fire table should be thoroughly cleaned and inspected on a regular basis.
- ☐ Abrasive cleaners will damage this product.
- ☐ NEVER use oven cleaner to clean any part of this outdoor fire table.

### Before Each Use

1. Ensure the outdoor fire table area is clear and free from any combustible materials, gasoline and other flammable vapors and liquids.
2. Do not obstruct the flow of the combustion of LP gas and the ventilation of air.
3. Keep the ventilation opening(s) of the LP gas tank area free and clear of debris.
4. Visually check the burner flames to make sure your outdoor fire table is working properly.
5. See below for proper cleaning instructions.
6. Check all gas connections for leaks.
7. Check components for any signs of damage or rust.
8. Check for obstructions of airflow to the burner. Spiders, insects and webs can clog the burner/venturi tube. A clogged burner/venturi tube can lead to a fire.
9. If damage to any component is detected, do NOT operate until repairs are completed.

# Care And Maintenance

## Cleaning Surfaces

1. Wipe surfaces clean with mild dishwashing detergent or baking soda mixed with water.
2. For stubborn stains, use a citrus-based cleaner and a nylon scrubbing brush.
3. Rinse clean with water.
4. Allow to air dry.

## Before Storing

1. Turn the LP gas tank valve to “CLOSED”.
2. Turn the control knob to the “OFF” position.



**NOTE:** A “poof” sound is normal as the last of the LP gas is burned.

3. Disconnect the LP gas tank per “Disconnecting LP Gas Tank” section.
4. Clean all surfaces.
5. Lightly coat the burner with cooking oil to prevent excess rusting. **NEVER** place the cover on a hot outdoor fire table.
6. If storing the outdoor fire table indoors, cover the outdoor fire table and store in a cool, dry location away from children and pets.
7. If storing the outdoor fire table outdoors, cover the outdoor fire table with the included cover for protection from the weather.



**CAUTION:** Cover your fire table when not in use to protect it from the elements. We recommend that your fire table be stored indoors during the winter months. It will protect it from cracking in extreme cold. If it must be stored outside, it should **ALWAYS** be covered.

## Cleaning and Care



**CAUTION:** All cleaning and maintenance should be done when outdoor fire table is cool and with the fuel supply disconnected.



**CAUTION:** Do not clean any outdoor fire table part in a self-cleaning oven. The extreme heat will damage the finish.



**CAUTION:** Do not enlarge valve orifices or burner ports when cleaning the valves or burners.

## Replacement Parts

For replacement parts, call our service center at 1-855-HD-HAMPTON.

# Warranty

## 1 YEAR FRAME WARRANTY

### WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for one year.

### WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing, and abusive use. In addition, the purchase parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit [HAMPTONBAY.COM](http://HAMPTONBAY.COM)

# Troubleshooting

Problem	Probable Cause	Solution
The burner will not light using the igniter.	The LP gas tank valve is closed.	Make sure that the regulator is securely attached to the LP gas tank per the "Installing the Gas Tank" section. Then turn the LP gas tank valve to "OPEN."
	The LP gas tank is low or empty.	Exchange, refill or replace the LP gas tank.
	The LP gas leaks.	1. Turn the LP gas tank valve to "CLOSED". 2. Wait 5 minutes for gas to clear. 3. Follow "Checking for Leaks" section.
	The battery needs to be changed.	Replace the "AAA" battery (follow assembly step for inserting battery).
	The electrode and burners are wet.	Wipe the electrode and burners dry with a cloth.
	The electrode is cracked or broken — sparks at crack.	Replacement part(s) may be needed. Contact Customer Care at 1-855-HD-HAMPTON.
	The wire is loose or disconnected.	Replacement part(s) may be needed. Contact Customer Care at 1-855-HD-HAMPTON.
	The wire is shorting (sparking) between igniter and electrode.	Replacement part(s) may be needed. Contact Customer Care at 1-855-HD-HAMPTON.
	The igniter is bad.	Replacement part(s) may be needed. Contact Customer Care at 1-855-HD-HAMPTON.
The burner will not light with a match.	There is no gas flow.	Check to see if the LP gas tank is empty. If the tank is empty, exchange, refill or replace it. If the tank is not empty, refer to "There is a sudden drop in gas flow, or the flame height is reduced." below.
	The LP gas tank is low or empty.	Exchange, refill or replace the LP gas tank.
	There is an LP gas leak.	1. Turn the LP gas tank valve to "CLOSED". 2. Wait 5 minutes for gas to clear. 3. Follow "Checking for Leaks" section.
	The coupling nut and regulator are not fully connected.	Turn the coupling nut about one-half to three-quarters additional turn until there is a solid stop. Tighten by hand only — do NOT use tools.
	There is an obstruction of the gas flow.	1. Clear the burner/venturi tube. 2. Check for bent or kinked hose.
	There is a disengagement of the burner to the valve.	Re-engage the burner and valve.
	Spider webs or insect nests are in the burner/venturi tube.	Clean the burner/venturi tube.
	The burner ports are clogged or blocked.	Clean the burner ports.

# Troubleshooting

There is a sudden drop in gas flow, or the flame height is reduced.	Out of gas.	Exchange, refill or replace the LP gas tank.
	Overfilling prevention device may have been activated.	<ol style="list-style-type: none"> <li>1. Turn the control knob to “OFF”.</li> <li>2. Wait 30 seconds and light outdoor fire table per “Lighting” section.</li> <li>3. If flames are still too low, reset the overfilling prevention device: <ol style="list-style-type: none"> <li>a. Turn the control knob to “OFF”.</li> <li>b. Turn the LP gas tank valve to “CLOSED”.</li> <li>c. Disconnect regulator.</li> <li>d. Turn the control knob to “ON”.</li> <li>e. Wait one minute.</li> <li>f. Turn the control knob to “OFF”.</li> <li>g. Reconnect the regulator and leak check connections, being careful not to fully open valve.</li> <li>h. Light outdoor fire table per “Lighting” section.</li> </ol> </li> </ol>
An irregular flame pattern flame does not run the full length of burner.	No gas flow.	Exchange, refill or replace LP gas tank.
The flame is yellow or orange.	New burner may have residual manufacturing oils.	Burn the outdoor fire table for 15 minutes and reinspect.
	Spider webs or insect nests are in the burner/venturi tube.	Clean the burner/venturi tube.
	Poor alignment of valve to burner/venturi tube.	Ensure the burner/venturi tube is properly engaged with the valve.
The flame goes out.	High or gusting winds.	Do not use the outdoor fire table in high winds.
	Low on LP gas.	Exchange, refill or replace LP gas tank.
	Excess flow valve tripped.	Refer to “Sudden drop in gas flow or reduced flame height”.
There is a flashback (fire in venturi/burner tube(s)).	The burner and/or burner/venturi tube is blocked.	Clean the burner and/or burner/venturi tube.
The flame seems to lose heat when burning in cold weather — temperature below 50°F (10°C).	Ice has built up on the outside of the LP gas tank because the vaporization process is too slow.	<ol style="list-style-type: none"> <li>1. Turn off per “Turning Off” section.</li> <li>2. Replace with a spare LP gas tank.</li> <li>3. Reconnect the LP gas tank per “Installing LP Gas Tank” section.</li> <li>4. Follow “Checking for Leaks” section.</li> <li>5. Light the outdoor fire table per “Lighting” section.</li> </ol>

# HAMPTON BAY<sup>®</sup>

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service.  
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

Retain this manual for future use.