

Instructions & Assembly Guide

Thank you for choosing this Collapsible Foldable Wagon. This guide provides setup, usage, and care instructions to ensure safe and efficient use.

Setup Instructions:

- 1 Unfold the wagon by pulling apart the frame until it locks securely into place.
- 2 Ensure the fabric body is properly attached to the frame and stretched evenly.
- 3 Adjust the handle by rotating it up to 90° and lock it into a comfortable position.
- 4 Check that the wheels and dual bearings move freely before loading items.

Usage Instructions:

- 1 Load items evenly in the wagon, keeping weight balanced to prevent tipping.
- 2 Push or pull the wagon using the adjustable handle, locking it in the proper position.
- 3 Use on soil, grass, bumps, or curbs with caution; keep loads stable during movement.
- 4 When finished, fold the wagon with one hand for compact storage.

Care & Maintenance:

To clean, remove the fabric from the frame and wash or wipe with mild soap and water. Dry completely before reattaching. Store the wagon in a cool, dry place to extend its lifespan.

Warranty:

This product is covered by a 30-day limited warranty from the date of purchase. Defects in material or workmanship under normal use may be eligible for replacement or refund. This warranty does not cover damages caused by misuse, alterations, improper storage, or normal wear and tear.