 




ASSEMBLY INSTRUCTIONS

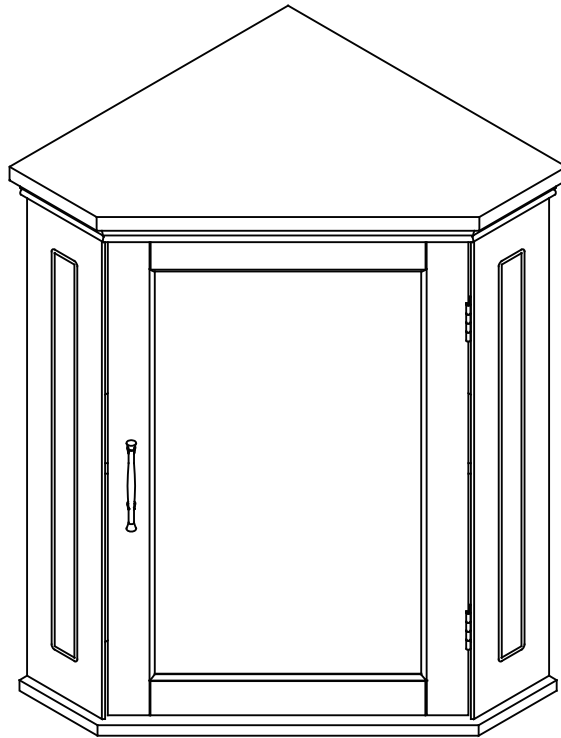

RiverRidge® Somerset Corner Wall Cabinet

ITEM #: 06-138 White

ADULT ASSEMBLY REQUIRED

This product requires assembly by an adult because of small parts. Care should be taken in unpacking and assembling this item to keep small parts away from children. During assembly children should be kept away from the product due to possible risk of injury.

WARNING SEE FULL WARNING ON PAGE 2

Young children can be seriously injured or killed if furniture tips over.
Don't use this item for a TV stand or place heavy objects on top of item.
Always use angle-braces or anchors to secure furniture to the wall.

THIS SHELF UNIT WILL HOLD UP TO 20 POUNDS PER SHELF OR A TOTAL OF 40 POUNDS. DO NOT LOAD EACH SHELF WITH MORE THAN 20 POUNDS OR 40 POUNDS TOTAL WEIGHT. IF OVERLOADED WITH MORE THAN 20 POUNDS PER SHELF OR 40 POUNDS TOTAL WEIGHT, SHELF MAY TIP FROM THE WALL AND CAUSE SERIOUS INJURY OR DEATH.

 


WARNING

**SERIOUS OR FATAL INJURIES CAN
OCCUR FROM FURNITURE TIP-OVER.
TO HELP PREVENT TIP-OVER:**

 



 
 


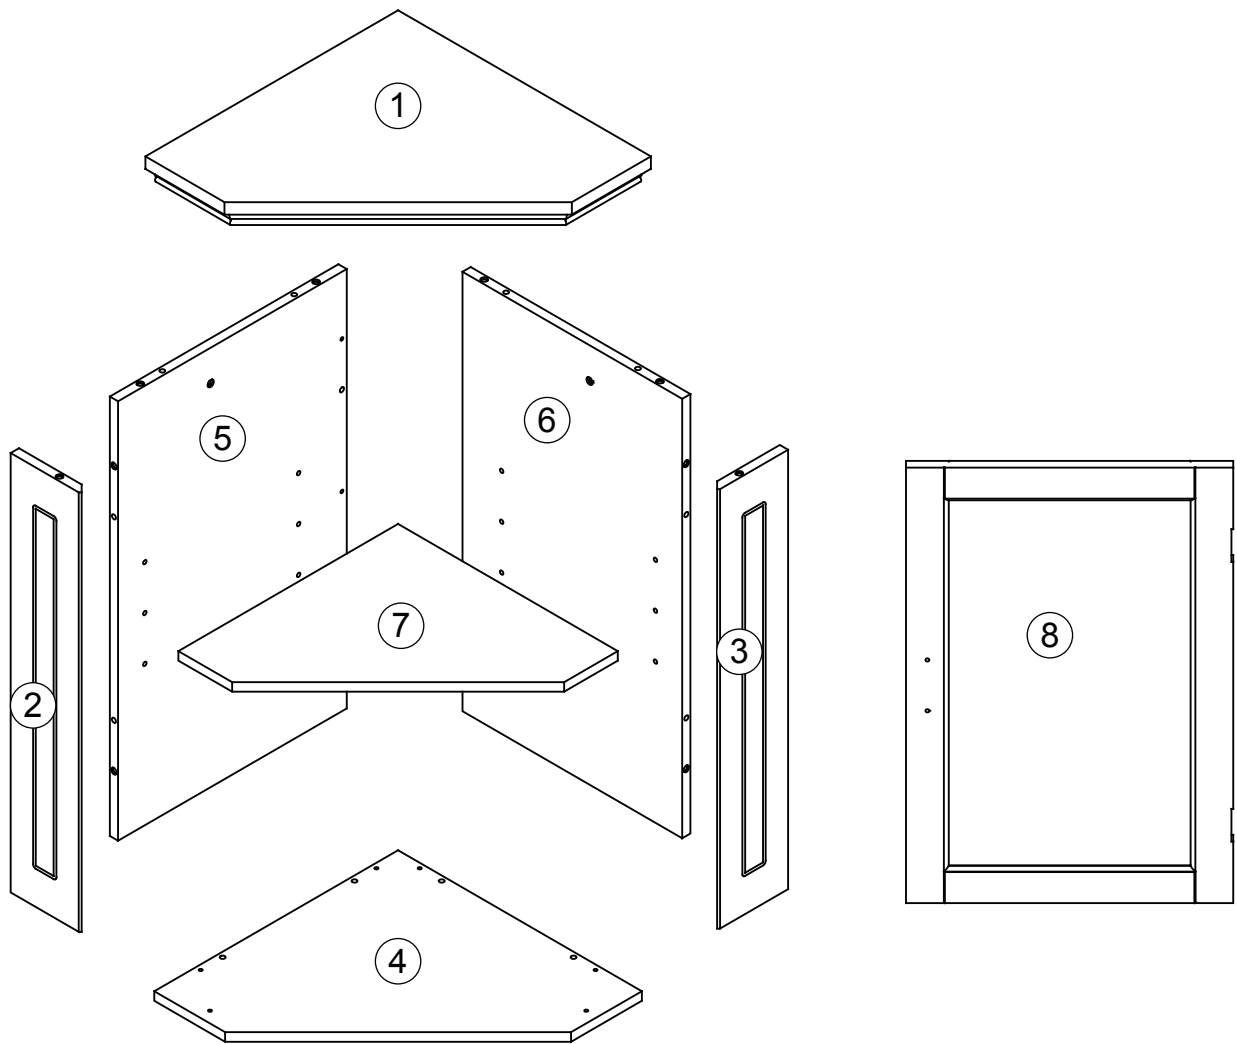




- **Always use tip over restraints and/or wall anchors to secure furniture to the wall**
- **Place heaviest items in the lowest drawers/bins or shelves**
- **Do not set TV's or other heavy objects on the top of this product**
- **Never allow children to climb or hang on to the drawers/bins, doors or shelves of furniture**
- **Never open more than one drawer at a time or defeat or remove any drawer interlock system**

 PARTS LIST



NO	QTY	DESCRIPTION
1	1PC	Top Board
2	1PC	Left Side Panel
3	1PC	Right Side Panel
4	1PC	Bottom Board
5	1PC	Left Side Board
6	1PC	Right Side Board
7	1PC	Adjustable Shelf
8	1PC	Door


PARTS LIST

NO	PARTS	QTY	DESCRIPTION
A		10PCS	Cam Bolt
B		10PCS	Cam Lock
C		14PCS	Wood Dowel
D		2PCS	Hinge
E		9PCS	Screw (3x10mm)
F		2PCS	Machine Screw (4x18mm)
G		1PC	Handle
H		6PCS	Shelf Holder
I		2PCS	Plastic Anchor
J		1 SET	Magnet with 2 Screws
K		1PC	Magnet Plate
L		9PCS	Screw (4x30mm)
M		2PCS	Screw (4x45mm)

**TOOLS NEEDED FOR ASSEMBLY: FLAT & PHILLIPS SCREWDRIVER (NOT INCLUDED)
THE USE OF A POWER SCREWDRIVER IS NOT RECOMMENDED FOR ASSEMBLY
DO NOT USE ITEM IF ANY PARTS ARE MISSING OR DAMAGED**


To order replacement parts at no cost to you, email customer.service@ssi-rr.com, call 1-(844)-223-5201 or order parts online at www.riverridgehome.com. Only valid in the United States.
If purchased outside of the United States, please contact retailer where purchased.

 STEP 1

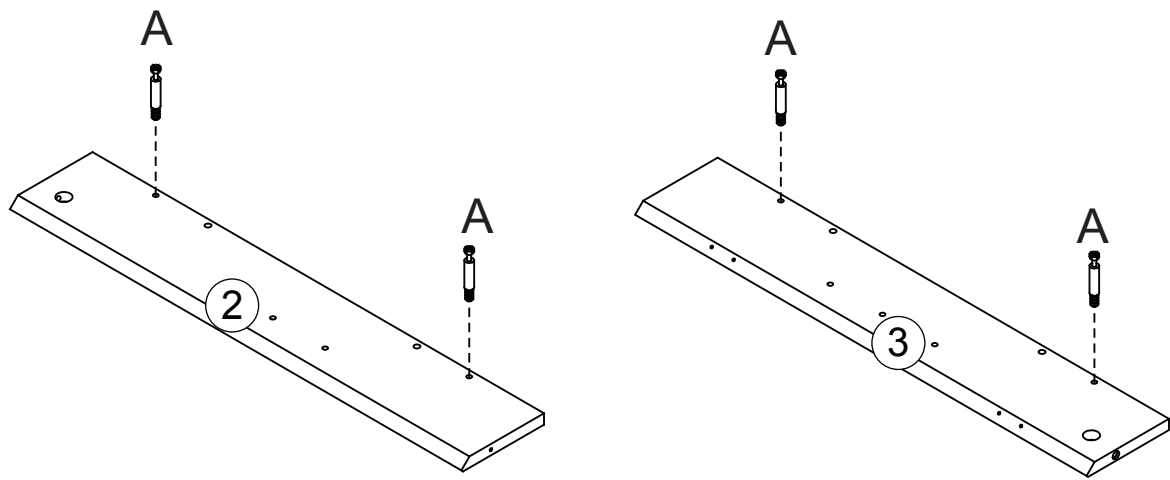


1. Screw 2 cam bolts (A) into cam bolt holes on left side panel (2).
2. Screw 2 cam bolts (A) into cam bolt holes on right side panel (3).

 STEP 2

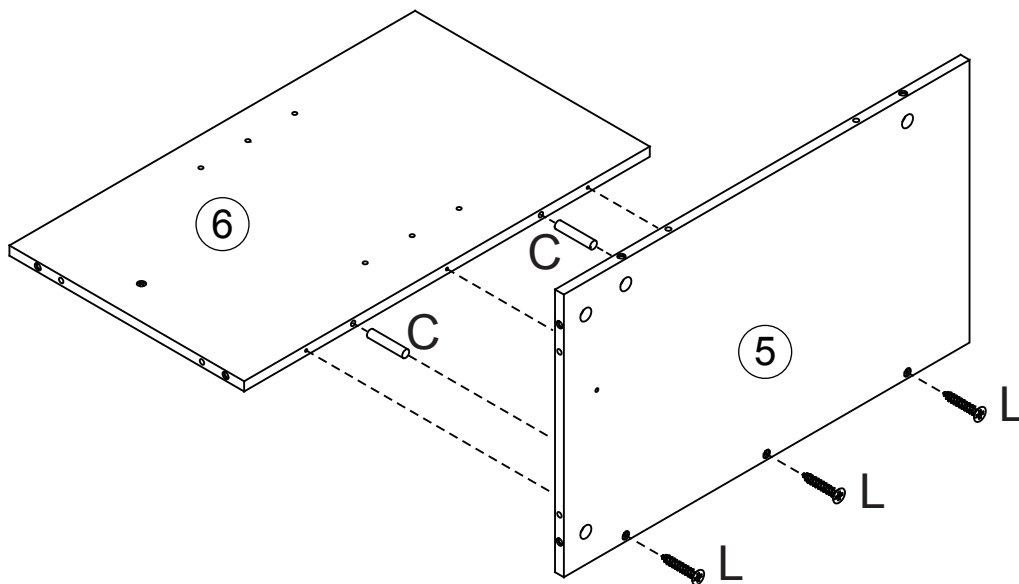


1. Insert 2 wood dowels (C) into wood dowel holes on right side board (6).
2. Attach left side board (5) to right side board (6) by inserting wood dowels (C) into wood dowel holes on left side board (5), then insert 3 screws (L) through holes on left side board (5) and tighten to right side board (6).

 STEP 3

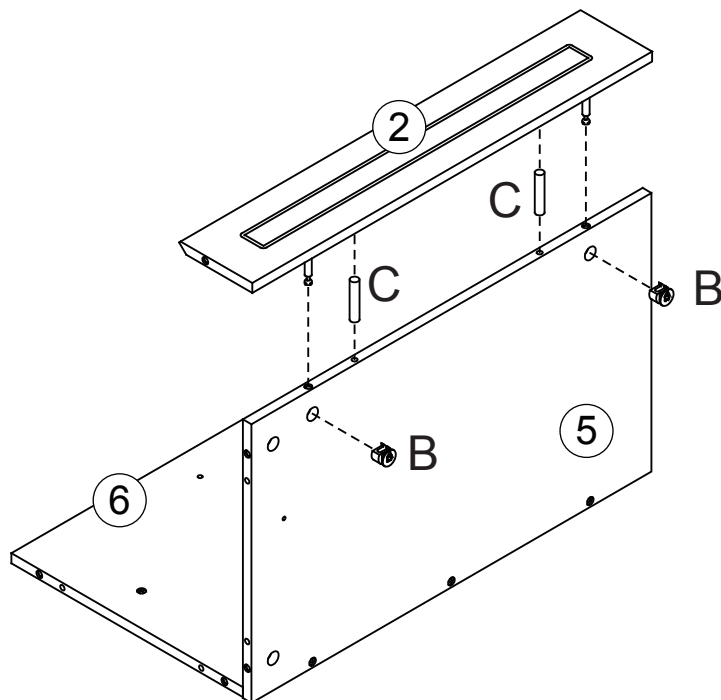


1. Insert 2 wood dowels (C) into wood dowel holes on left side panel (2).
2. Attach left side panel (2) to left side board (5) by inserting wood dowels (C) into wood dowel holes and inserting cam bolts (A) into cam lock holes on left side board (5).
3. Insert 2 cam locks (B) into cam lock holes on left side board (5), then rotate clockwise to secure cam bolts in place.

 STEP 4

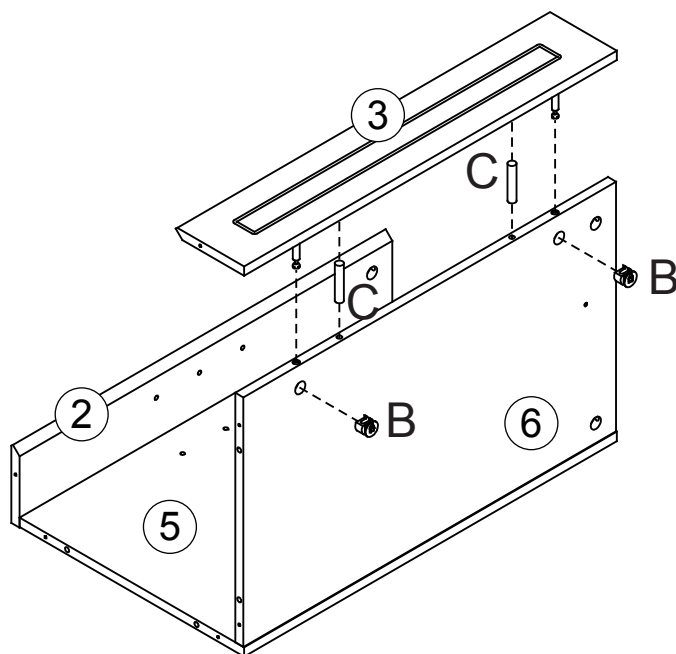


1. Insert 2 wood dowels (C) into wood dowel holes on right side panel (3).
2. Attach right side panel (3) to right side board (6) by inserting wood dowels (C) into wood dowel holes and inserting cam bolts (A) into cam lock holes on right side board (6).
3. Insert 2 cam locks (B) into cam lock holes on right side board (6), then rotate clockwise to secure cam bolts in place.

 STEP 5

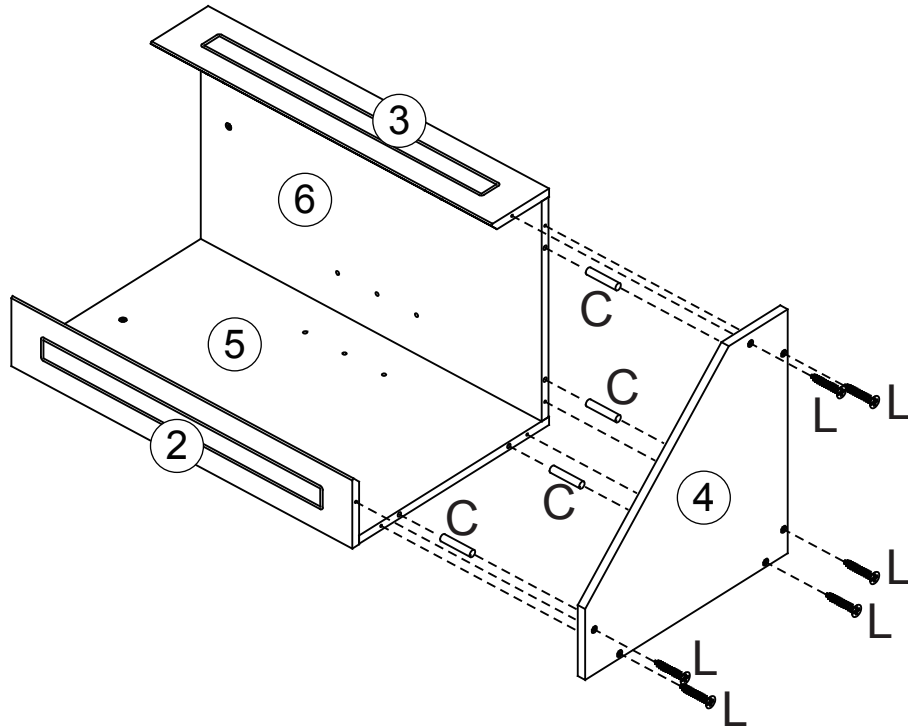


1. Insert 4 wood dowels (C) into wood dowel holes on left side board (5) and right side board (6).
2. Attach bottom board (4) to left side board (5), right side board (6), left side panel (2) and right side panel (3) by inserting wood dowels into wood dowel holes on bottom board (4).
3. Insert 6 screws (L) through holes on bottom board (4), then tighten to left side board (5), right side board (6), left side panel (2) and right side panel (3).

 STEP 6

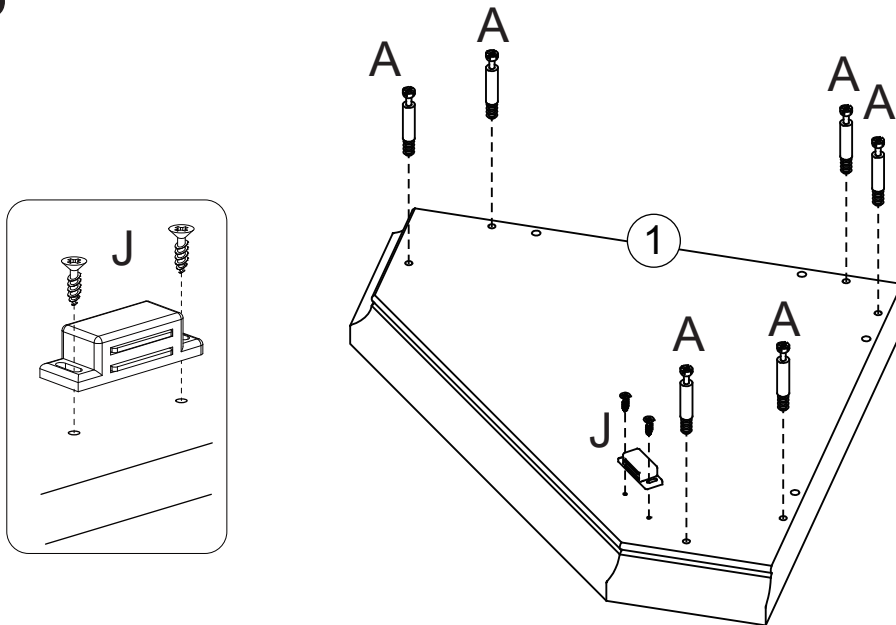


1. Screw 6 cam bolts (A) into cam bolt holes on top board (1).
2. Attach magnet with 2 screws (J) to top board (1) by inserting 2 screws through holes on magnet (J), then tighten to top board (1).

 STEP 7

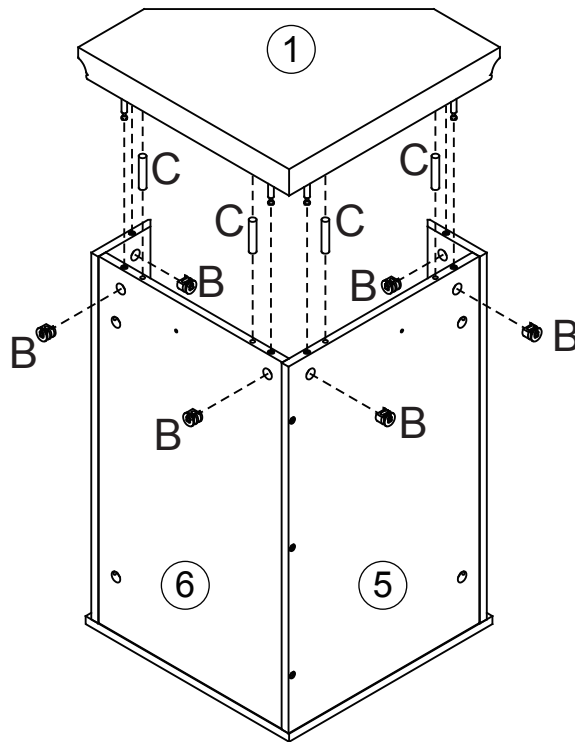


1. Insert 4 wood dowels (C) into wood dowel holes on top board (1).
2. Attach top board (1) to left side board (5), right side board (6), left side panel (2) and right side panel (3) by inserting wood dowels (C) into wood dowel holes and inserting cam bolts (A) into cam lock holes on left side board (5), right side board (6), left side panel (2) and right side panel (3).
3. Insert 2 cam locks (B) into cam lock holes on left side board (5), 2 cam locks (B) into cam lock holes on right side board (6), 1 cam lock (B) into cam lock hole on left side panel (2) and 1 cam lock (B) into cam lock hole on right side panel (3), then rotate clockwise to secure cam bolts in place.

 STEP 8

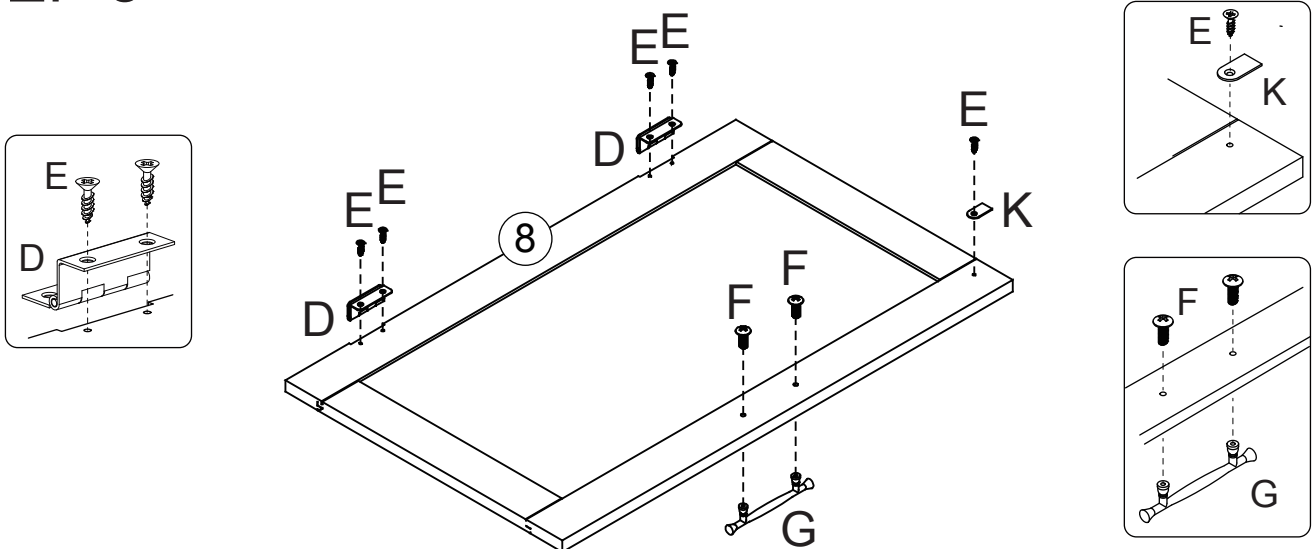



1. Attach 2 hinges (D) to door (8) by inserting 4 screws (E) through holes on 2 hinges (D), then tighten to door (8).
2. Attach magnet plate (K) to door (8) by inserting 1 screw (E) through hole on magnet plate (K), then tighten to door (8).
3. Attach handle (G) to door (8) by inserting 2 machine screws (F) through holes on door (8), then tighten to handle (G).

 STEP 9

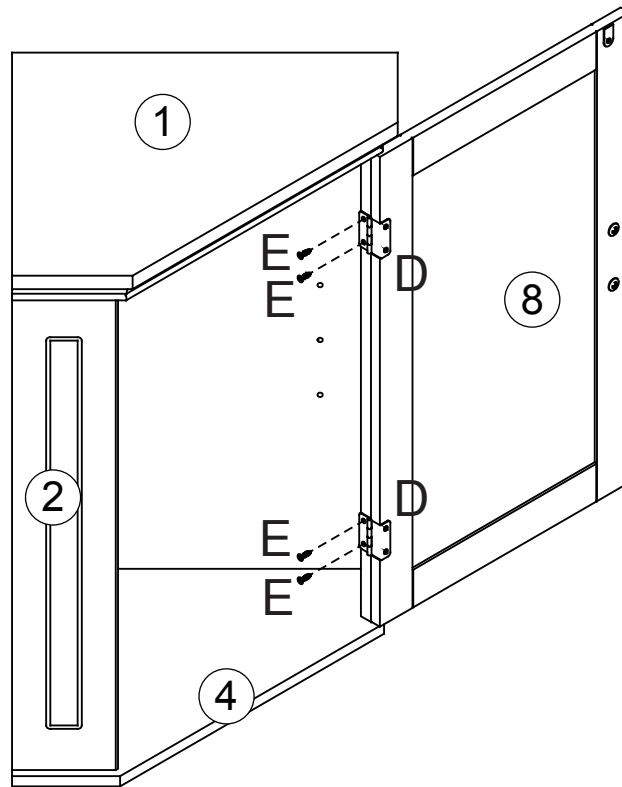


1. Attach door (8) to right side panel (3) by inserting 4 screws (E) through the holes on hinges (D), then tighten to right side panel (3).

  STEP 10

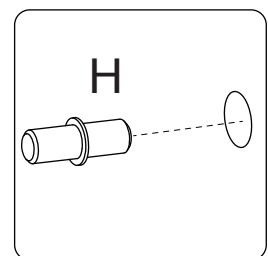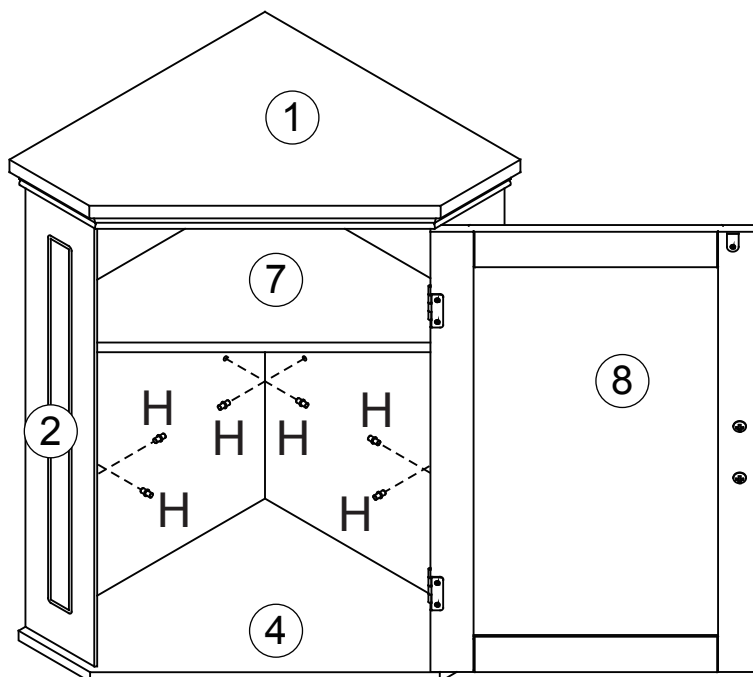


1. Insert 6 shelf holders (H) into holes on left side board (5), right side board (6), left side panel (2) and right side panel (3). Make sure 6 shelf holders (H) are at same level.
2. Place adjustable shelf (7) onto shelf holders (H).


 
STEP 11

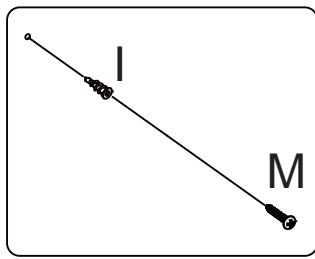

OPTION #1

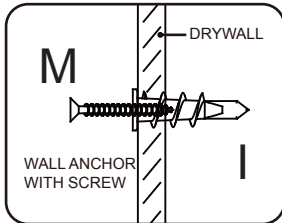 

OPTION #2

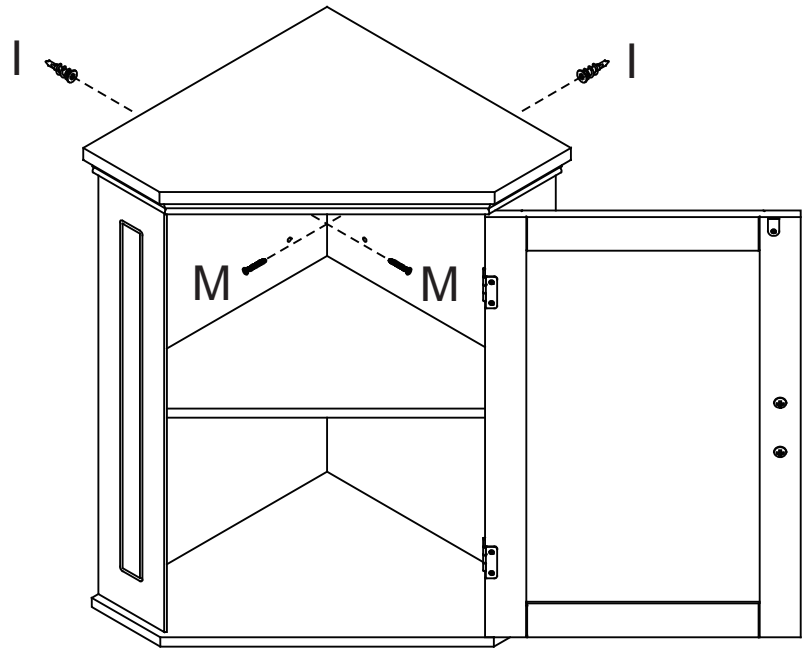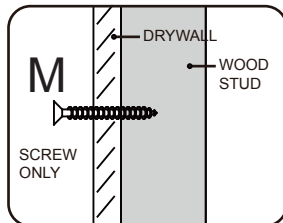  

Option #1: Securing to Drywall

1. Position cabinet against wall in desired location. Using a pencil make 2 small marks on wall through holes on left side board (5) and right side board (6). Move cabinet away from wall and screw 2 plastic anchors (I) into wall on pencil marks.
2. Place cabinet against wall, insert 2 screws (M) through holes on left side board (5) and right side board (6), then tighten to plastic anchors (I).

Option #2: Securing to Drywall and Wood Stud

1. Position cabinet against wall in desired location. Insert 2 screws (M) through holes on left side board (5) and right side board (6), then tighten through drywall and into wood stud.

ATTENTION ADULTS: Cabinet should be checked periodically for damage or loose screws/parts. Take appropriate action necessary to correct hazards such as tightening of screws and taking any damaged parts away from children.

WARNING  Please make sure your item is secured to the wall, per assembly instructions.

 
CARE INSTRUCTIONS:

Wipe clean with a water dampened cloth. Wipe dry with clean cloth.

IMPORTANT:

Keep assembly instructions for future reference.

Enjoy your new RiverRidge® Cabinet!

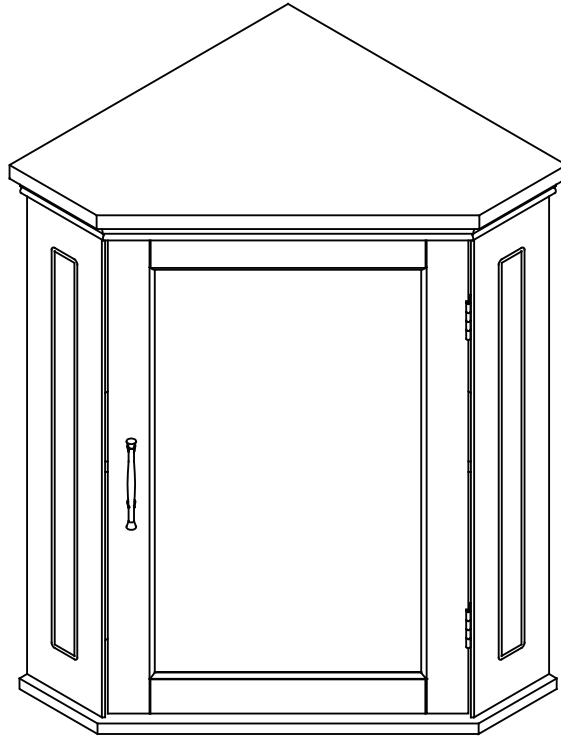

Thank you for purchasing this RiverRidge® Home item. We hope you enjoy it and consider purchasing other RiverRidge® items.

To order replacement parts at no cost to you, email customer.service@ssi-rr.com, call 1-(844)-223-5201 or order parts online at www.riverridgehome.com. Only valid in the United States. If purchased outside of the United States, please contact retailer where purchased.



RiverRidge® is a registered trademark of Sourcing Solutions, Inc., Hudson, WI 54016