


## **USE AND CARE GUIDE**

#### **TABLE**

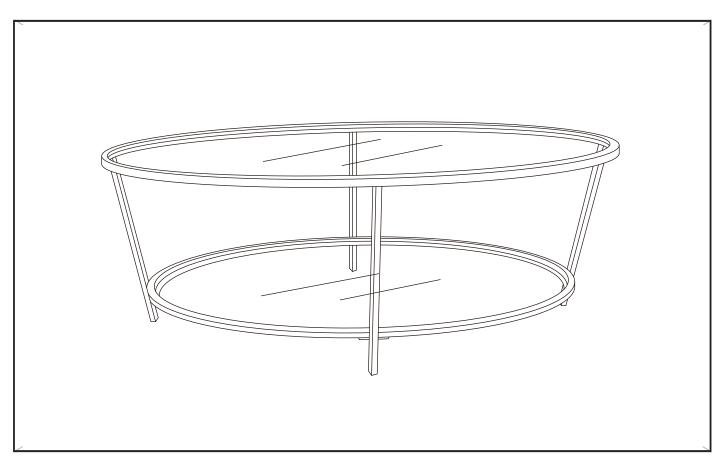

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service.

8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-986-3460

#### HOMEDEPOT.COM/HOMEDECORATORS

#### THANK YOU

### Table of Contents

Table of Contents	2
Warranty	e of Contents 2 by Information 2 anty 2 fear Warranty 2 nat is Covered 2 nat is Not Covered 2 assembly 3 anning Assembly 3 anning Assembly 3
What is Covered	2
What is Not Covered	2
Pre-assembly	3
Hardware Included	3

Pre-assembly (continued)	4
Package Contents	4
Assembly	5
re-assembly (continued)       4         Package Contents       4         ssembly       5         ssembly       6         aintenance       7         are and Cleaning       7	

### **Safety Information**



#### DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



#### **WARNING**

- Read these instructions carefully and keep in a safe place.
- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.
- Do not stand, step or climb on unit.



### **CAUTION**

- Do not use power tools to assemble your item.
- Power tools may strip or damage parts/product.
- Do not over tighten connectors (screws, bolts, etc.)
   Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- □ This product should only be used on a flat, level surface.
- Product is designed to hold 20 lbs. Exceeding this limit may damage the product or cause injury to the user.

### **Warranty**

#### **3 YEAR WARRANTY**

#### WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for three years.

#### WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

## **Pre-assembly**

#### **PLANNING ASSEMBLY**

Keep children and pets away from the assembly area. Ensure your area is large enough to unpack, sort, and assemble the unit.

#### **HARDWARE INCLUDED**






Part	Description	Quantity
AA	Bolt	12
BB	Allen wrench	1
CC	Glass bumper	8

# **Pre-assembly (continued)**

### **PACKAGE CONTENTS**

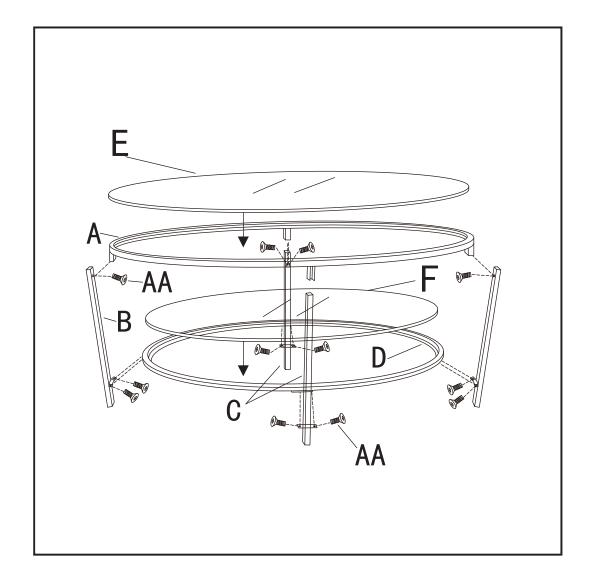

Part	Description	Quantity
Α	Metal top frame	1
В	Metal legs for 2 sides	2
С	Metal legs for another 2 sides	2
D	Metal bottom frame	1
E	Top glass panel	1
F	Bottom glass panel	1


## **Assembly**


## **1** Attaching four metal legs

Attach four metal legs (B) and (C) to the top frame (A) with bolts (AA).

# 2 Attaching the metal bottom frame

 $\hfill\Box$  Attach bottom frame (D) to the four legs (B) and (C) with bolts (AA).

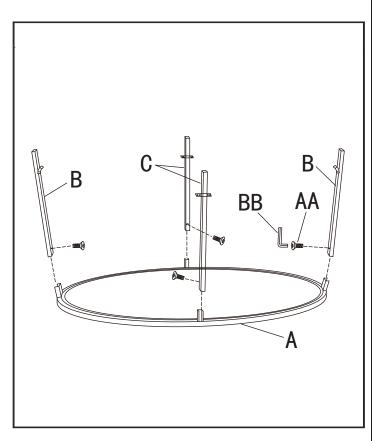

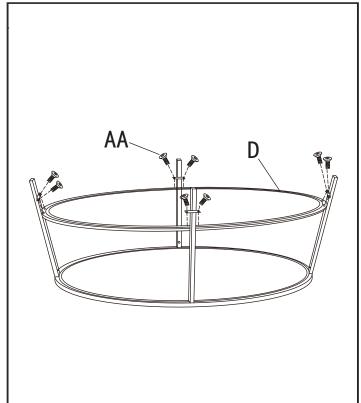

# **Assembly (continued)**


## **3** Attaching glass bumper


 Attach four glass bumpers (CC) to each level of the frame assembly.

# 4

### Placing the glass panel

 Place the glass panels (E) and (F) onto each level of the assembly.

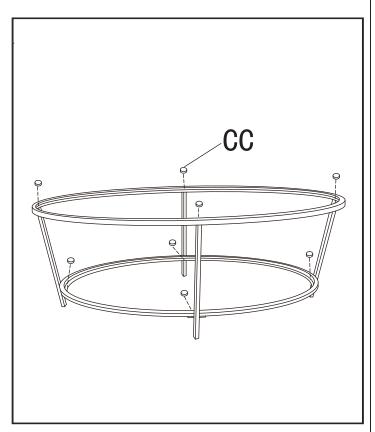

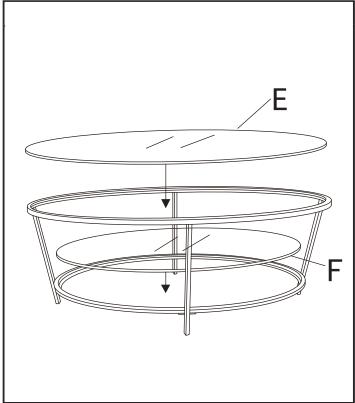

### **Maintenance**

Blot spills immediately. Spot clean with a damp cloth and mild detergent.

## **Care and Cleaning**

- For best results, clean with a damp cloth and dry thoroughly.



Questions, problems, missing parts?

Before returning to the store, call Home Decorators Collection Customer Service.

8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-986-3460

#### HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.